


QUICK START GUIDE


DESCRIPTION OF THE MACHINE

- 1- Upper Tray
- 2- Detergent Drawer
- 3- Programme Knob
- 4- Electronic Display
- 5- Door
- 6- Pump Filter Cover

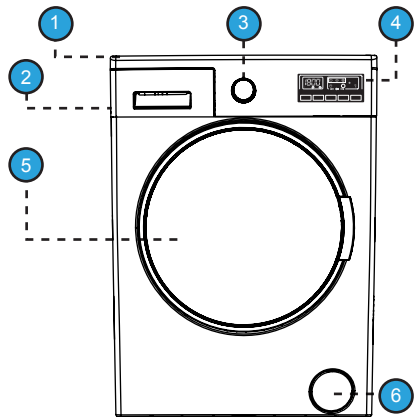

WASHING


- Connect the washing machine to a power socket.
- Open the water supply.

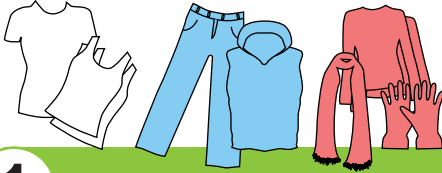

1 Separating Laundry

Separate your laundry according to the types (cotton, synthetic, sensitive, woollen, etc.), recommended temperature, (cold, 30°, 40°, 60°, 90°) and degree of contamination (slightly stained, stained, highly stained).


2 Placing Laundry Into The Washing Machine

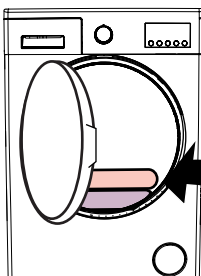


Open the door of your machine. Place your laundry in your machine.

3 Putting Detergent Into The Washing Machine

- 1- Pre-washing compartment
- 2- Main washing compartment
- 3- Softener compartment

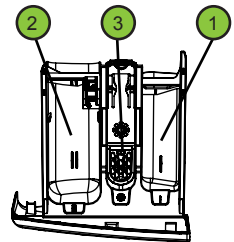

4 Programme Selection (*)

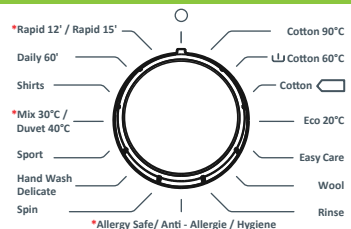




You can select the programme you would like by rotating the dial to the required position. The dial can be rotated in either direction. Ensure the dial is exactly set to the desired programme.

Note: Read the user manual for detailed information. (*) Washing programs and names may vary depending on your machine model.


QUICK START GUIDE

5 Electronic Display (*)


On the electronic display, you can see the washing water temperature, spin speed of your machine, when your machine will finish washing, the auxiliary functions you have selected and the progress of the selected programme. ( prewash/wash,  rinsing,  spinning). Additionally, the display will show error codes if a problem is detected, and "END" on completion of the cycle.

- 1- Digital Display
- 2- Water Temperature Adjustment Button
- 3- Spin Speed Adjustment Button
- 4- Delayed Start Auxiliary Function
- 5- Auxiliary Function Button
- 6- Start / Pause Button
- 7- Auxiliary Function Symbol
- 8- Function Display
- 9- Wash Level Display
- 10- Electronic Display

(*) Auxiliary functions vary depending on the model of your machine.

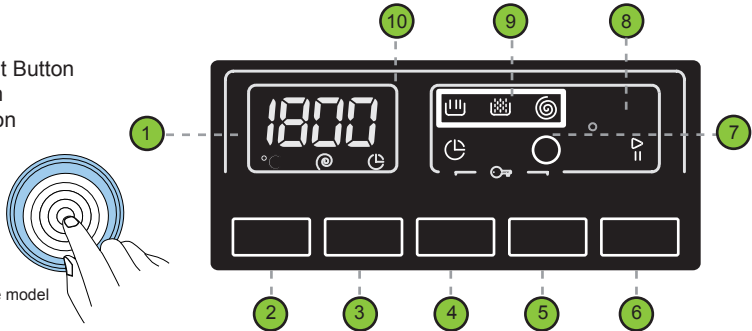


6 Operating Your Machine

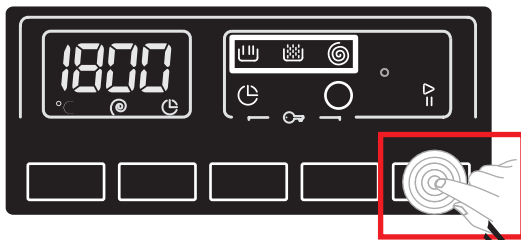

By pressing Start/Pause button, you may start a program or pause it during operation.

7 Removing Laundry

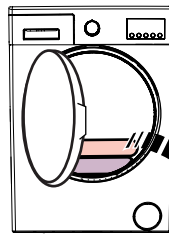

- After a program is completed, the washing machine will turn off automatically.
- "END" will appear on the display.
- Open the washing machine door and remove the laundry. The door will open approximate 2 mins after the programme ends.

8 Maintenance



1- It is recommended that you clean your pump filter once every 2 months.



2- It is recommended that you clean your detergent drawer once every 2 months.



3- It is recommended that you clean your the filters on your water inlet valves once every 2 months.



If washing machine does not start to spin, it means, the unbalanced load control system has been activated. The unbalanced load control system will try to spread your washing evenly to prevent damage to your machine. Once completed, the full spinning operation will start.