

# Dishwasher Quick Reference Guide - LAM8676

Register my appliance ✓

[www.howdens.com/appliance-registration](http://www.howdens.com/appliance-registration)

Please register your appliance today so you can be contacted easily in the event of important product updates.

 
 
 
1. Scrape all food waste and debris from plates.



Do not pre-rinse.



2. Load dishwasher as shown.

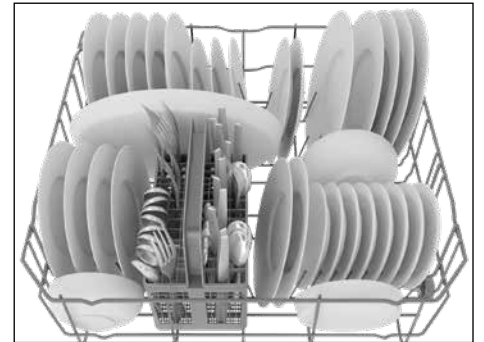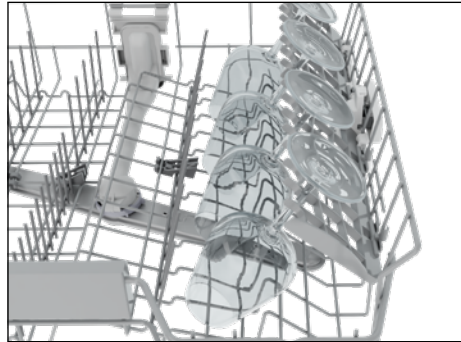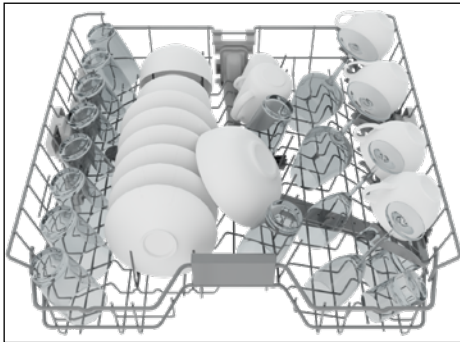

3. Add detergent - powder or tablet.



4. Turn on and select programme.



5. Check salt and rinse aid - refill if necessary.




6. Select option(s) as required.



7. Press Start key then close door to start programme.

# Controls

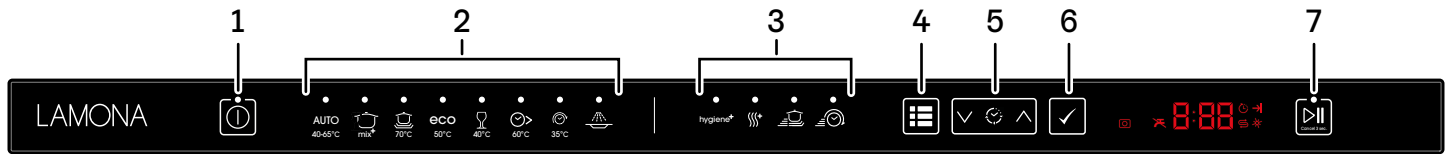 

## 1. Power On/Off

Display illuminates when the power is **On**.  
For energy saving, the machine automatically turns off following the completion of the programme or if the programme is not started.

## 2. Programme Selection Keys

Press the desired programme.  
The programme will start when the dishwasher door is closed.

## 3. Function Keys

hygiene+ **Hygiene** - Increases the washing and rinsing temperatures to provide additional hygiene.

☺+ **Extra Dry** - Extra drying period at the end of a programme.

☺ **Turbo Wash** - Utilises additional spray arm, boosting water pressure and reducing time.

☺ **Fast Wash** - Decreases the duration of the programme. Uses higher water pressure and more water.

**Note:** Not all functions are available to all programmes.

## 4. Menu Selection

Press to enter the dishwasher settings

## 5. Time Delay Selection / Menu Direction

Toggle up or down to select the required time delay or menu settings.

## 6. Selection / Confirmation Key

 
Confirm dishwasher settings .

## 7. Start / Pause / Cancel Key

Illuminates when selected to begin programme.

To cancel a running programme;

- Open the dishwasher door
- Hold for 3 seconds, (countdown 3-2-1), until 0:01 is displayed.
- Close the dishwasher door.
- Wait for 1 minute until the draining process is completed and an audible warning is heard.
- Power **Off/On** and re-programme.

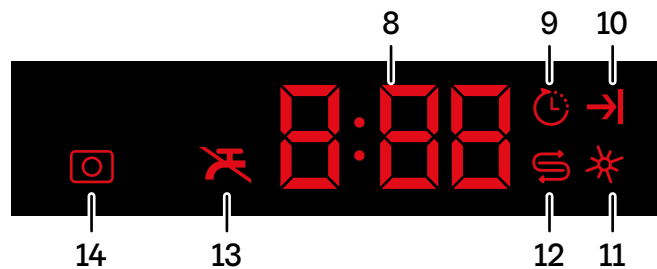

## 8. Programme Time Indicator / Time Delay

Indicator displays the duration of the programme or the time delay before starting the selected programme.

## 9. Time Delay Indicator

Illuminates and flashes when time delay is selected.

## 10. End of Programme Indicator

Illuminates when the selected programme finishes.

## 11. Rinse Aid Indicator

Refill rinse aid reservoir when illuminated.

## 12. Salt Indicator

Refill salt reservoir when illuminated.







## 13. Water Cut-off Indicator

Illuminates when the water supply has been cut-off.

## 14. Tablet Detergent Function

Illuminates when the tablet option has been selected.

# Programmes

Programmes and temperatures	Cycle selection information	Degree of soiling	Prewash	Wash	Dry	Time (mins)	Water (l)	Energy (kWh)
<b>AUTO</b> 40-65°C	Determines the soiling degree of the dishes, sets the temperature, amount of washing water and time automatically.	Medium - High	+	+	+	112 - 180	9.4 - 12.4	0.90 - 1.45
 mix	Daily mixed dishes including plastic items. Delicate glass items are washed in the upper basket, pans etc can be washed in the lower basket.	Medium	+	+	+	203	19.0	1.53
 70°C	Heavily soiled dishes, pots and pans.	High	+	+	+	170	16.8	1.51
<b>eco</b> *** 50°C	Dishes with normal amount of soiling. It is the most efficient program in terms of combined power and water consumption.	Medium	+	+	+	245	9.5	0.94* / 0.965**
 40°C	Gentle cleaning of delicate glassware.	Low	+	+	+	100	14.4	0.92
 60°C	Daily washing programme for normally soiled dishes.	Medium - Low	-	+	+	58	10.6	1.18
 35°C	Lightly soiled daily dishes.	Low	-	+	-	30	10.8	0.80
	Pre-wash rinse suitable for removing remnants from soiled dishes placed in the dishwasher for a period of days to prevent bad odours.	-	+	-	-	15	4	-

\* : EN 60436:2016 \*\* : EN 60436:2020 The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions. \*\*\* Reference programme for testing institutes. The tests in accordance with EN 50242/60436 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme. The values given for programmes other than Eco 50°C programme are indicative only.