

Dishwasher Quick Reference Guide - LAM8376

Register my appliance ✓

www.howdens.com/appliance-registration

Please register your appliance today so you can be contacted easily in the event of important product updates.

 
 
 
 
1. Scrape all food waste and debris from plates.



Do not pre-rinse.



2. Load dishwasher as shown.

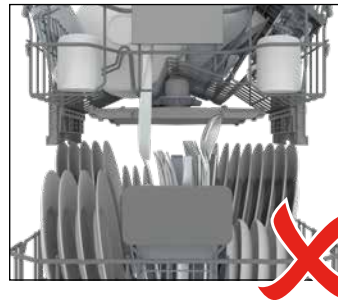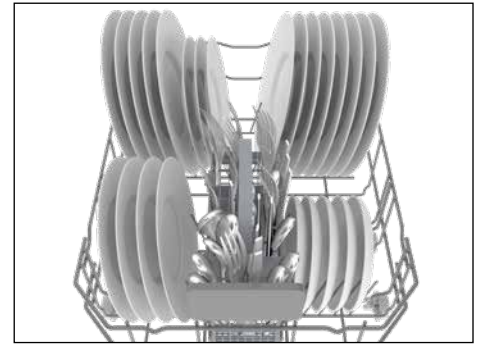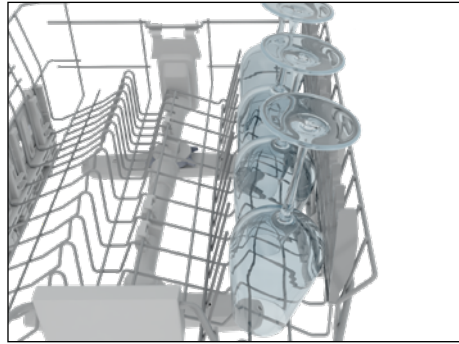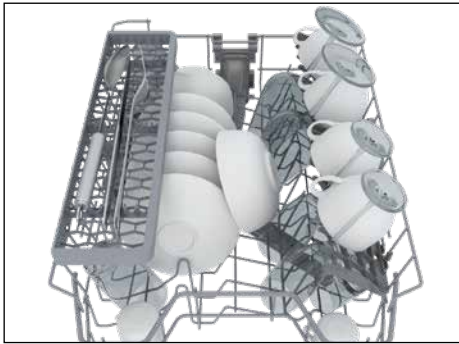

Cutlery points down.

3. Add detergent - powder or tablet.



4. Turn on and select programme.



5. Check salt and rinse aid - refill if necessary.

 


6. Select option(s) as required.



7. Press Start key then close door to start programme.

Controls

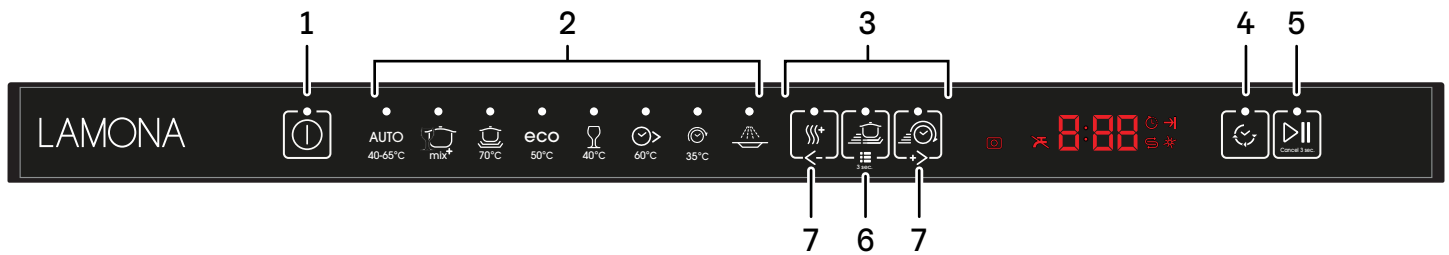




1. Power On/Off

Display illuminates when the power is **On**.
For energy saving, the machine automatically turns off following the completion of the programme or if the programme is not started.

2. Programme Selection Keys

 Press the desired programme.
The programme will start when the dishwasher door is closed.

3. Function Keys

-  **Extra Dry** - Extra drying period at the end of a programme.
-  **Turbo Wash** - Utilises additional spray arm, boosting water pressure.
-  **Fast Wash** - Decreases the duration of the programme. Uses higher water pressure and more water.

Note: Not all functions are available to all programmes.

4. Time Delay Selection / Menu Direction

Toggle up or down to select the required time delay or menu settings.

5. Start / Pause / Cancel Key

Illuminates when selected to begin programme.

To cancel a running programme;

 
- Open the dishwasher door
- Hold for 3 seconds, (countdown 3-2-1), until 0:01 is displayed.
- Close the dishwasher door.
- Wait for 1 minute until the draining process is completed and an audible warning is heard.
- Power **Off/On** and re-programme.

6. Menu Selection / Confirmation

Press to enter dishwasher settings / confirm settings.

7. Selection Key

Select dishwasher settings.

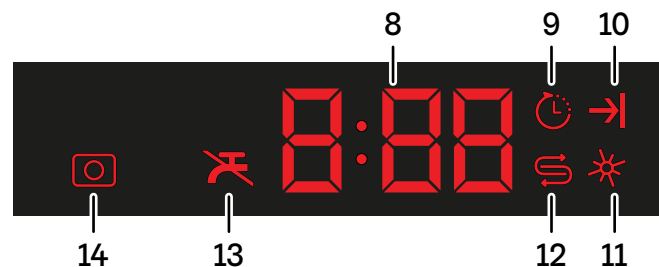

8. Programme Time Indicator / Time Delay

Indicator displays the duration of the programme or the time delay before starting the selected programme.

9. Time Delay Indicator

Illuminates and flashes when time delay is selected.

10. End of Programme Indicator

Illuminates when the selected programme finishes.

11. Rinse Aid Indicator

Refill rinse aid reservoir when illuminated.

12. Salt Indicator

Refill salt reservoir when illuminated.







13. Water Cut-off Indicator

Illuminates when the water supply has been cut-off.

14. Tablet Detergent Function

Illuminates when the tablet option has been selected.

Programmes

Programmes and temperatures	Cycle selection information	Degree of soiling	Prewash	Wash	Dry	Time (mins)	Water (l)	Energy (kWh)
AUTO 40-65°C	Determines the soiling degree of the dishes, sets the temperature, amount of washing water and time automatically.	Medium - High	+	+	+	92 - 173	9.8 - 13.2	0.90 - 1.20
 mix	Daily mixed dishes including plastic items. Delicate glass items are washed in the upper basket, pans etc can be washed in the lower basket.	Medium	+	+	+	206	16.4	1.30
 70°C	Heavily soiled dishes, pots and pans.	High	+	+	+	164	15.2	1.25
eco *** 50°C	Dishes with normal amount of soiling. It is the most efficient program in terms of combined power and water consumption.	Medium	+	+	+	239	8.7	0.78* / 0.805**
 40°C	Gentle cleaning of delicate glassware.	Low	+	+	+	100	13.8	0.85
 60°C	Daily washing programme for normally soiled dishes.	Medium - Low	-	+	+	58	10.6	1.12
 35°C	Lightly soiled daily dishes.	Low	-	+	-	30	10.0	0.74
	Pre-wash rinse suitable for removing remnants from soiled dishes placed in the dishwasher for a period of days to prevent bad odours.	-	+	-	-	15	3.4	-

* : EN 60436:2016 ** : EN 60436:2020 The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions. *** Reference programme for testing institutes. The tests in accordance with EN 50242/60436 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme. The values given for programmes other than Eco 50°C programme are indicative only.