

LAMONA

Built-In Wine Cooler 150mm

LAM6904



Instructions and Installation

Register 
my appliance

www.howdens.com/appliances-registration



Free 3 year guarantee

Call now¹

0333 010 0009

Alternatively, visit www.howdens.com/appliance-registration

LAMONA

**3 year guarantee available.
Register your appliance within 90 days²**

By registering your appliance and creating an account, we will keep you up to date with the latest product information and notify you immediately of any important product updates

¹ Lines are open Monday to Friday 9am to 5pm. Calls will be charged at your local rate and may be recorded and monitored for training and quality purposes.

² So that in the event of an important product update, or recall, we can contact you.

Register 
my appliance

Dear Customer,
Congratulations on your choice of wine cooler.

The user manual will help you use your product quickly and safely.

- Please read this user manual before installing and using the appliance.
- Always follow the safety instructions.
- Keep this user manual within easy reach for future reference.
- Please read any other documents supplied with the product.

Explanation of symbols

Throughout this user manual the following symbols are used:



Important information or useful tips about usage.



Warning for possible hazards to health and property.



Warning possibility of electric shock.

Product information correct at the time of publication in October 2020. The company has a policy of continuous product development and reserves the right to change any products and specifications given in this manual.



This product's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose. Your product also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste. Contact your Council or your retailer for the used appliance collection points closest to your home. We thank you doing your part to protect the environment.

This product meets all the necessary Standards for safety, health and environmental requirements

Contents Page

01 - Before Using The Wine Cooler	05
02 - Safety	05
General	05
03 - General Information	06
Wine cooler layout / control panel	06
04 - Operating Your Wine Cooler	07
Power on/off control	07
Interior light on/off	07
Temperature display window	07
Temperature setting	07
05 - Care & Maintenance	08
Cleaning your wine cooler	08
Power failure	08
Absence and holidays	08
Moving your wine cooler	08
Shelves	08
Energy saving tips	08
06 - Installation	09
Before installation	09
Integrated installation	09
Installing the handle	10
Reversing the door swing	10
Adjusting the plinth cover	11
Connection to the mains supply	11
07 - Troubleshooting	12
08 - Your Guarantee	13

01 - Before Using The Wine Cooler

- **Please remove all packaging, stickers and films from the product's surface and clean the product's surfaces with a damp cloth and mild detergent before using for the first time.**
- **We recommended that you leave your wine cooler to stand for at least 24 hours before switching on to allow compressor oil to settle.**

02 - Safety



This appliance is for domestic purposes only and is intended to be used exclusively for the storage of wine bottles. Commercial use or anything beyond its intended purpose will void the guarantee (see guarantee page). The manufacturer shall not be liable for any damage caused by improper use or handling errors

General

This product is not intended to be used by persons with physical, sensory or mental disorders or unlearned or inexperienced people (including children) unless they are supervised by a person who will be responsible for their safety or who will instruct them accordingly in the use of the product. Children must be supervised to prevent them from tampering with the product.

- Use this appliance only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury.
- To protect against the risk of electric shock, do not immerse the unit, cord, or plug in water or spray any other liquid nearby.
- Unplug the appliance from the plug socket when not in use, when moving from one location to another and before cleaning.
- To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull out by the cord.
- Do not operate the appliance in the presence of explosive or flammable gases.
- Do not place the appliance or any of its parts near an open flame, cooking or other heating the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not use outdoors.
- Do not operate the the appliance with a damaged cord or plug, if the product malfunctions, or damaged in any manner.
- The use of attachments not recommended by the manufacturer may be hazardous.
- Place the unit on a dry level surface.
- Do not operate if the housing is removed or damaged.
- A loose fit between socket and the plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace any loose or worn sockets before installation.
- Locate the unit away from direct sunlight and sources of heat (cooker, heater, radiator).
- This appliance is CFC and HFC free.
- Ensure that the ventilation openings of the built-in appliance are never blocked or covered and keep children and animals away from the slots.
- No liability will be accepted for any damage incurred owing to misuse of the appliance or as a result of repairs carried out by unqualified personnel. In this case neither the guarantee nor other liability claims apply.




Do not operate any electrical appliances inside the wine cooler.




To reduce the risk of fire, electric shock, or personal injury, unplug or disconnect the appliance from the power supply before moving or cleaning the appliance.

03 - General Information

Wine cooler layout / control panel

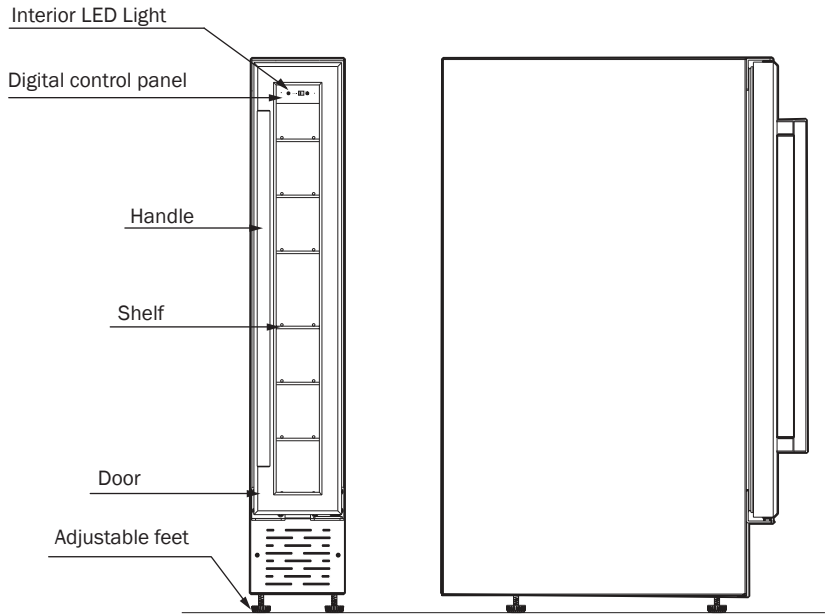

Control Panel

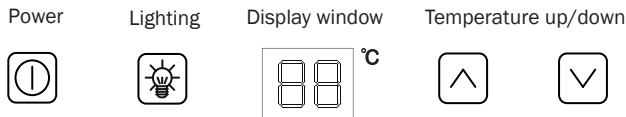


LAMONA

Dimensions

Height. 870 - 890mm
Width. 150mm
Depth 520mm (Exc handle)


Capacity 7 x 75cl Bottles

04 - Operating Your Wine Cooler


 This refrigerating appliance is intended to be used at ambient temperatures ranging between 16°C to 32°C.

If the ambient temperature is above or below the recommended range (for example; extreme hot or cold conditions) the temperature range of 5°C to 20°C may not be reached.

This appliance is intended to be used exclusively for the storage of wine.

 The wine cooler will run continuously until the required temperature range is achieved. This is quite normal and not a cause for concern.


If the unit is unplugged, power lost, or turned off it is recommended you wait 3 to 5 minutes before restarting the unit.

 Once the wine cooler is running for a few hours everything will be back to normal.


WATER LEAKAGE

If the door is not fully closed, the door seal is dirty or distorted or if the appliance is run only for short time periods instead of continuously, defrost water may overflow at the rear. Please avoid these situations.

Power on/off control

- When the appliance is plugged in to a power outlet, it powers on automatically.
- Touch the power symbol  and hold for 10 seconds to turn the appliance on/off.





Interior light on/off control

- Touch the light symbol  to turn the interior LED light on/off.
- If the light is left on it will increase the energy consumption slightly.

Temperature display window

- The number in the digital display reflects the temperature selected for the cooler.

Temperature setting

- The temperature setting range is 5-20°C
- Directly touch the  or  to set the temperature that you would like.
- Touch the  to increase the set temperature by 1°C and touch  the to decrease the set temperature by 1°C.

9bYf[m9Z4WYbVth

The most efficient use of the appliance is with the shelves arranged in their standard array, fully loaded with standard 75cl size wine bottles.

Select the appropriate temperature for the wine being stored to ensure preservation and quality.

Leaving the door open for long periods of time, turning the appliance on and off, running for short time periods will all result in a higher energy use and less than optimal storage conditions.

05 - Care & Maintenance

Cleaning your wine cooler

- Turn off the power, unplug the appliance, and remove all items including shelves.
- To remove the shelves from the compartment; open the door fully and slide them out carefully taking care not to lose the anti-vibration pads. Please ensure these are replaced when the shelf is put back (for further information please refer to 'shelves' section).
- Clean the inside surfaces with a damp cloth and baking soda solution. The solution should be 2 tablespoons of baking soda to 1 litre of clean water. Use a soft, dry, clean cloth to wipe dry.
- Clean the shelves with a mild detergent and damp cloth, and dry.
- Clean the outside of the cabinet with a damp cloth with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.
- Use a damp, clean cloth when cleaning the area of the controls.

Power failure

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimise the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect the contents.

Absence & holidays

- For short holidays, leave the wine cooler in operation for periods of less than three weeks.
- For long absences or if the appliance will not be used for several months, remove all items, turn off the appliance and unplug. Clean and dry the interior thoroughly. To prevent odours and mould growth, leave the door open slightly: blocking it open if necessary.

Moving your wine cooler

- Remove all items
Securely tape down the shelves inside your appliance.
- Wind in the adjustable legs up to the base in order to avoid damage.
- Tape the door shut.
- Protect the outside of the appliance with a blanket, or similar item.

Shelves

- To prevent damaging the door gasket, make sure the door is fully opened when pulling shelves out of the compartment. (You may need to pull the cooler forward to remove shelves once it has been installed depending upon size of unit gap)
- The shelves are designed for 75cl Bordeaux bottle storage. The maximum loaded amount of bottles may vary according to the size or dimensions of bottles you store.

Door Seals

- The wine cooler's door seals can be removed for cleaning as necessary.
Power the appliance off.
Locate a corner and gently *pull the seal out it's channel, slowly working along.
Clean seal using warm water and a mild detergent, dry thoroughly and replace seal into it's channel.
Ensure door and seal close correctly.
Power on wine cooler.
(*Careful not to damage seal)

Energy saving tips

- The wine cooler should be located in the coolest area of the room, away from heat producing appliances, and out of direct sunlight.
- Ensure that the unit is adequately ventilated
Never cover air vents.
- Only open the door for as long as necessary.

06 - Installation

Before installation

The product should only be installed by a suitably competent person.

! The product must be installed in accordance with all local regulations.

! Prior to installation, visually check the product for any damage/defects. Do not install if any issues are found.

Damaged products may cause risks to your own safety.

! Let the appliance stand upright for approximately 24 hours before connecting it to the power source. This helps to reduce the possibility of a cooling-system malfunction from handling or transportation.

The appliance is intended for installation between Howdens kitchen cabinets.

Kitchen cabinets must be set level and fixed.

The following installation drawings are representational and may not match exactly with your appliance.


Integrated installation

When integrating your wine cooler into a fitted kitchen, sufficient space is required to allow the wine cooler to be fully ventilated and for the door to be opened fully. The appliance may need to be positioned off centre to overcome any door collision issues.

! Ensure your cabinet aperture meets the minimum dimensions listed below.

CABINET OPENING DIMENSIONS

	mm (Minimum)
Height	870
Width	160
Depth	520

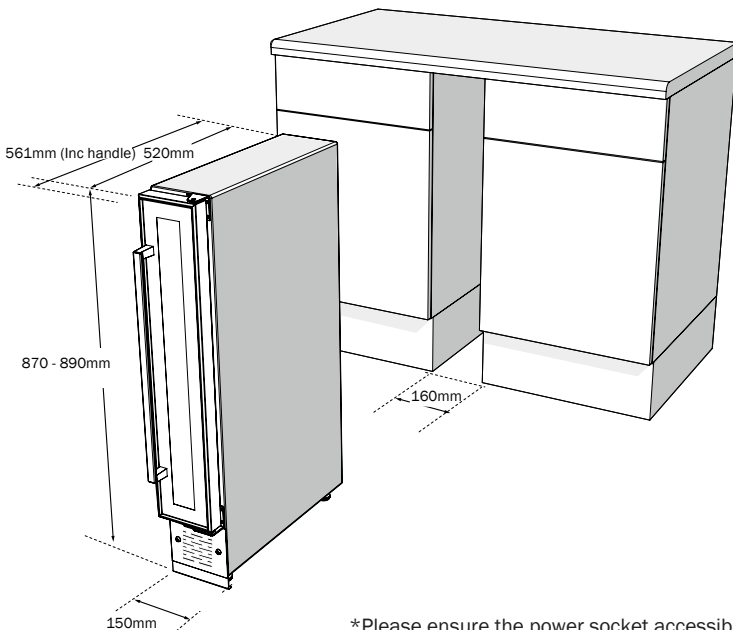


*Please ensure the power socket accessible after installation

Installing the handle

Gently pull the door gasket to one side to reveal the two designated holes for handle installation.

Install the handle tightly as shown below with the two screws, and washers provided.

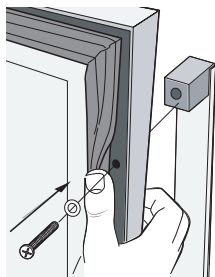


Reversing the door swing

This wine cooler door can open from either the left or right-hand side. The unit is delivered with the door opening from the left-hand side. Should you wish to reverse the door swing, please follow the reversal instructions below.


⚠ All parts removed must be saved to reinstall the door

Open the door and remove the two screws (1) under the lower right hand corner of the door that are used to hold the pivot plate (3), to the hinge plate (2). Be careful to support the glass door with both hands to prevent it dropping after removing the screws and moving the door away from the hinge.

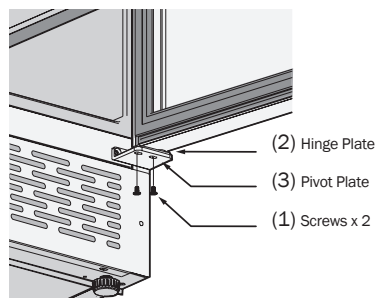


Pull down to remove the glass door and place it on a padded surface to prevent scratching it.

Remove the right top hinge (4), and the lower hinge plate (2).

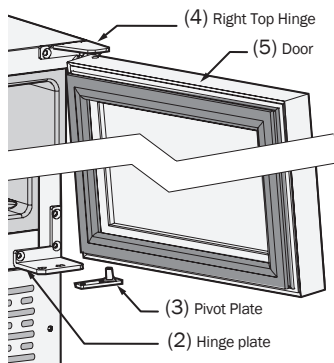


Remove the left top hinge (6), and left lower hinge (7) from the component bag that is included and install them at the designated positions at the left side of the cabinet (pictured below).

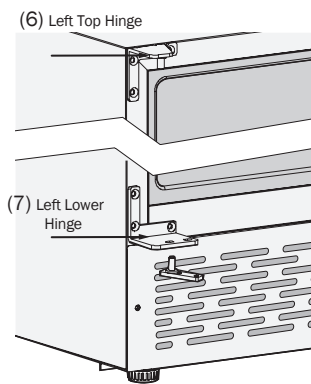

Turn the glass door 180° and reinstall using the pivot plate, tighten screws to secure the hinge plate.

Adjusting the plinth cover

- The adjustable lower plinth cover is located behind the plinth grille, and is held in position by two screws.
- Loosen the two screws. Slide the adjustable plinth down to cover the gap between the wine cooler and the floor.
- Retighten the screws.
- **The cover remains behind the grille.**

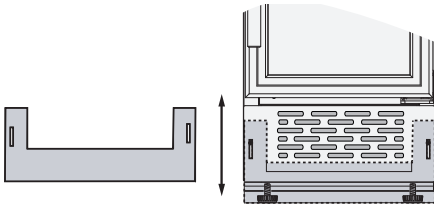

Connection to the mains supply

Check that the voltage marked on the product corresponds with your supply voltage.



This Appliance Must Be Earthed




The wires in the mains lead are coloured in accordance with the following code:

GREEN / YELLOW – EARTH


BLUE – NEUTRAL

BROWN- LIVE

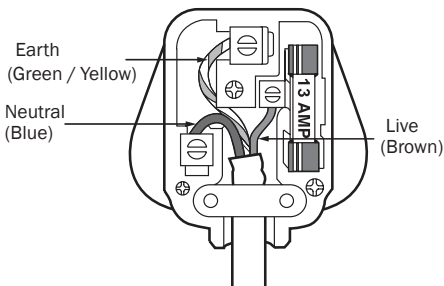

This appliance is fitted with a plug which has a 13 amp fuse. Should the fuse fail, then it must be replaced with an ASTA approved fuse (conforming to BS1362) of the same rating. If you need to replace the plug or if the plug is

incorrect for your type of socket, remove it, and replace it with an appropriate plug. Dispose of the old plug safely.

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The **GREEN / YELLOW** wire is the **EARTH** and must be connected to the terminal which is marked with the letter 'E' or by the earth symbol .

The **BLUE** wire is the **NEUTRAL** and must be connected to the terminal which is marked with the letter 'N' or coloured **BLACK**.

The **BROWN** wire is the **LIVE** wire and must be connected to the terminal which is marked with the Letter 'L' or coloured **RED**.

Always ensure that the plug cord grip is fastened correctly, if in doubt consult a qualified electrician. This product conforms to all current EU Directives.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead, you will find that it incorporates a fuse, the value of which is indicated either on the base of the plug or on the fuse carrier. Should the fuse need replacing, you must use an ASTA approved one (conforming to BS1382) of the same rating.

If the fuse cover is lost, the plug must not be used



If you need to remove the plug, cut it from the mains lead and immediately dispose of it. Never attempt to re-use this plug or insert it into a socket outlet as there is a very great risk of an electric shock.

07 - Troubleshooting

TROUBLESHOOTING GUIDE		
Symptoms	Possible Cause	Solutions
No cooling	<ul style="list-style-type: none"> • Plug not put in correctly • Low voltage • Fuse blown 	<ul style="list-style-type: none"> • Ensure the plug is in and the socket is switched on • Ensure normal voltage • Replace the fuse with the recommended AMP rating
Temperature inside is not cold enough	<ul style="list-style-type: none"> • The wine cooler is placed too close to a heat source • Bad ventilation • The door is not closed tightly, or opened too frequently or for too long 	<ul style="list-style-type: none"> • Keep the wine cooler away from sunshine or other heat sources • Ensure the grille vents are kept clear • Close the door tightly and do not open the door too frequently or for too long
Strange smell inside the wine cooler	<ul style="list-style-type: none"> • Check contents for anything sour or perishable. 	<ul style="list-style-type: none"> • Remove any perishable items and clean thoroughly.
Display light flashes	<ul style="list-style-type: none"> • The set temperature is higher than the inner temperature of the wine cooler • The wine cooler is defrosting 	<ul style="list-style-type: none"> • Adjust the temperature accordingly. • This is a normal automatic function, and no repair is needed.
Frost is forming on the cooling surface	<ul style="list-style-type: none"> • There may be too much humidity or the temperature is too low inside the case. 	<ul style="list-style-type: none"> • Disconnect the power to the wine cooler and defrost manually, reconnect the power once the frost has thawed.
The wine cooler seems to make noises	<ul style="list-style-type: none"> • Noises may come from the working of the compressor or refrigerant, which is normal. • As each cycle ends, you may hear gurgling sounds caused by the flow of the refrigerant. • Contraction and expansion of the inside walls may cause popping and crackling noises. 	<ul style="list-style-type: none"> • Some noises are normal and no cause for concern • Check to assure that the appliance is level and not touching the surrounding cabinetry.
The door will not close properly	<ul style="list-style-type: none"> • The wine cooler is not level • The door gasket may dirty. • The shelves or bottles may be misaligned 	<ul style="list-style-type: none"> • Adjust the products feet to ensure the product is level • Clean the door gasket with warm water and a damp cloth - then dry thoroughly. • Re-adjust the shelves
The display window is shown with "HH" or "LL" instead of a digital figure and/or with continuous 'beep/buzz' sound	<ul style="list-style-type: none"> • The temperature probe is out of order. 	<ul style="list-style-type: none"> • Consult your authorized service agent



If you cannot eliminate the problem after following the instructions in this section, consult your depot or the authorised service agent. Never try to repair a nonfunctional product yourself.

08 - Your Guarantee

Product Guarantee Details (UK Only)

Your appliance has the benefit of a comprehensive manufacturer's guarantee which covers the cost of breakdown repairs. (Details of which are shown on your Proof of purchase Document).

- Any claim during the period of the guarantee MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE.
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person.

(The guarantee in no way affects your statutory or legal right)

What to do if you need to report a problem.

Please ensure you have ready:

- The product's model and serial numbers.
- Howdens Proof of Purchase Document.
- Your full contact details.

Call the Depot number on your Proof of Purchase Document supplied with the product / kitchen.

or

Call the LAMONA Service Line on 0344 460 0006

*Product installed within a domestic kitchen or a non-domestic kitchen where 8 or fewer people are using the appliance.



Where to find the model and serial number on your machine.	Inside the machine on the upper left hand side.
---	--

Spare parts available for 7 years (Door seals 10 years)

www.lamonaspares.co.uk

Information

The model's technical information can be retrieved by scanning the QR code on the Energy label and proceeding to the website entering the model identifier.

**ENERG**

SUPPLIER'S NAME

MODEL IDENTIFIER→ (*)

A

A


**ENERG**

SUPPLIER'S NAME

MODEL IDENTIFIER→ (*)

A

A

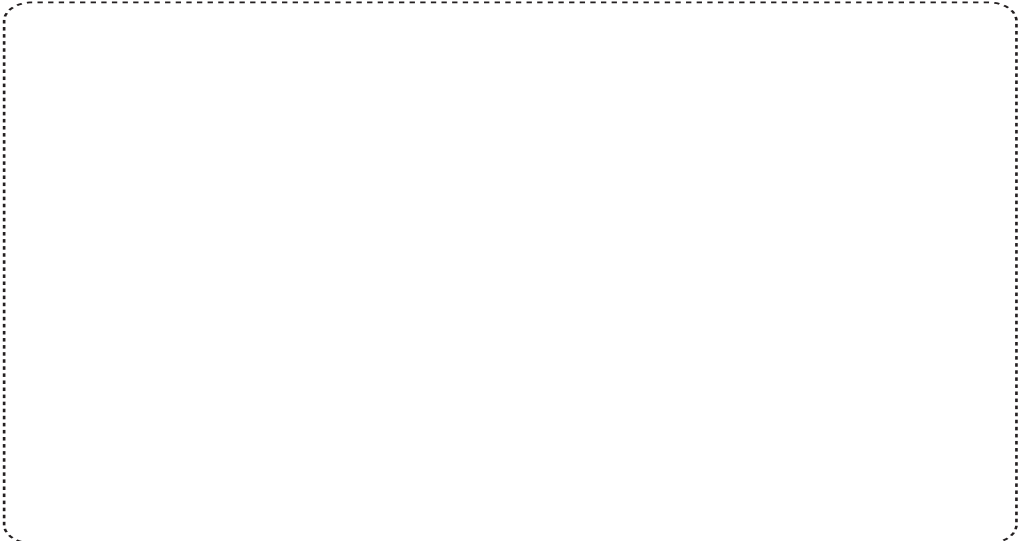

Product Serial Number
(Place sticker here)

LAMONA

ISSUE v3 230121

Imported in EU by: Houdan Cuisines SAS, Z.A. du Bois Rigault Nord
1 Rue Calmette, 62880 Vendin-le-Vieil, Cedex, France

Howden Joinery Ltd, Thorpe Road, Howden, East Yorkshire, DN14 7PA

Product information correct at the time of publication in January 2021.
The company has a policy of continuous product development and reserves the right to change any products and specifications given in this manual. Subject to the Terms and Conditions of Trading, a copy of the Howdens Terms and Conditions is available upon request.

Copyright © 2021 Howden Joinery Ltd. All rights reserved.