

# LAMONA

At the heart of the kitchen

## Built-In Condenser Tumble Dryer

LAM8877 / 8 / 9



- Please also read the Installation Manual to ensure safe fitting and use of the appliance.
- The appliance should be fitted by a suitably competent and qualified person.
- Please keep these instructions in a safe place for future reference.
- Danger of suffocation, keep packaging material away from children.

## User Instructions

ISSUE v1.1 14-0323

Register   
my appliance

[www.howdens.com/appliance-registration](http://www.howdens.com/appliance-registration)



# Free 3 year guarantee

**Call now<sup>1</sup>**

Within the UK:

**0333 010 0009**

Within Republic of Ireland:

**01525 5752**

Alternatively, visit [www.howdens.com/appliance-registration](http://www.howdens.com/appliance-registration)

# LAMONA

**3 year guarantee available.  
Register your appliance within 90 days<sup>2</sup>**

**By registering your appliance and creating an account, we will keep you up to date with the latest product information and notify you immediately of any important product updates**

<sup>1</sup>Lines are open Monday to Friday 9am to 5pm. Calls will be charged at your local rate and may be recorded and monitored for training and quality purposes.

<sup>2</sup>So that in the event of an important product update, or recall, we can contact you.

**Register**   
**my appliance**

# Welcome

Dear Customer,

Congratulations on your choice of energy efficient tumble dryer.

- This tumble dryer complies with all current local and national safety requirements; however, inappropriate use could lead to personal injury and damage to property.
- Please read these user instructions carefully before using the tumble dryer. It contains important information on safety, use and maintenance. This prevents both personal injury and damage to the appliance.
- It is important that the installation instructions supplied with this machine are followed carefully.
- Please keep these instructions in a safe place for your future reference and for future owners.

This appliance is intended to be used in household and similar domestic applications, see the guarantee page for the definition of domestic use\*.

The **CE** and **UKCA** marks on this product, confirm compliance to all relevant UK and European safety, health and environmental requirements which are applicable in legislation for this product.

Throughout this manual the following warning symbols are used:



Warning for serious injury or death risk.



Warning for electric shock.



Warning for risk of fire / inflammable materials.



Warning for injury or property damage risk.



Warning for hot surfaces. Surface temperature may rise above 60°C.



Important / note for operating the system correctly.

## Main points for use

### Latest in drying technology

Compared to previous high electricity consumption tumble dryers, this appliance...



**uses much less electricity...**



**takes longer to dry...**  
(See guide timings on page 24).



**is more gentle on fabrics.**


---

# Contents

<b>Warning and safety information.....</b>	<b>p.5</b>	<b>Removing and emptying the water container .</b>	<b>p.19</b>
Correct application.....	p.5	<b>Care and maintenance .....</b>	<b>p.20</b>
Safety with children .....	p.5	Cleaning the external casing and control panel.....	p.20
Technical safety.....	p.5	Cleaning the inner door, seal and drum.....	p.20
Correct use .....	p.6	<b>Cleaning the filters .....</b>	<b>p.21.</b>
Risk of fire and explosion.....	p.6	Cleaning the fluff filter .....	p.21
Cautions when using the dryer .....	p.7	Cleaning the condenser filters (every 3 cycles) .....	p.21
<b>LAM8877 / 8 / 9 Condenser Tumble Dryer .....</b>	<b>p.8</b>	<b>Trouble Shooting .....</b>	<b>p.22</b>
Tumble dryer overview .....	p.8	Things you could remedy yourself .....	p.22
Control panel.....	p.8	<b>Service .....</b>	<b>p.23.</b>
<b>Before using the dryer for the first time.....</b>	<b>p.10</b>	<b>Technical Specifications .....</b>	<b>p.23</b>
Setting the language.....	p.10	Test laboratory information.....	p.23
<b>Environmentally friendly drying .....</b>	<b>p.11</b>	<b>Caring for the environment .....</b>	<b>p.23</b>
<b>Preparing the laundry .....</b>	<b>p.11</b>	Disposing of the packaging material .....	p.23
Sorting the laundry .....	p.12	Disposing of your old appliance.....	p.23
Check garments for foreign objects.....	p.12	<b>Energy / programme ratings.....</b>	<b>p.24</b>
<b>Loading the tumble dryer .....</b>	<b>p.13</b>	<b>Product Fiche / Specification.....</b>	<b>p.24</b>
Open the door.....	p.13	<b>Guarantee .....</b>	<b>p.25</b>
Load the drum.....	p.13		
Close the door .....	p.13		
<b>Selecting programmes and setting function...p.14</b>			
Quick Start.....	p.14		
Automatic programmes (15).....	p.14		
Automatic programmes drying guide.....	p.15		
Delay Start .....	p.16		
Drying Selection.....	p.16		
Time Selection (to set a defined finish time) .....	p.17		
Anti Crease (Easy Iron).....	p.17		
Child Lock.....	p.18		
Memory .....	p.18		
Programmes and options compatibility .....	p.19		



## Warning and Safety Information

 Please read these instructions carefully. The manufacturer is not responsible if an incorrect installation and use causes injuries and/or damage. Always keep these instructions with the dryer for future reference.

**Please take appropriate care when installing, maintaining, cleaning and operating the tumble dryer.**

### Correct application

- This appliance is intended to be used in household and similar applications such as:
  - > Staff kitchen areas in shops, offices and other working environments;
  - > farm houses;
  - > by clients in hotels, motels and other residential type environments;
  - > bed and breakfast type environments.
- The tumble dryer is not intended for outdoor or commercial use.
- It must be used only as a domestic appliance to dry items which are specified by the manufacturer as being dryable on the wash care label. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.
- The tumble dryer may be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it safely and recognise and understand the consequences of incorrect operation.



**WARNING:** Misuse may create a fire hazard.




### Safety with children

- Children under 3 years of age must be kept away from the appliance unless they are constantly supervised.
- Children 8 years and older may only use the tumble dryer unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- Children must not be allowed to clean or maintain the tumble dryer unsupervised.

- Please supervise children in the vicinity of the tumble dryer and do not let them play with it.

### Technical safety

 Please follow the instructions and observe the technical data in the installation manual and technical specification on pages 23, & 24 of this manual.



Before installing the tumble dryer, check it for any externally visible damage. Do not install or use a damaged machine.

Before connecting the tumble dryer, ensure that the information on the data plate (fuse rating, voltage and frequency) match the mains electricity supply. If in any doubt, consult a qualified electrician.

**Reliable and safe operation of this appliance can only be assured if it has been connected to the mains electricity supply.**




The electrical safety of this tumble dryer can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt, please have the wiring system of the building tested by a qualified electrician. **LAMONA cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).**



Do not connect the tumble dryer to the mains electricity supply by a multi-socket adapter, extension lead or similar. These do not guarantee the required safety of the machine (fire hazard due to the risk of overheating).

Faulty components must only be replaced by genuine original LAMONA spare parts. Only when these parts are fitted can LAMONA guarantee the safety standards of the machine.

 The electrical socket must be easily accessible after installation so that the machine can be disconnected from the electricity supply if necessary.

 If the electrical connection cable is faulty it must only be replaced by a **LAMONA Service Engineer** to protect the user from danger.

- Do not touch the appliance when hands or feet are damp or wet.
- Do not lean on the door when loading the machine or use the door to lift or move the appliance.
- This tumble dryer **MUST NOT** be used in a non-stationary location (e.g. on a ship).



The machine must be isolated from the electricity supply when cleaning; during maintenance and in the event of a fault.

- In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. **Any damage which may be caused by cockroaches or other vermin will not be covered by the warranty.**

Repairs should only be undertaken by a **LAMONA Service Engineer**, otherwise any subsequent damage will not be covered by the warranty.

## Correct use

- **Do not** install the tumble dryer in a room where there is a risk of frost. Frozen hoses may burst or split. The reliability of the electronic control unit may be impaired at temperatures below freezing point.

**Your product is designed to work at temperatures between 15 - 35°C.**

- Lint and fluff must not be allowed to collect on the floor around the machine.
- Take care to ensure that foreign objects (e.g. nails, pins, coins, paper clips) do not find their way into the machine with the laundry. These may damage components of the machine, its surroundings and the laundry.
- Observe maximum load limits for laundry. See page 15 for the maximum recommended

loads for individual programmes.

- Machine cleaning must follow the manufacturer's instructions. LAMONA cannot be held responsible for any damage resulting from other treatments.
- Always remove plug before cleaning the tumble dryer.



## Risk of fire and explosion

This dryer contains R290 (flammable eco-sustainable refrigerating gas). Keep open flames and sources of ignition away from the appliance. Due to safety reasons, legislation forces a room of at least 1m<sup>3</sup> per 8g of refrigerant for such equipment. For 110g the minimum allowed room size would be 13.75m<sup>3</sup>

- Do not use solvent based cleaning agents, e.g. those containing benzene, in or on this machine, as this may result in damage to component parts and create toxic fumes. Such agents also pose a fire and explosion hazard.
- The dryer must have adequate ventilation; at least a 12mm gap must be maintained between the machine and any obstruction. The space between the bottom of the dryer and the floor must not be obstructed. Check regularly that airflow through the dryer is not restricted.
- Do not dry unwashed items.
- Laundry that has previously been, soiled or stained with petrol/gas, dry cleaning solvents or other inflammable/combustive substances must not be dried in the machine since they can emit inflammable/combustive vapour.
- Laundry soiled with vegetable oil, alcohol, petrol, gas, oil, stain remover, turpentine, wax or wax remover must be washed with hot water and detergent before drying.
- Rubber, (latex) foam, shower caps, waterproof fabrics and rubber-reinforced / rubber-foam pillows and footwear are not suitable for drying in this appliance.
- Do not dry clothes soiled with industrial chemicals.
- **Do not use the appliance if the fluff filter is not in position or is damaged. Fluff could be ignited.**
- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.


## Cautions when using the dryer

- Do not use the machine to dry large laundry such as tulle, curtains, heavy blankets or rugs. Your laundry may be damaged.
- Do not dry unwashed laundry in the machine.
- Underwear with metal supports must not be dried loose in the machine. Metal supports might come off during the drying process and damage the machine. Place these garments in a bag or a pillowcase.
- Do not use the machine to dry leather clothes or clothes that contain leather (such as leather labels on jeans). The colour of the leather parts might affect other fabrics.
- Do not overload the machine. Observe the maximum load levels stated for drying. See page 15.
- Do not let pets enter the product. Check inside the drum before using the appliance.
- Cool Down: **Do not** touch the drum or door area with bare hands after drying, these surfaces may become hot. Temperature rise during operation may be in excess of 60°C.
- Do not stop the machine before the drying programme is completed. If you have to do so, remove all laundry, place it in an appropriate place and wait for it to cool down. The dryer's final stage is cooling. This keeps the laundry at a certain temperature to ensure that it is not damaged.



If the drying programmes are interrupted (due to programme cancellation or power failure), the laundry in the machine might be hot. Be careful.

 It is essential that the filters and water tank are regularly cleaned and emptied to ensure optimum drying performance.


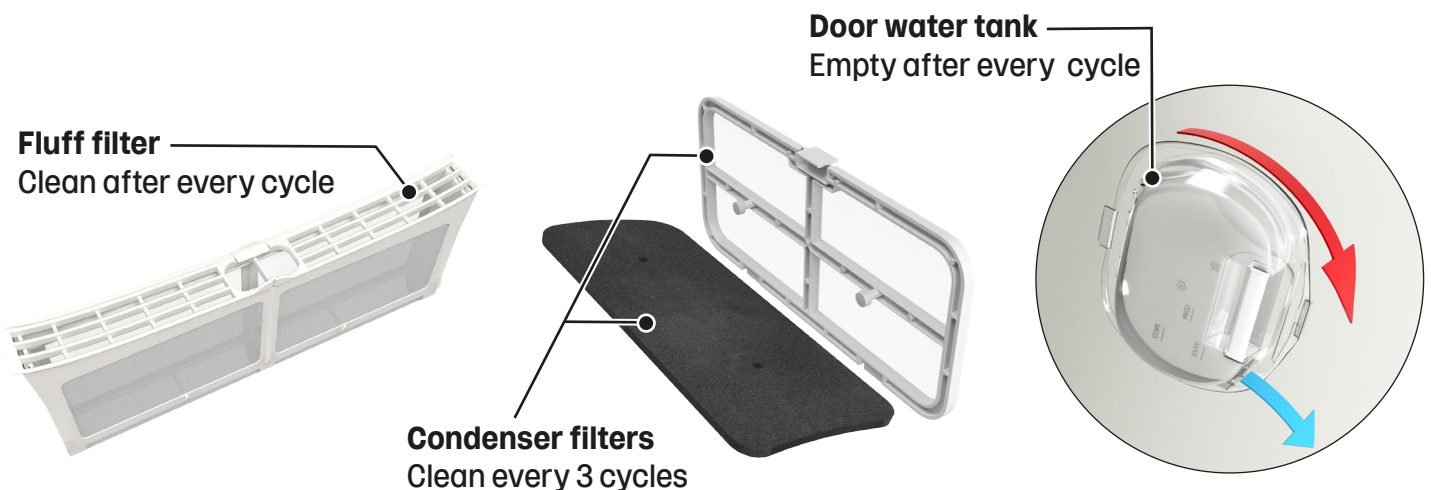


If there is a problem you cannot solve by reading these instructions; switch off and unplug the machine and call the Authorised Service Agent.

LAMONA cannot be held liable for damage caused by non-compliance with these warning and safety instructions.

# LAM8877 / 8 / 9 Condenser Tumble Dryer

## Tumble dryer overview

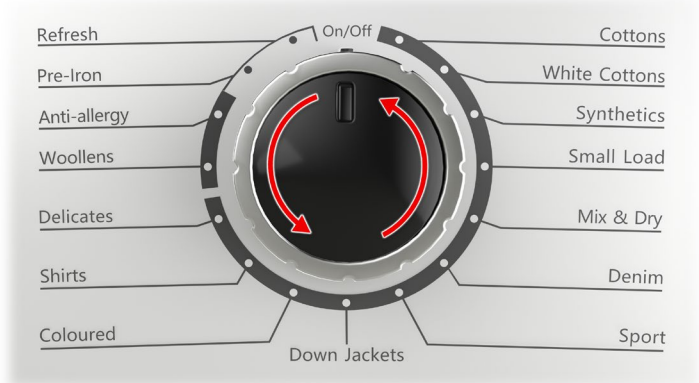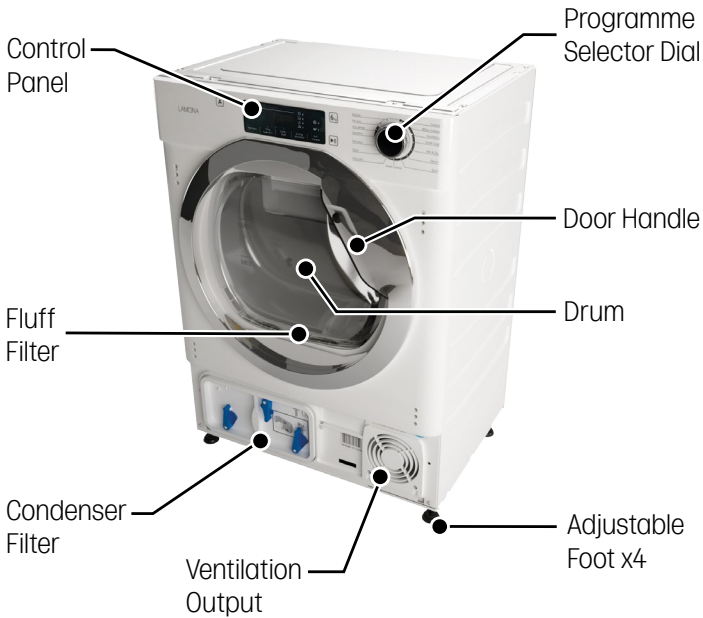

The **programme selector dial** with **OFF** position can be rotated in either direction. It allows selection of the desired drying programme. **To cancel, turn to off.**

## Control panel

**i** Audio tones cannot be turned off.

### **A** Digital Display.

- Shows remaining drying time.
- Time until a drying cycle will start (If delayed start has been activated).
- Other notifications.

### **1** Start / Pause Button.

Starts / suspends the selected programme.

### **2** Easy Iron (Anti Crease).


- Starts anti-crease drum movements to prevent creases forming. Movements occur every 10 minutes (up to a maximum of 6 hours). Useful when it is not possible to unload laundry immediately.
- To stop this function, turn the dial to OFF.

### **3** Drying Selection.

Sets the required dryness level. This can be made up to 5 minutes after the start of a drying cycle.

**⚠** After selection, to reset the automatic drying function, switch the dryer OFF.

- If a programme is incompatible. All LEDs flash 3 times.

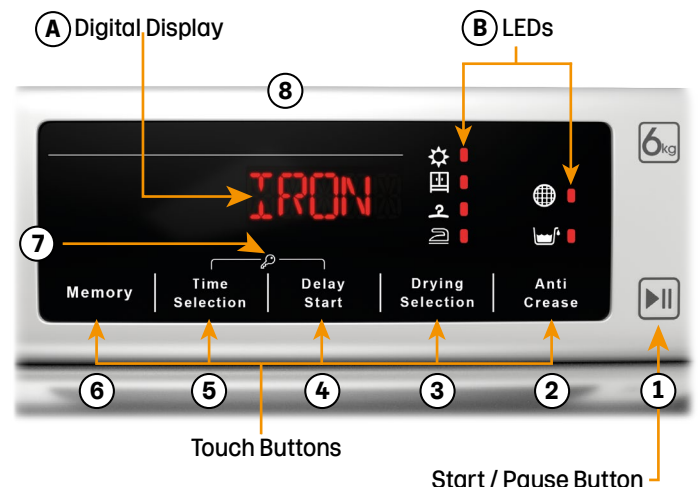


Touch buttons may have a slight delay before being actioned. This is normal.

Extra Dry	For completely dry garments.
Wardrobe Dry	Prepares items for direct storage.
Hanger Dry	Prepares clothes for hanging.
Ready to Iron	Leaves clothes slightly wet to preparation for ironing.




#### ④ Delay Start Button.

- Allows delaying programme start from 30 minutes to 24 hours in 30 minute intervals (1 hour on some models). The delay selected is shown on the display.
- After pressing ; the time shown begins to count down towards the programme start.

 If you open the door with the delayed start set; after re-closing, press  again to resume the countdown.

#### ⑤ Time selection.


- Allows changing a cycle from automatic to manual timed, up to 3 minutes after the start of the cycle.
- Successive presses increases the time in 10 minutes intervals.
- A low tone indicates the current programme is incompatible. 


 After selection; to reset the automatic drying function, switch off the dryer.

#### ⑥ Memory Button.


- Permits storage of options set for a cycle.
- **To store:** Select a programme and desired options, then press **Memory**.
- **To recall:** After cycle selection, press the memory button to recall the stored options (not the cycle).

#### ⑦ Child Lock


- Blocks unwanted or accidental changes to a 'programme cycle' during operation.
- **To activate :** Push buttons ④ + ⑤ together for 2 seconds. **"CHILD LOCK ON"** is displayed.
- **To deactivate:** Push the two buttons again together to unlock. **"CHILD LOCK OFF"** is displayed.
- If the door is opened with child lock activated, the cycle stops but the lock remains on. To **restart the cycle** you must deactivate child lock and press  again.

 When the dryer is off, the option is automatically deactivated. 'Child Lock' can be changed at any time during the cycle.

#### ⑧ LED Indicators

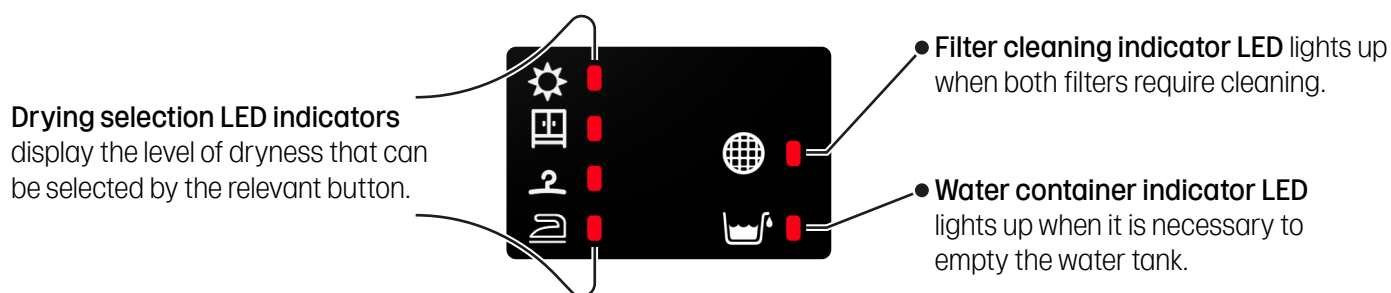


# Before using the dryer for the first time


 Please read this booklet thoroughly.

 Wipe inside the drum and door with a damp cloth, removing any dust that may have settled.




Remove items packed inside the drum


 **WARNING:** Do not touch the buttons while inserting the plug because the machine calibrates its systems during these first seconds, touching the buttons may prevent the dryer operating properly. In this case, remove the plug and repeat the operation.

 LAMONA cannot be held responsible for any incorrect installation of the appliance. The Installation manual must be followed.

## Switching on and setting the language

Once a programme is selected, the dryer turns on. All LEDs light momentarily and welcome music plays. (Note: this cannot be turned off). Use the following steps to change the language. Once set, the digital display shows the currently selected programme information.

① With power connected: Select a programme. 

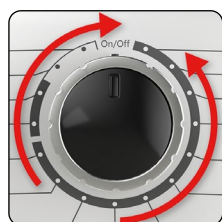



② Press together for approx. 5 seconds to access language list.




④ Press  to confirm your selection.

## Environmentally friendly drying.

 - Only put laundry into the dryer that has been thoroughly wrung / spin-dried. The drier the laundry; the shorter the drying time - saving electricity!
- Always check that both filters are clean before every drying cycle.

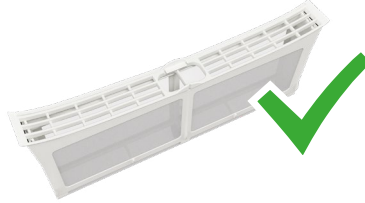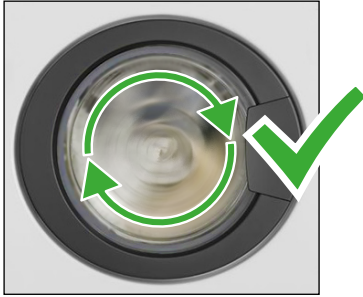

- **Never** put dripping wet items into the dryer, this may damage the appliance.
- **Do not open** the door during the drying cycle, this will extend drying time.
- The 'COTTON DRY' programme  is the standard drying programme that can be run with full or half load and for which the information is given on the label and product receipt. This programme is the most energy efficient programme to dry normal wet cotton clothes. Energy labelling standard programme (EN 61121:2013)



## Preparing the laundry

### Items, unsuitable for tumble drying:

- Wool, silk, nylon items.
- Delicate embroidery.
- Fabrics with metallic decoration.
- Garments with PVC / leather trimmings.
- Footwear.
- Fabrics containing glass fibre.




### Items soiled with the following must be washed thoroughly in hot water and detergent before tumble drying.

- Alcohol.
- Petrol or gas.
- Stain remover.
- Turpentine.
- Wax remover.




## Sorting the laundry

### 1 Sort by care symbols

Using the care symbols found on the collar or inside each garment; identify items that cannot be tumble dried  and sort the remaining laundry according to recommended tumble drying programmes.

- Suitable for tumble drying
- Tumble drying at high temperature
- Tumble drying at low temperature
- Do not tumble dry.



 If a care symbol cannot be found, assume that it is not suitable for tumble drying.

### 2 Sort by thickness

Where a load is bigger than the dryer's capacity; separate the items according to thickness. E.g. separate towels from thin shirts and underwear.



### 3 Sort by fabric


Fabric Type	Description
Cottons / Linens	Towels, cotton, jersey, bed and table linen.
Synthetics	Blouses, shirts, overalls etc. made of polyester or polyamide; as well as cotton and synthetic mixes.

## Check garments for foreign objects

Foreign objects can cause damage to garments and components in this machine.

### Before loading the tumble dryer...

- empty all pockets;
- close zips and fasteners;
- turn articles inside out.

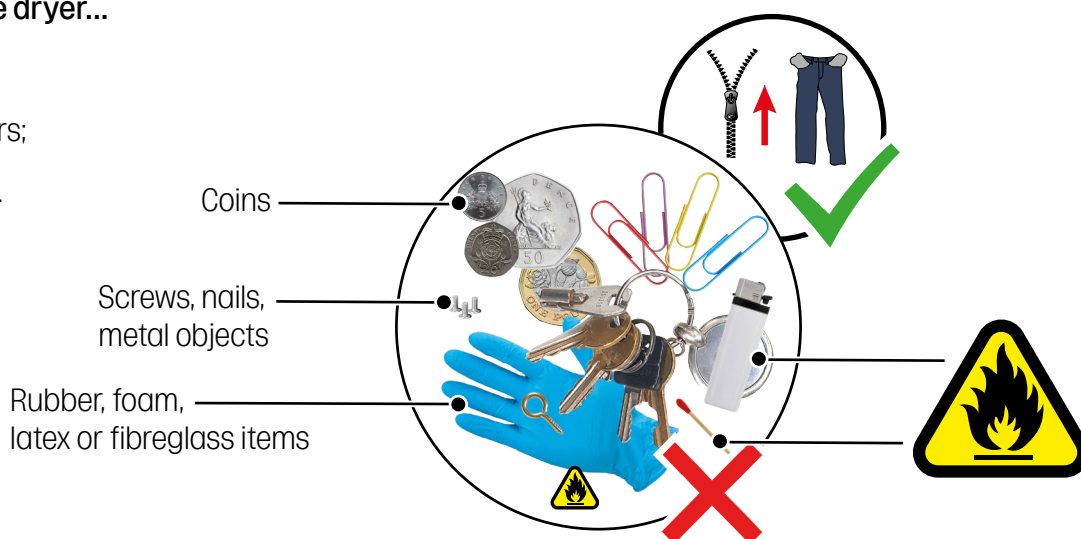


**WARNING:** E-cigarettes, lighters, matches and other flammable items must not be left in pockets.


## Loading the tumble dryer

### ① Open the door

Reach behind the door grip and pull the door open.

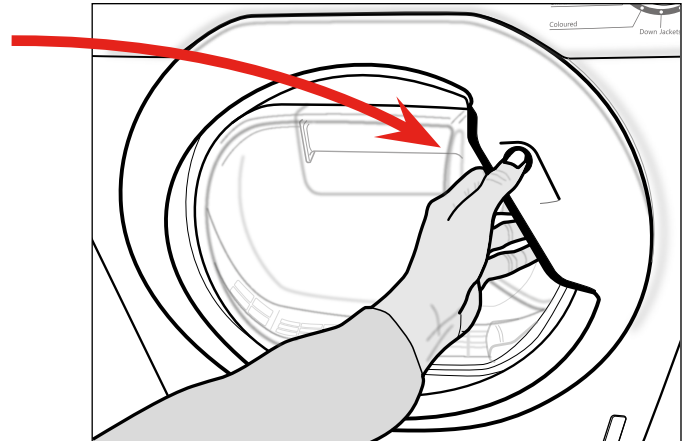



### ② Load the drum

 Note the maximum load for each drying programme. See page 15.

- Check the drum for pets and foreign objects before loading with laundry.
- Do not lean on the door when loading the drum.
- Place clothes loosely into the drum.
- Mixing both large and small items helps distribute the load evenly during tumble drying.
- Put very small or thin items into a drying bag or pillowcase.




 Do not overload the drum.

 **Bulky loads can lead to the door opening.** If this occurs, reduce the load, close the door, then press  to continue the cycle.

### ③ Close the door




 Do not slam shut.

 Ensure there are no garments caught in the door.

# Selecting programmes & setting function


## Quick Start

① Turn the programme selector dial to select the required drying programme (See Programme Guide, page 15).

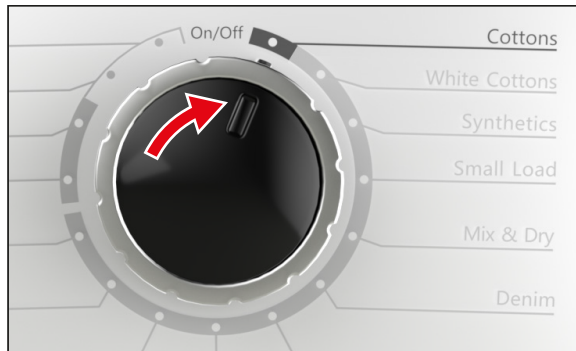


Programme name	Drying time (guide only)	Programme options status
COTTON	2:30	EASY IRON OFF

*Scrolling display*

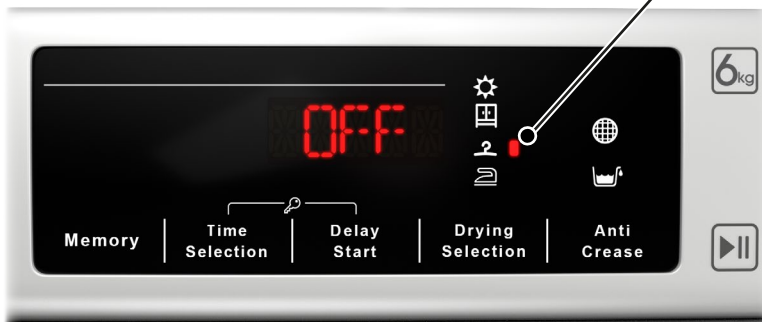

Pre-determined drying selection.

② Press to start the programme cycle.

- Do not open the door during the drying cycle, this will extend drying time.
- If the door is opened during the programme, press  to recommence drying after the door has been closed. **The door handle, drum and load may be hot if you open the door mid-cycle.**



When a programme nears completion, the dryer will enter the **'cool down' phase**. The garments are tumbled in cool air to allow them to cool down. This also ensures they are left at a temperature that prevents them from being damaged.



③ When the cycle is complete, **END** is shown. The drum will rotate alternately to minimise creasing, if anti crease is selected.

④ After drying, turn the dryer off by rotating the dial to the off position then remove the load.



## Automatic Programmes (15)

Use the programme selector dial to select a programme, and then press .

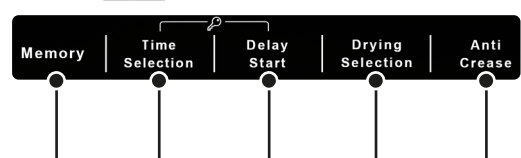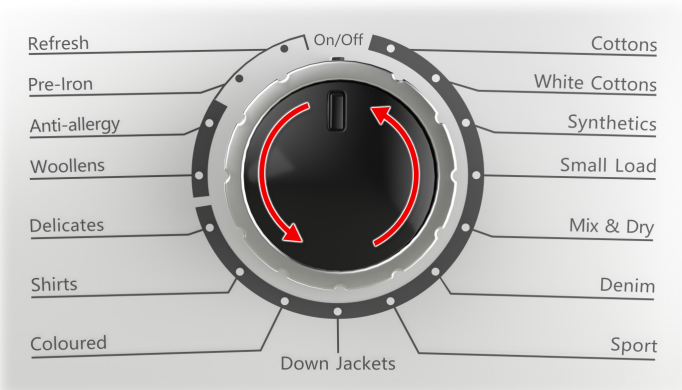


**Additional options** are available via these buttons. Page 19 details programme options & compatibility.



Load dryness is sensed toward the end of the drying cycle. The remaining time displayed may not reflect actual duration. **THIS IS NOT A FAULT.**


## Automatic programmes drying guide (approximate time and energy consumption)

PROGRAMME	DESCRIPTION	CAPACITY 	Default Time Displayed
Cottons	Programme Eco - normal hang dry drying. This is the most energy efficient programme which is also suitable for linens.	Full	
White Cottons	Best cycle to dry cottons, bathrobes and towels.	Full	
Synthetics	For drying synthetic fabrics that require accurate and specific treatment.	3	
Small Load	Dedicated to get an even drying for extremely small loads without the risk of over drying.	2	
Mix & Dry	For drying mixed types of fabric: Cotton, linen, mix, synthetics.	3	
Denim	Use to dry fabrics like jeans and denim. <b>Recommended:</b> Turn items inside-out before drying.	3	
Sport	For sport & fitness items. Dries gently with special care to avoid shrinking and deterioration of elastic fibres.	3	
Down Jackets	Perfect cycle to uniformly dry duvets and quilts, revitalising smoothness of feathers.	3	
Coloured	A delicate and specific cycle to dry dark or colour cotton or synthetic garments.	3	
Shirts	This cycle minimises tangles and folds thanks to specific drum movements. <b>Recommended:</b> Take out linens immediately after the drying cycle.	2	
Delicates	For delicate fabrics requiring accurate and specific treatment.	3	
Woollens	Dries up to 1kg of laundry (around 3 jumpers). <b>Recommended:</b> Reverse all items before drying. Timings can vary due to dimensions and thickness of load and the spin speed chosen during washing. At the end of the cycle, items are ready to be worn but heavier items may be wet at edges; dry these naturally. <b>Recommended:</b> Unload clothes at the very end of the cycle. <b>Note:</b> Felting process of wool is irreversible; please dry exclusively clothes with symbol "OK to tumble". This programme is not suitable for acrylic clothes. See Page 12.	1	
Anti-allergy	A special cycle that dries and reduces the main allergens, such as dust mites, pet hair, pollen and detergent residues.	3	
Pre-Iron	This is a warm cycle that in only 12 minutes helps to relax folds and creases.	2	
Refresh	The perfect cycle to remove odours from linens while also smoothing out creases.	2	

 The real duration of a drying cycle depends upon the starting humidity level of the laundry due to spin speed, type, load capacity, cleanliness of the filters and ambient temperature.


Actual drying time is determined during the cycle; it will vary due to:


- drying level selected
- initial water saturation
- size of load
- ambient temperature
- fabric type
- filter cleanliness



 If a programme is stopped before the end of the drying cycle, quickly remove and spread out the items to allow the heat to dissipate.

## Delay Start


This function allows you to delay the programme start (from 30 minutes up to 24 hours in 30 minute intervals).

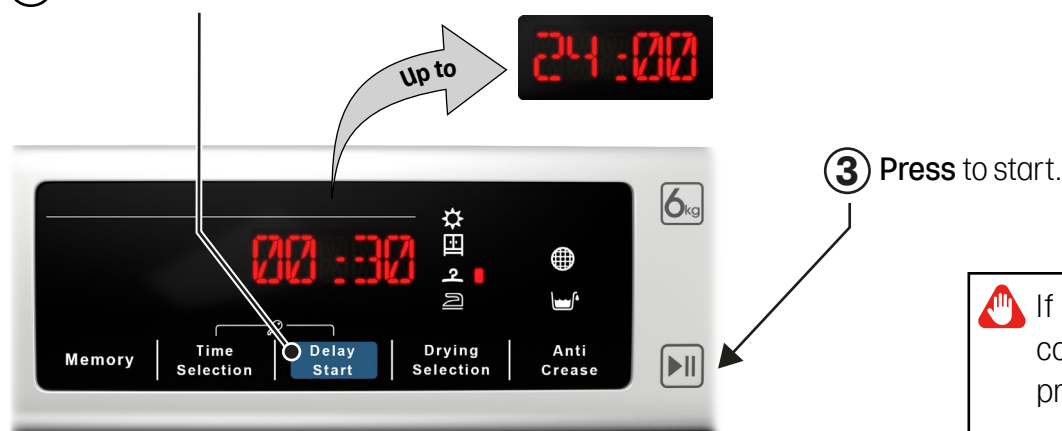- 1 Select a compatible drying programme. 
- 2 Press to set the delay time.





 If the door is opened during countdown, close the door and press  to resume.

The time shown begins to count down to the programme start.


 The delay start function cannot be memorised with the memory function.

## Drying Selection


This function allows you to select the level of dryness for the programme. It can be set before, or up to 3 minutes after starting a programme cycle. **The dryer the drying selection, the longer the drying time.**

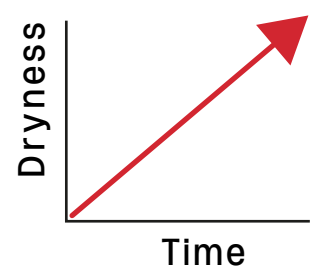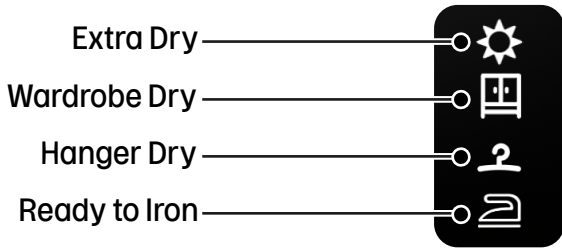


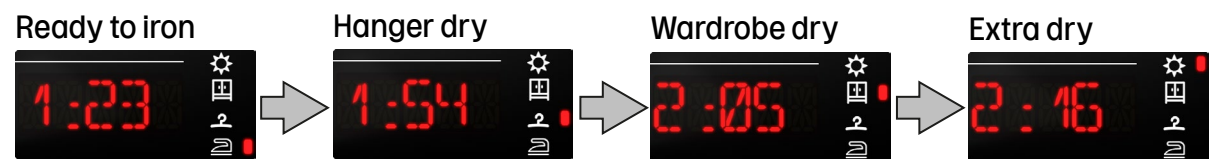
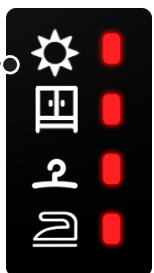
 Actual drying times will vary depending on the chosen drying programme.


- 1 Select a drying programme eg. Mix & Dry 
- 2 Press **Drying Selection** repeatedly to cycle through the 4 dryness levels.



 See page 19 for programmes and options compatibility.

 All LEDs flashing 3 times means the drying selection is incompatible.



- 3 Select additional functions (if available) via the touch buttons if desired.
- 4 Press  to start.




## Time Selection (To set a defined finish time)


Allows you to switch to a manually set drying time for the selected programme, (Ideal for memory selection).

① Select a compatible programme.  eg. white cottons.

② Press  to select drying time in 10 minute increments. We recommend 2:00 to 2:30 hours.

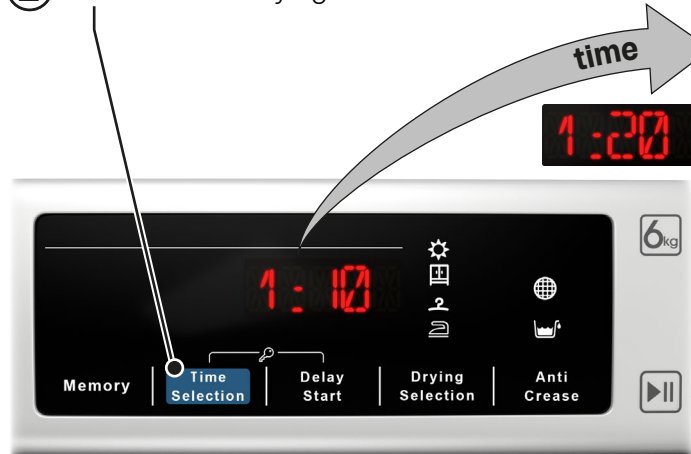




 A low tone indicates that the function is incompatible with the selected programme.

③ Select additional available functions via the touch buttons if desired.


④ Press  to start.

To return to automatic drying, switch the dryer off and then on.

## Anti Crease (Easy Iron)

 Toggles the anti-crease function on / off. **When on...**

- it sets the drying selection level to "Ready to Iron".
- the dryer rotates the drum every 10 minutes (up to 6 hours) both pre-cycle (if Delay Start is used) and after end of the drying cycle.

 This can be activated before or during compatible programmes.

① Select a programme. 

② Press  to toggle Anti Crease (Easy Iron) on and off.













③ Press  to start.

 **To stop anti crease movements**, set the programme selector to **OFF**. 

 A low tone occurs when a programme is incompatible. 


## Child Lock


- This function blocks unwanted changes to options already set during the drying phase.
- Child lock can be toggled ( locked / unlocked) at any time during the cycle.

### To activate Child Lock

① Press **Time Selection** and **Delay Start** simultaneously for 2 seconds. Any set options are locked.



 If the door is opened with Child Lock activated, the cycle stops. The lock remains on.

**To restart:** Deactivate Child Lock then press 

### To deactivate Child Lock:


Press **Time Selection** and **Delay start** touch buttons again.

- The display shows **CHILD LOCK OFF** The settings are unlocked.
- Switching the dryer **OFF** will deactivate Child Lock.



## Memory

This function stores all the options set for the currently selected programme.

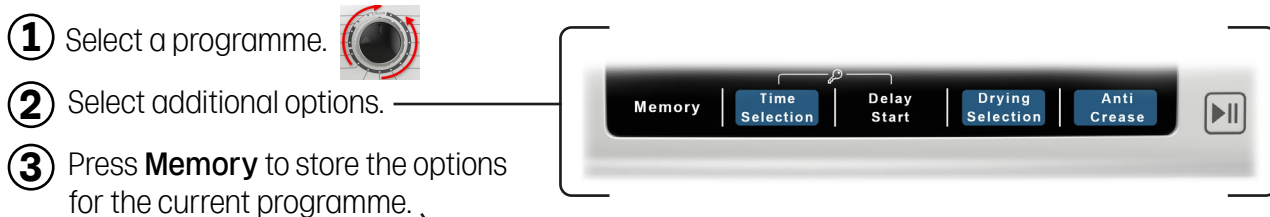This can save time if you use a particular programme and options regularly.



### To recall

- ① Select a programme. 
- ② Press the Memory button. The programme and memorised details are displayed. Press  to start.



## Pausing a programme

Press  to pause the current cycle  **PAUSE** is displayed, followed by the current programme description.

Press  again to re-start. 

## Programmes and options compatibility

Selectable Options					
Programmes	Delay Start	Drying	Time Selection	Anti Crease	Memory
Cottons	✓	●	●	●	✓
White Cottons	✓	✓	✓	✓	✓
Synthetics	✓	✓	✓	✓	✓
Small Load	✓	●	●	●	✓
Mix & Dry	✓	●	●	●	✓
Denim	✓	●	●	●	✓
Sport	✓	✓	●	●	✓
Down Jackets	✓	●	●	●	✓
Coloured	✓	✓	●	✓	✓
Shirts	✓	✓	●	✓	✓
Delicates	✓	✓	✓	✓	✓
Woollens	✓	●	●	●	✓
Anti-allergy	✓	●	✓	●	✓
Pre-Iron	✓	●	●	●	✓
Refresh	✓	●	●	●	✓

## Removing and emptying the water container


Water removed from laundry during drying is collected in the water container located inside the dryer door.

When the container is full the indicator lights.


Water Container




The water container must be emptied after every cycle.

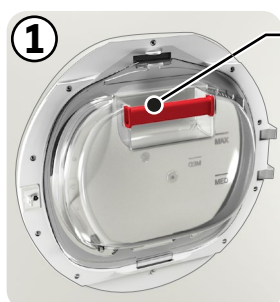


1 Hold the container handle.

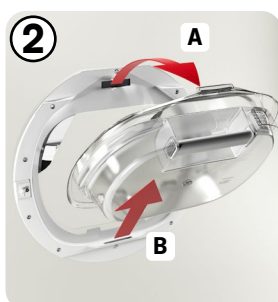

2 Gently pull the container up and out.

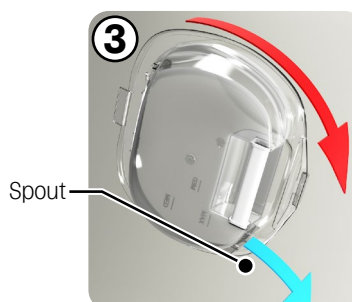

3 Tilt to empty through the spout until empty.

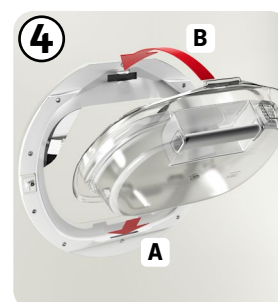

4 Replace the container. (A) Insert (B) Gently push into position until it clicks into place.



Ensure it is the right way up. DO NOT FORCE.

## Care and maintenance



### Ensure the dryer is correctly ventilated

- ⚠ Do not use this machine if it appears to be faulty.
  - Check regularly that airflow through the dryer is not restricted.
  - Prevent items falling and collecting behind the dryer. This may obstruct the air inlet and outlet.
  - Please ensure that any fluff and lint are removed from all accessible areas, including the floor.

### Cleaning the external casing and control panel

- 1 Clean the casing and control panel with a damp cloth and mild detergent.
- 2 Dry with a soft cloth.

⚠ Do not use abrasive pads.

⚠ Solvent based cleaning agents, abrasive cleaners, glass cleaners or multi-purpose cleaning agents can cause damage to plastic surfaces and other parts. Do not use any of these cleaning agents.



**WARNING:** The dryer is not to be used if industrial chemicals have been used for cleaning.

⚠ **Risk of damage due to water ingress.** Do not clean the dryer with a water jet. The pressure of a water jet can cause water to get into the tumble dryer, resulting in damage to components.


### Cleaning the inner door, seal and drum

To prevent the door sticking and build-up of fluff;

- after each use, wipe the inside of the drum and leave the door open for a while to allow air to circulate.

If necessary...

- clean the drum using a suitable cleaning agent; following the manufacturer's instructions on the packaging.
- clean the door seal/gasket after every cycle with a damp cloth or gently vacuum.

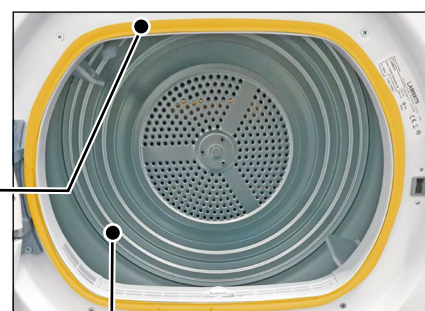


# Cleaning the filters - Important!


**!** Never use the appliance without the filters fitted. If garments are not drying, please check that...

- the filters are clean;
- the condenser filter cartridge is the correct way up.

## Cleaning the fluff filter

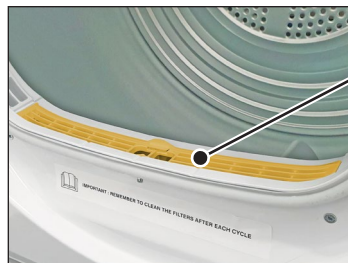

**Fluff Filter**  
Clean after each cycle.

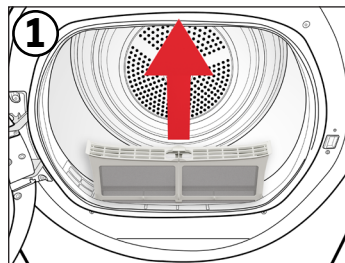


1 Open the door and pull the filter upwards.




2 Open the filter. Gently remove any lint using a soft brush, vacuum or use your fingertips.

Do not use the dryer if the Fluff filter is not in place or is damaged.

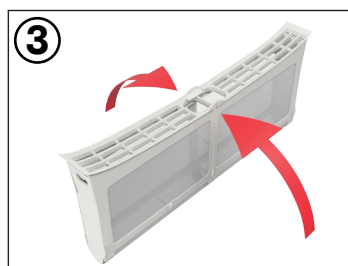

3 Snap the filter back together.

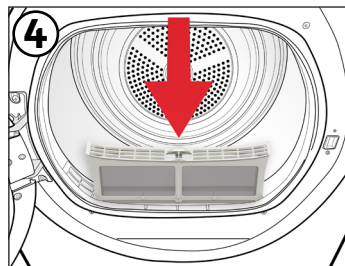


4 Push the filter back into place.



**NOTE:** If filters are washed ensure they are fully dried before use.

**Fluff could be ignited if left to build up in the filters.**


## Cleaning the condenser filters (every 3 cycles)

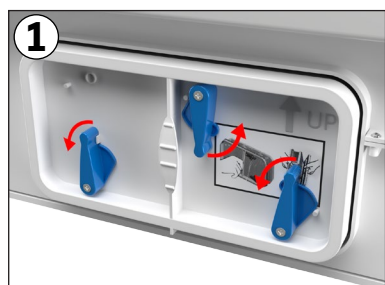


1 To unlock, rotate the 3 levers anti-clockwise.




2 Pull out the filter cartridge using the hand grip.

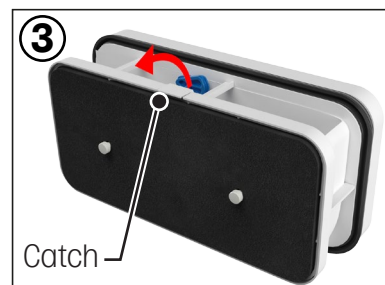

3 Unclip the catch and detach the filter frame.

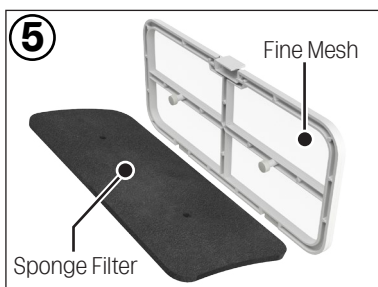

5 Remove the sponge and fine mesh. Gently vacuum or wash. If washed, ensure it is thoroughly dry before use.

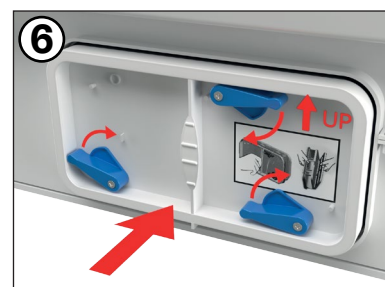

6 To refit, push firmly into place. Rotate the levers clockwise to lock.



Do not use the dryer if the condenser filters are not in place or are damaged. Fluff could be ignited.





# Trouble Shooting

## What might be the cause of...?



Before calling for advice please use this use this checklist. If the problem persists after completing these checks, please call the LAMONA Service Line.

## Things you can remedy yourself

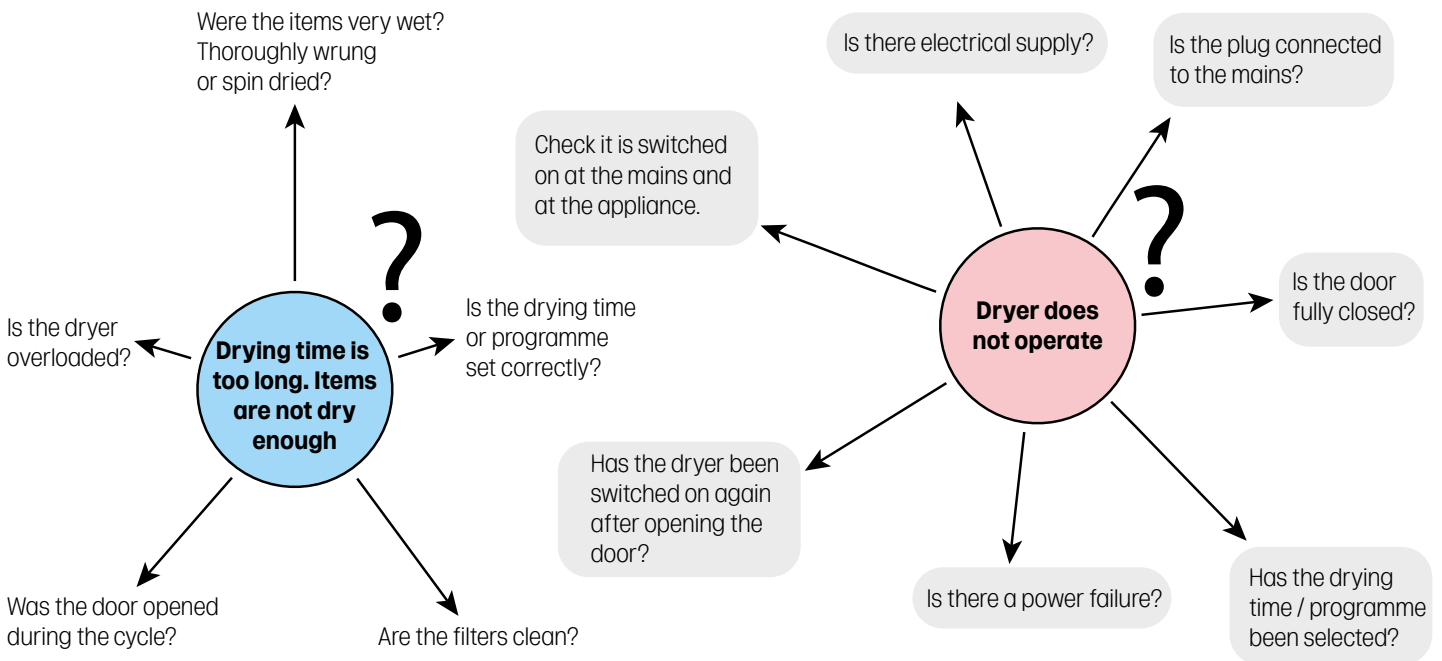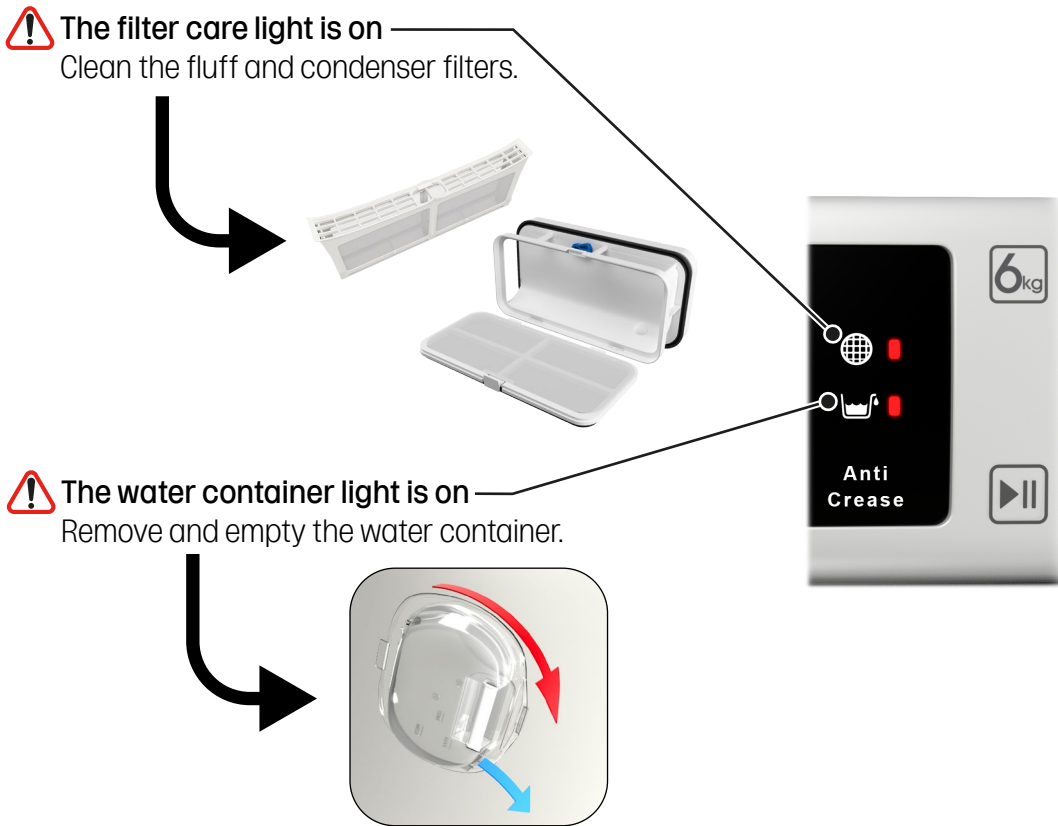

**\* Use in cold conditions below 15°C may lead to condensation, leaving water droplets on surfaces. Normally the dryer's operation will dry the condensation. THIS IS NOT A FAULT.**

## Service

If you have a problem that you cannot resolve after reading this booklet, call the LAMONA Service Line. See page 25.

- For service and repairs, call the LAMONA Service Line.
- Always use genuine spares, available direct from [www.lamonaspares.co.uk](http://www.lamonaspares.co.uk).

To ensure the continued safe and efficient operation of the appliance we recommend that any servicing, repairs or interventions are only carried out by an authorised LAMONA service engineer.

### You may be charged for a service call if a problem with your machine is caused by incorrect installation.

- The manufacturer declines all responsibility in the event of any printing mistakes in this booklet.
- The manufacturer also reserves the right to make appropriate modifications to its products without changing the essential characteristics.

## Technical Specifications

Drum Capacity	78.5 litres
Maximum Load	6Kg
Height	85cm Maximum
Width	60cm
Depth	48.7cm Maximum
Energy Class	A+

Power Consumption: <b>STANDBY</b>	.40W
Power Consumption: <b>ON</b>	.75W

### Test Laboratory Information

#### EN 61121 Programme To Use

DRY COTTON →  COTTON OR  COTTON OR  COTTON OR WHITES 

EASY-CARE TEXTILE → DELICATES OR SYNTHETICS

## Caring for the environment

### Disposal of the packing material



The environmentally friendly, recyclable packaging is designed to protect the appliance from damage during transportation. All packaging materials should be recycled. Recycling reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.


### Disposing of your old appliance



To prevent children shutting themselves inside the dryer, break the door hinges or the door lock.

- To ensure safe disposal, disconnect the mains plug from the socket. Cut the mains power cable and destroy.
- Do not damage pipes carrying refrigerant.

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety.

These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. **Please do not, therefore, dispose of your old appliance with your household waste.** 



Disposing of the device incorrectly could cause fires or poisoning.



This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

- WEEE contains both polluting substances (which can cause negative consequences for the environment) and basic components (which can be reused).
- It is important to have WEEE subjected to specific treatments in order to remove and dispose properly all pollutants and recover and recycle all materials.

Please dispose of at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer for advice.



Energy



Capacity



Time (approx)

	<b>Capacity (kg)</b>		<b>6</b>
	<b>Class</b>		<b>A+</b>
☼ Whites	Energy	kWh	2.39
	Time	Min.	267
☼ Whites	Energy	kWh	2.09
	Time	Min.	242
☐ Cotton	Energy	kWh	1.90
	Time	Min.	210
☐ Cotton ½	Energy	kWh	1.00
	Time	Min.	120
☼ Whites	Energy	kWh	1.52
	Time	Min.	168

### Product Fiché | Specification

Description	Integrated Heat Pump Tumble Dryer
Brand	Lamona
Approvals & Certification	CE, LVD, EMC, RoHS
Model No.	LAM8877, LAM8878 LAM8879
Country of Origin	Turkiye
Supply Voltage	220-240v 50 Hz
Cable Length   Type	3 Core
Fuse Rating	13 amp
IP Rating	IPX4
13A Plug Fitted	YES
Maximum Supply Input (Watts)	900W
Delay Timer	YES
Adjustable Feet	Manual adjust x 4
Door Handle	Fixed
Water Tank Location   Capacity	Inner door   6Kg
Permanent Drain Option	NO
Tank Full Warning   Type	YES   LED
Filter Clean Warning   Type	YES   LED
Noise Level With 6Kg Load (dBA)	67
Audible Cycle End Alert	YES
Auto Standby (Minutes)	10
Standby   ON - Energy Consumption (W)	0.40   0.75



---

# Guarantee

## Product Guarantee Details (UK & Republic of Ireland only).

Your appliance has the benefit of a comprehensive manufacturer's guarantee which covers the cost of breakdown repairs. (Details of which are shown on your Proof of Purchase Document).

- Any claim during the period of the guarantee MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE.
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person. (The guarantee in no way affects your statutory or legal right).

## What to do if you need to report a problem.

- Please ensure you have ready:
  - The product's model and serial numbers.
  - Howdens Proof of Purchase Document.
  - Your full contact details.

Call the Depot number on your Proof of Purchase Document supplied with the product/kitchen.

or

Call the LAMONA Service Line on:

Within UK 0344 460 0006

Within Republic of Ireland 01525 5703

\* Product installed within a domestic kitchen or a non-domestic kitchen where 8 or fewer people are using the appliance.

## Spare parts availability - 10 years

Only fit Genuine Spare Parts

[www.lamonaspares.co.uk](http://www.lamonaspares.co.uk) (UK only)

Where to find the model and serial number on the dishwasher.	Open the door; placed around the door seal.
--------------------------------------------------------------	---------------------------------------------







Product serial number  
(Place sticker here)

# LAMONA



Product information correct at the time of publication in March 2023.  
The company has a policy of continuous product development and reserves the right to change any products and specifications given in this manual. Subject to the Terms and Conditions of Trading, a copy of the Howdens Terms and Conditions is available upon request.  
Copyright © 2021 Howden Joinery Ltd. All rights reserved.

Howden Joinery Ltd.  
Thorpe Road, Howden, East Yorkshire. DN14 7PA England  
Howdens Cuisines SAS. Z.A. du Bois Rigault Nord,  
1 Rue Calmette, 62880 Vendin-le-Vieil, Cedex, France