

LAMONA

at the heart of the kitchen

Freestanding Condenser Tumble Dryer

FLM8802
FLM8803



User Instructions

Register 
my appliance

ISSUE v1.4 070823



Free 3 year guarantee

Call now¹

Within the UK:

0333 010 0009

Within Republic of Ireland:

01525 5752

Alternatively, visit www.howdens.com/appliance-registration

LAMONA

**3 year guarantee available.
Register your appliance within 90 days²**

By registering your appliance and creating an account, we will keep you up to date with the latest product information and notify you immediately of any important product updates

¹Lines are open Monday to Friday 9am to 5pm. Calls will be charged at your local rate and may be recorded and monitored for training and quality purposes.

²So that in the event of an important product update, or recall, we can contact you.

Register 
my appliance

Welcome

Dear Customer

Congratulations on your choice of energy efficient tumble dryer.

- This tumble dryer complies with all current local and national safety requirements; however, inappropriate use could lead to personal injury and damage to property.
- Please read these user instructions carefully before using the tumble dryer. It contains important information on safety, use and maintenance. This prevents both personal injury and damage to the appliance.
- It is important that the installation instructions are followed carefully.
- Please keep these instructions in a safe place for your future reference.

This appliance is intended to be used in household and similar domestic applications, see guarantee page for definition of domestic use.

The **CE** and **UKCA** marks on this product confirm compliance to all relevant UK and European safety, health and environmental requirements which are applicable in legislation for this product.

Throughout this manual the following symbols are used.

	Warning for Serious injury or death risk.
	Warning for electric shock.
	Warning for risk of fire / flammable materials.
	Warning for injury or property damage risk.
	Warning for hot surfaces. Surface temperature may rise above 60°C.
	Important / note for operating the system correctly..

Caring for the environment

Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Disposing of your old appliance



Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety.

These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.

Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer for advice.

Contents

Register my tumble dryer	p.2	Programmes	p.13
Welcome	p.3	Additional programme options	p.15
Caring for the environment	p.3	Standby	p.15
Disposal of the packing material	p.3	Drying Level	p.16
Disposing of your old appliance	p.3	Delicate	p.16
Key points for user	p.5	Anti-crease	p.16
Latest in drying technology	p.5	Delay Start	p.17
Warning and safety information	p.6	Time Drying	p.17
Correct application	p.6	Child Lock	p.17
Safety with children	p.6	End of programme	p.18
Technical safety	p.6	Open the door and remove the laundry	p.18
Electrical connection	p.7	Cleaning and care	p.19
Risk of fire and explosion	p.7	Ensure the dryer is correctly ventilated	p.19
Accessories	p.8	Cleaning the external casing and control panel	p.19
Cautions when using the dryer	p.8	Cleaning the inner door, seal and drum	p.19
Permanent drain outlet option	p.8	Cleaning the filters	p.20
Operating the tumble dryer	p.9	Cleaning the condenser grille	p.20
Tumble dryer overview	p.9	Problem solving	p.21
Control panel	p.9	Technical specifications	p.22
Minimum clearances	p.9	Information	p.22
Environmentally friendly and energy efficient drying	p.10	Error codes	p.23
Items unsuitable for tumble drying	p.10	Product fiché	p.24
Preparing the laundry	p.10	Guarantee	p.25
Sorting the laundry	p.11		
Check garments for foreign objects	p.11		
Loading the tumble dryer	p.12		
Open the door	p.12		
Load the drum	p.12		
Close the door	p.12		
Select a programme	p.12		
Select additional options	p.12		
Press Start/pause	p.12		

Key points for user

 
Latest in drying technology



Heat pump tumble dryers are very energy efficient and dry differently to 'older technology' dryers.



Heat pump tumble dryers are more gentle on fabrics.



Drying temperatures are lower; clothes may initially feel 'damp' when removed from the dryer. This is normal. After a few minutes the clothes will feel 'dry'



Programme drying time is variable. This is normal. Sensors detect remaining moisture in the laundry and adjust the drying time. Load size & moisture level affect the programme time.



Drying times are longer. This is normal. This is due to the new 'low energy' technology.




New noises! - This is perfectly normal from the new technology.





Note Recommend minimum ambient temperature is +5°C.

DO NOT use in temperatures lower than +5°C. The dryer may be damaged!

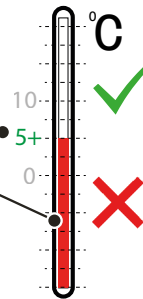

Every 3x months remove the cover plate and vacuum clean the condenser grilles.

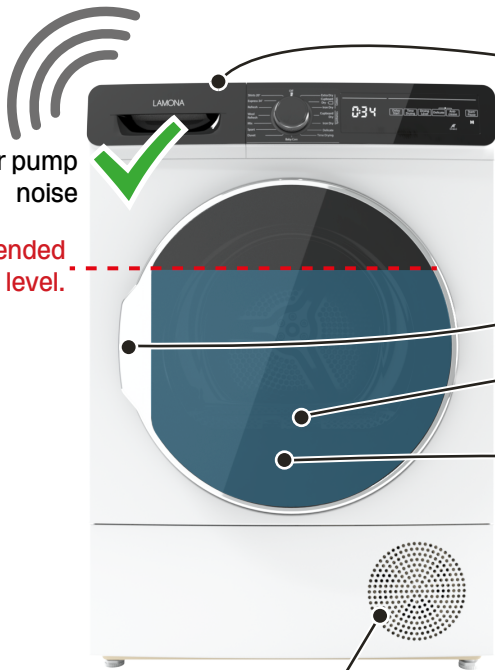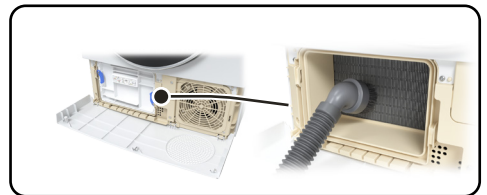

Water pump noise ✓

Recommended Max. load level.

NEVER open the door until the end of the drying cycle! If opened the drying time will be extended.

Compressor motor noise ✓

Keep the grille clear.



Empty the water tank every time.



Clean the fluff filters every time

 


Clean the drum sensors 4x per year.

There is risk of damage to valves, pumps and hoses if water is allowed to freeze in the hydraulic circuit.



The dryer can be stacked upon a LAMONA freestanding washing machine using stacking frame FLM0001 / FLM0002.



Warning and safety information



Please read these instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and/or damage. Always keep the instructions with the tumble dryer for future reference.

Please take appropriate care when installing, maintaining, cleaning and operating the tumble dryer.

Correct application

- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments .
- The tumble dryer is not intended for outdoor use or commercial use.
- It must be used only as a domestic appliance to dry items which are specified by the manufacturer as being dryable on the wash care label. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.
- The tumble dryer may be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it safely and recognise and understand the consequences of incorrect operation.

WARNING: Misuse may create a fire hazard.



Safety with children

- Children under 3 years of age must be kept away from the tumble dryer unless they are constantly supervised.
- Children 8 years and older may only use the tumble dryer unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.

- Children must not be allowed to clean or maintain the tumble dryer unsupervised.
- Please supervise children in the vicinity of the tumble dryer and do not let them play with it.

Technical safety


- Please observe the instructions and "Technical data" in this guide.



Before installing the tumble dryer, check it for any externally visible damage. Do not install or use a damaged machine.

- Before connecting the tumble dryer, ensure that the connection data on the data plate (fuse rating, voltage and frequency) match the mains electricity supply. If in any doubt, consult a qualified electrician.
- Reliable and safe operation of this tumble dryer can only be assured if it has been connected to the mains electricity supply.
- The electrical safety of this tumble dryer can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt, please have the wiring system of the building tested by a qualified electrician. **LAMONA** cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).
- **Do not** connect the tumble dryer to the mains electricity supply by a multi-socket adapter, extension lead or similar. These do not guarantee the required safety of the machine (fire hazard due to the risk of overheating).
- Faulty components must only be replaced by genuine **LAMONA** original spare parts. Only when these parts are fitted can **LAMONA** guarantee the safety standards of the machine.
- The electrical socket must be easily accessible after installation so that the machine can be disconnected from the electricity supply if necessary.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side of the tumble dryer, in such a way that blocks the full opening of the tumble dryer door.

- Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability. Repairs should only be undertaken by a **LAMONA Service Engineer**, otherwise any subsequent damage will not be covered by the warranty.
- If the electrical connection cable is faulty it must only be replaced by a **LAMONA Service Engineer** to protect the user from danger.
- Do not touch the appliance when hands or feet are wet.
- Do not lean on the door when loading the machine or use the door to lift or move the appliance.
- The machine must not be used in a non-stationary location (e.g. on a ship).

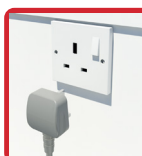






The machine must be isolated from the electricity supply when cleaning; during maintenance and in the event of a fault.



- In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the warranty.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched and off by a utility.

Electrical connection


- Please ensure the plug is accessible after installation.
- Should you need to replace the plug; the wires are coloured as follows:

Blue - Neutral	
Brown - Live	
Green / Yellow - Earth	

The **blue**  wire must be connected to the terminal which is marked with the letter '**N**' or coloured **BLACK** .

The **brown**  wire must be connected to the terminal marked with the letter '**L**' or coloured **RED** .

The **green and Yellow wire**  must be connected to

the terminal which is marked with the letter '**E**' or  symbol. **If the power cable is damaged it must be replaced by a qualified electrician.**

Correct use

- **Do not** install the tumble dryer in a room where there is a risk of frost. Frozen hoses may burst or split. The reliability of the electronic control unit may be impaired at temperatures below freezing point.

Your product is designed to work at temperatures between 5-35°C,

- Lint and fluff must not be allowed to collect on the floor around the machine
- Take care to ensure that foreign objects (e.g. nails, pins, coins, paper clips) do not find their way into the machine with the laundry. These may damage components of the machine, it's surroundings and the laundry.
- Observe maximum load limits for laundry. See the **Programme chart** for the maximum recommended loads for individual programmes.
- Machine cleaning must follow the manufacturer's instructions. **LAMONA** cannot be held responsible for any damage resulting from these treatments.
- Always remove the plug before cleaning the dryer.



Risk of fire and explosion

This dryer contains R290 (flammable eco-sustainable refrigerating gas). Keep open flames and sources of ignition away from the appliance.

- Due to safety reasons, legislation forces a room of at least 1m³ per 8g of refrigerant for such equipment. For 110g, the minimum allowed room size would be 13.75m³
- **Do not** use solvent based cleaning agents, e.g. those containing benzene, in or on this machine, as this may result in damage to component parts and create toxic fumes. Such agents also pose a fire and explosion hazard.
- The dryer must have adequate ventilation; at least a 20mm gap must be maintained between the machine and any obstruction. The space between the bottom of the dryer and the floor must not be obstructed. Check regularly that airflow through the dryer is not restricted.

- Do not dry unwashed items.
- Laundry that has previously been, soiled or stained with petrol/gas, dry cleaning solvents or other inflammable/combustive substances must not be dried in the machine since they can emit inflammable/combustive vapour.
- Textiles which have been pre-treated in solvent based cleaning agents must be thoroughly rinsed in clean water before being dried in the machine.
- Laundry soiled with vegetable oil, alcohol, petrol, gas, oil, stain remover, turpentine, wax or wax remover must be washed with hot water and detergent before drying.
- Rubber, (latex) foam, shower caps, waterproof fabrics and rubber-reinforced / rubber-foam pillows and footwear are not suitable for drying in this appliance.
- Do not dry clothes soiled with industrial chemicals.
- **Do not use the appliance if the fluff filter is not in position or is damaged. Fluff could be ignited.**
- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.

Accessories

- Accessory parts may only be fitted when expressly approved by **LAMONA**. If other parts are used, warranty, performance and product liability claims will be invalidated.

Cautions when using the dryer

- Do not use the machine to dry large laundry such as tulle, curtains, heavy blankets or rugs. Your laundry may be damaged.
- Do not dry unwashed laundry in the machine.
- Underwear with metal supports must not be dried loose in the machine. Metal supports might come off during the drying process and damage the machine. Place these garments in a bag or a pillowcase.
- Do not use the machine to dry leather clothes or clothes that contain leather (such as leather labels on jeans). The colour of the leather parts might affect other fabrics
- Do not overload the machine. Observe the maximum load levels stated for the drying programmes.

- Do not let pets enter the product. Check inside the drum before using the appliance.
- Cool Down: **Do not** touch the drum or door area with bare hands after drying, these surfaces may become hot. Temperature rise during operation may be in excess of 60°C.
- Do not stop the machine before the drying programme is completed. If you have to do so, remove all laundry, place it in an appropriate place and wait for it to cool down. The dryer's final stage is cooling. This keeps the laundry at a certain temperature to ensure that it is not damaged.



If the drying programmes are interrupted (due to programme cancellation or power failure), the laundry in the machine might be hot. Be careful.

It is essential that the filters, condenser grilles and water tank are regularly cleaned and emptied to ensure optimum drying performance.




If there is a problem you cannot solve by reading these instructions; switch off and unplug the machine and call the Authorised Service Agent.

LAMONA cannot be held liable for damage caused by non-compliance with these warning and safety instructions.

Permanent drain outlet option (*Part no. A42180316)


- Instead of emptying the water tank, you can use a water drain hose (*Not Supplied) to directly drain outside.

-  **Ensure appliance is unplugged.**
Screw type: Torx 15.

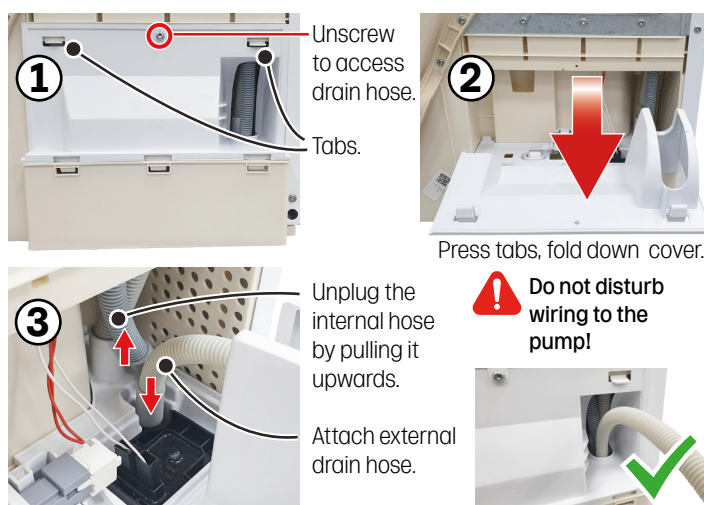


Operating the tumble dryer

Tumble Dryer Overview

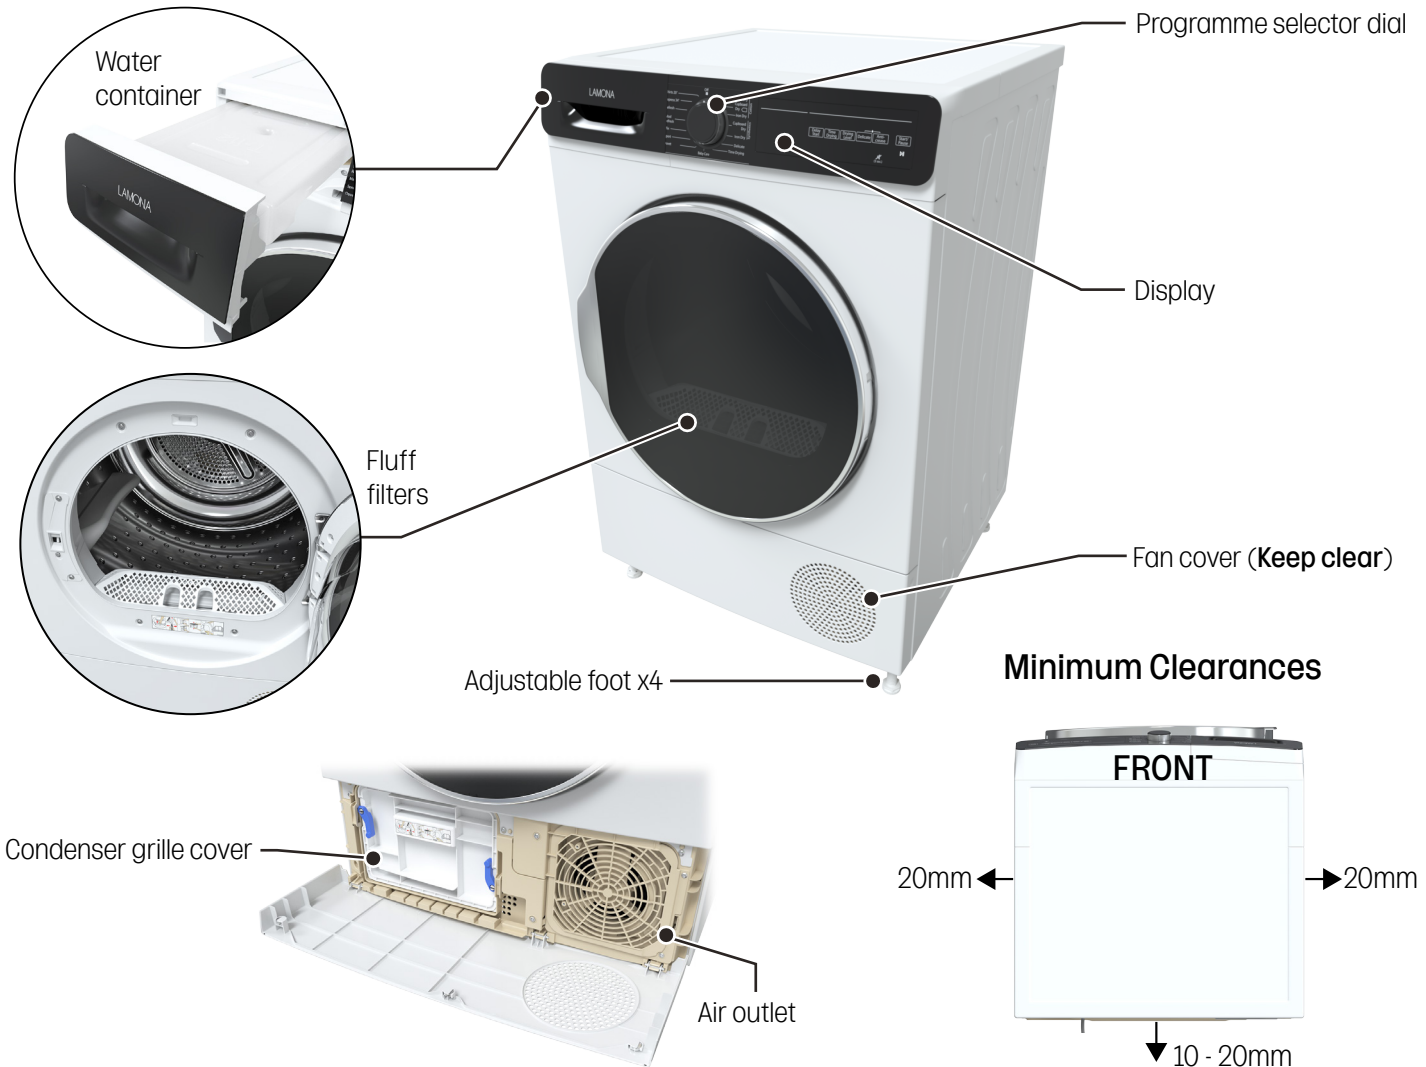

Control panel

- | | | | |
|-----------------------------|------------------------|--|--------------------------------------|
| 1. Programme selection knob | 5. Time Drying button | 9. Anti-crease button
(Long pressing Anti-crease toggles audio tones on/off). | 11. Start / Pause button |
| 2. Display | 6. Drying Level button | 10. Anti-crease indicator | 12. Start / Pause indicator |
| 3. Delay Start indicator | 7. Delicate button | | 13. Empty water tank indicator |
| 4. Delay Start button | 8. Delicate indicator | | 14. Clean condenser grille indicator |

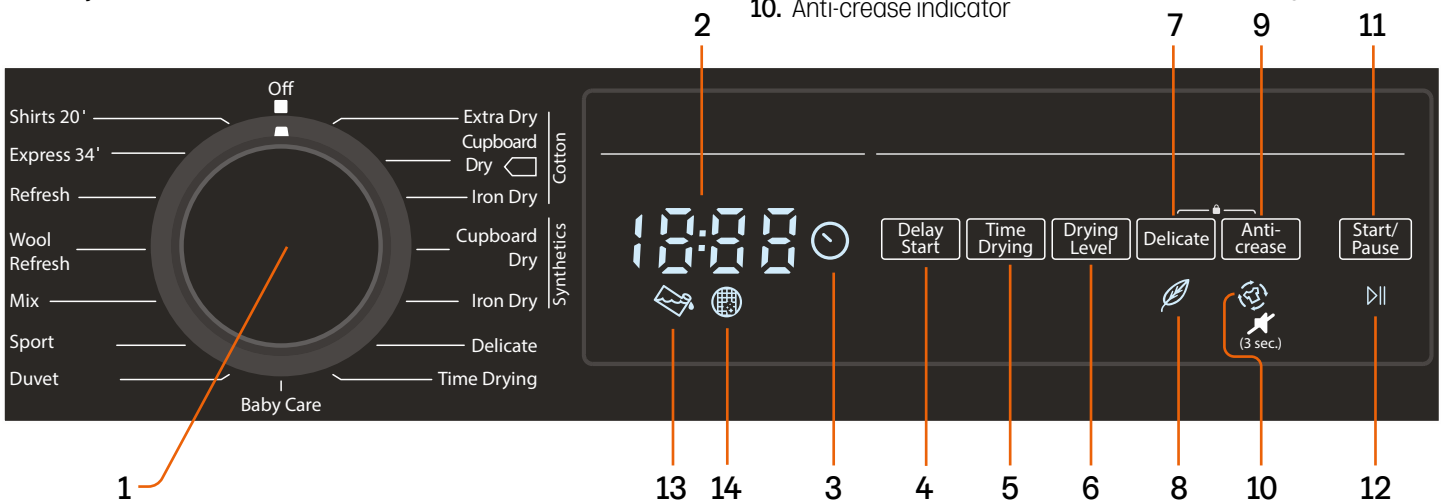




Environmentally friendly and energy efficient drying.

- When in use ensure that the environment around the dryer is well ventilated.
- Only put laundry into the dryer that has been thoroughly wrung/spin dried at the highest speed possible. This will shorten drying time and reduce energy consumption.
- Always check that the fluff filters and condenser grille are clean before each use.



After each use, ensure the filters are free from hair / lint.



- **Never** put dripping wet items into the dryer, this may damage the appliance
- Make sure the same same kinds of laundry are dried together.
- Do not add new (wet) laundry during the drying process.
- **Do not open** the door during the drying cycle, this will extend drying time. If you do open the door, close it as soon as possible.
- The Cotton Cupboard Dry  programme is the standard drying programme that can be run with a full or half load and for which the information is given on the label and product receipt. This programme is the most energy efficient programme to dry normal wet cotton clothes.
- Operate the dryer to full capacity, but make sure that it is not overloaded.
- Please follow the recommendations in this manual for programme selection.
- For air circulation, leave a minimum clearance of 20mm around the machine.



Do not cover the grille!

Preparing the laundry

Items unsuitable for tumble drying:

- Wool, silk, nylon items.
- Delicate embroidery
- Fabric with metallics decoration.
- Footwear
- Garments with PVC / leather trimmings.
- Fabric containing glass fibre.



Items soiled with the following must be washed thoroughly in hot water and detergent before tumble drying.


- Alcohol.
- Petrol or gas.
- Stain remover.
- Turpentine.
- Wax remover.





Sorting the laundry

1 Sort by care symbols

Follow the instructions on the labels of the laundry to be dried. Only dry items that have a statement/symbol that indicates “they can be dried in a dryer”

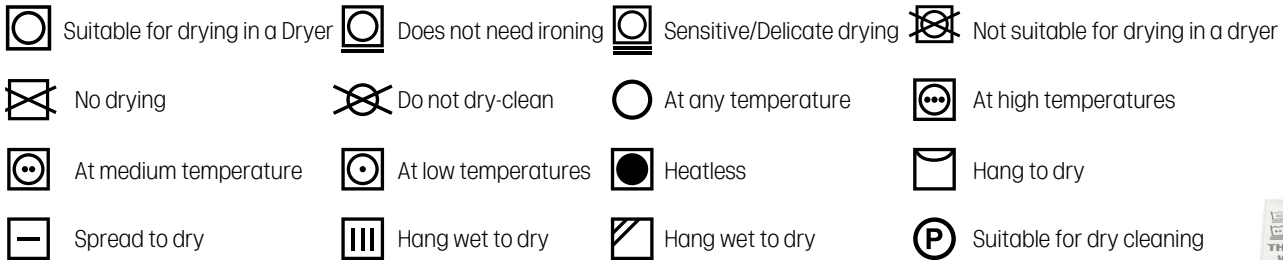

Do not operate the appliance with load amounts and laundry types other than those specified in these instructions.

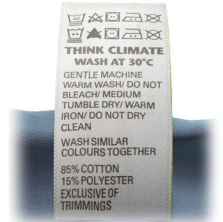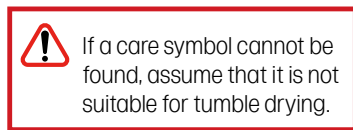

- Do not dry thin, multi-layer or thick-layer fabrics together as they dry at different levels. For this reason, dry clothes together that have the same structure and fabric type. This way you can get an even drying result. If you think that the laundry is still wet, you can select a time programme for additional drying.

1 Sort by thickness

Please dry your large (like duvets) and small sizes of laundry separately in order to prevent damp laundry.



2 Sort by fabric

Where a load is larger than the dryer's capacity; separate the items according to thickness, e.g. separate towels from thin shirts and underwear.


Fabric Type	Description
Cotton / Linens	Towels, cotton, jersey, bed and table linen.
Synthetics	Blouses, shirts, overalls etc. made of polyester or polyamide; as well as cotton and synthetic mixes.

! Check garments for foreign objects

Foreign objects can cause damage to garments. and the tumble dryer.

Before loading the tumble dryer:


- Empty all pockets.
- Close zips and fasteners.
- Turn articles inside out.

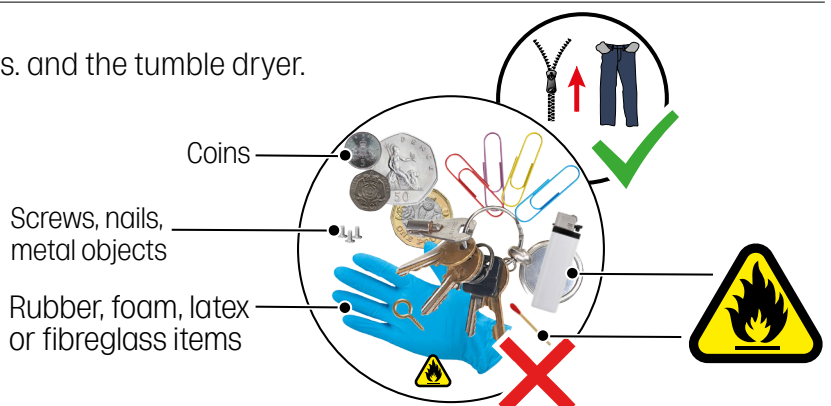

WARNING: E-cigarettes, lighters, matches and other flammable items must not be left in pockets.

Loading the tumble dryer

① Open the door

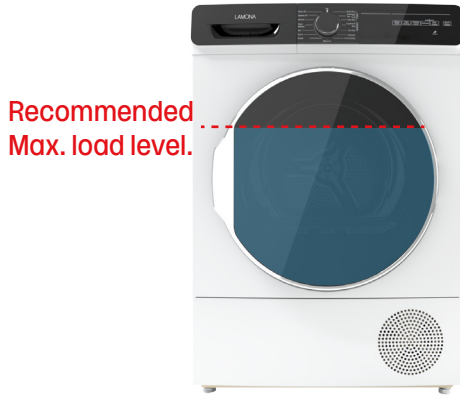

Reach behind the door grip and pull the door open.




② Load the drum

Note: Do not load the dryer with more laundry than the amount shown in the programme table. When overloaded, the drying performance will be reduced and laundry might be damaged.

- Check the drum for pets and foreign objects before loading with laundry
- Do not lean on the door when loading the drum.
- Place clothes loosely into the drum.
- Put very small or thin items into a drying bag or pillow.





Laundry	Dry load weight (gr)
Bedsheet (double)	725
Pillowcase	240
Bath Towel	700
Hand Towel	225
Shirt	190
Jean	650
Fabric - Gabardine Trousers	400
T-Shirt	120

Bulky loads can lead to the door opening. If this occurs, reduce the load, close the door, then press  to continue the cycle.

③ Close the door




 Do not slam shut.

 Ensure no garments are caught in the door

④ Select a programme


Use the programme dial to select a programme.

(See programme tables).

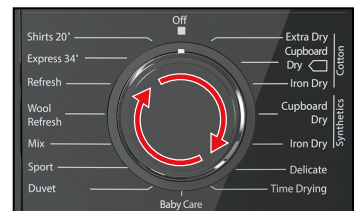

⑤ Select additional options

(See option tables).

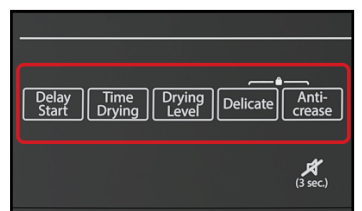


⑥ Press

(Press and hold for approximately 2 seconds).

Programmes

If you opening the door when the programme is running, the product will switch to standby mode. Once the door has been closed, press the Start/Pause key to resume the programme. Do not open the door when the programme is running. If you have to open the door, do not keep it open for a long time.

Cotton Extra Dry	Description	Drying Time
Maximum Load: 9Kg	Dries thick and multi-layer fabrics, such as cotton towels, bedsheets, pillowcases, bathrobes, at a high temperature to allow you to place them in a closet.	4:27 Default Displayed

Cotton Cupboard Dry	Description	Drying Time
Maximum Load: 9Kg	Dries cotton pyjamas, underwear, tablecloths etc. to allow you to place them in a closet.	4:20 Default Displayed
 The Cotton Cupboard Dry programme is the standard drying programme that can be run with a full or half load and for which the information is given on the label and product receipt. This programme is the most energy efficient programme to dry normal wet cotton clothes.		

Cotton Iron Dry	Description	Drying Time
Maximum Load: 9Kg	Dries cotton laundry to prepare it for ironing. Laundry removed from the machine will be damp.	3:48 Default Displayed

Synthetics Cupboard Dry	Description	Drying Time
Maximum Load: 4.5Kg	Dries synthetics, such as shirts, t-shirts, blouses, at a lower temperature compared to the cottons programme to allow you to place them in a closet.	1:31 Default Displayed

Synthetics Iron Dry	Description	Drying Time
Maximum Load: 4.5Kg	Dries synthetics, such as shirts, t-shirts, blouses, at a lower temperature compared to the cottons programme to prepare them for ironing. Laundry removed from the machine will be damp.	1:09 Default Displayed

Delicate	Description	Drying Time
Maximum Load: 2Kg	Dries thin clothes like shirts, blouses and silk garments at a low temperature to make them ready to wear.	1:02 Default Displayed

Time Drying	Description	Drying Time
Maximum Load: 0.5-9kg	To reach the required drying level at a low temperature, you can use the time programmes of 20 min. to 200 min. Regardless of the drying level, the programme stops at the desired time.	0:20 - 3:20 Default Displayed

Baby Care	Description	Drying Time
Maximum Load: 3Kg	This programme dries delicate infant clothes at a low temperature to make them ready to wear.	1:29 Default Displayed

Programmes (continued)

Duvet	Description	Drying Time
Maximum Load: 2.5Kg	This programme is used to dry duvet.	2:12 Default Displayed

Sport	Description	Drying Time
Maximum Load: 4Kg	Sport program is used for synthetic sport laundries like shorts, t-shirts at low temperature.	1:29 Default Displayed


Mix	Description	Drying Time
Maximum Load: 4Kg	This programme dries cotton-synthetic mixed garments that do not discolour to make them ready to wear.	1:57 Default Displayed

Wool Refresh	Description	Drying Time
Maximum Load: 4Kg	This programme dries cotton-synthetic mixed garments that do not discolour to make them ready to wear.	0:05 Default Displayed

Refresh	Description	Drying Time
Maximum Load: 4Kg	Time drying option is selected from 10 minutes to 120 minutes without providing hot air, refresh is done and bad odours can be eliminated.	0:10 Default Displayed

Express 34'	Description	Drying Time
Maximum Load: 1Kg	1 kg of synthetic shirts spun at a high speed in the washing machine are dried in 34 minutes.	0:34 Default Displayed

Shirt 20'	Description	Drying Time
Maximum Load: 0.5Kg	2 to 3 shirts are ready for to be ironed in 20 minutes.	0:20 Default Displayed

 **IMPORTANT:** Do not open the door while the programme is running. If you have to open the door, do not keep it open for a long time.

NOTE: If no programme is selected / dryer is not started within 15 minutes,  blinks on the display.

Wash load not dry enough? See drying level options.

- Did you wait 2-3 minutes after removing the laundry to test dryness?
- Did you need to select a higher drying level?
- Was the drum overloaded for the programme selected?
- Were thick and thin fabrics being dried together?
- Were the filters cleaned?
- Is the water tank full?
- Was the door opened during the cycle?

Additional programme options

Programmes	Options compatibility					
	Delay Start	Child Lock	Time Drying	Drying Level	Anti-crease	Delicate
Cotton Extra Dry	✓	✓	•	✓ *	✓	✓ *
Cotton Cupboard Dry	✓	✓	•	✓ *	✓	✓ *
Cotton Iron Dry	✓	✓	•	✓ *	✓	✓ *
Synthetics Cupboard Dry	✓	✓	•	✓ *	✓	✓ *
Synthetics Iron Dry	✓	✓	•	✓ *	✓	✓ *
Delicate	✓	✓	•	•	✓	✓ Default
Time Drying	✓	✓	✓	•	✓	•
Baby Care	✓	✓	•	✓ *	✓	✓ *
Duvet	✓	✓	•	•	✓	✓
Sport	✓	✓	•	✓ *	✓	✓ *
Mix	✓	✓	•	✓ *	✓	✓ *
Wool Refresh	✓	✓	•	•	✓	•
Refresh	✓	✓	✓	•	✓	•
Express 34'	✓	✓	•	•	✓	•
Shirts 20'	✓	✓	•	•	✓	•
<p>✓ Selectable</p> <p>• Not selectable * Note: 'Drying Level' and 'Delicate' cannot be selected at the same time.</p> <p>Audio Tones (ON/OFF): Long pressing the Anti-crease button for 3 seconds will toggle audio tones ON / OFF.</p> <p>This function is available for all programmes.</p>						

Standby


After 15 minutes without user action in selection mode, the dryer goes into to energy saving mode to decrease energy consumption. The **---** indication blinks. During this mode LED luminosity is reduced. To restart the machine rotate the programme selector dial to **OFF** and select the programme again.

Additional programme options

Drying Level

Usage	Sets the drying level. L0, L1, L2, L3 . This adds extra time to the selected programme to increase the level of dryness if desired.
-------	--

1. Select a compatible programme using the programme dial.

2. Press  repeatedly to select a desired drying level.



The updated programme drying time is displayed.




3. Press  to start the programme. (Press and hold for approximately 2 seconds).

Delicate

Usage	This option dries delicate fabrics for longer at a lower temperature..
-------	--

1. Select a compatible programme using the programme dial.

2. Press  The delicate indicator is displayed 

3. Press  to start the programme. (Press and hold for approximately 2 seconds).

Anti-crease

Usage	If you do not open the door after a programme has finished, the dryer will automatically go into anti-crease mode, tumbling the laundry intermittently for 1 hour to prevent creases. Use this function to extend the default time to 2 hours.
-------	--

1. Select a programme using the programme dial.

2. Press  The anti-crease indicator is displayed 


3. Press  to start the programme. At programme end the dryer will enter 2hour anti-crease mode.

Additional programme options (continued)

Delay Start

Usage	Allows programme start time to be delayed by 1 to 23 hours (1 hr. intervals). Once the time has elapsed, the programme will start automatically.
Tip	Long pressing the Delay Start button will increase the time continuously.

1. Select a programme using the programme dial.

2. Press  repeatedly to set the delayed start time.



Minimum time

Maximum time


3. Press  to start the programme.

The delayed start time flashes.  stops flashing and remains on.

The programme will automatically start when the time set has elapsed.

Time Drying

Usage	Use this option to set a time period for drying between 0:20 and 3:20 hours.
Tip	Long pressing the Time Drying button increases the time continuously.

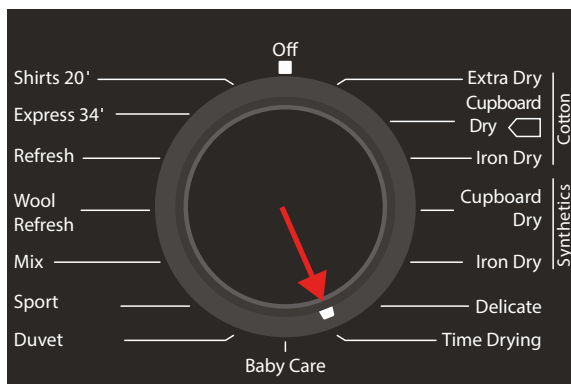

1. Rotate the programme dial to time drying.

2. Press   repeatedly to set the drying time.

Long pressing the button increments the time continuously.






Minimum time

Maximum time




Child Lock

Usage	Prevents changes being made by buttons or programme dial during a programme.
Tip	Child Lock is not automatically deactivated after programme end. You must deactivate it.

To Activate:

Press   buttons simultaneously for 3 seconds.  is displayed for 2 seconds. The display then reverts to the currently selected programme display.

To Deactivate:

Press   buttons simultaneously for 3 seconds.  is displayed for 2 seconds followed by 2 beeps. The display then reverts to the current programme as above.

End of programme

Open the door and remove the laundry

Once the programme has finished, an audible warning sounds and the following indicators are displayed on the control panel.

	Empty water tank.
Filter Clean	Start / Pause

Note: The appliance includes an LED drum light. This works automatically when the door is opened. The light goes off automatically after a short period of time.



Open door and remove laundry.

<p>Empty water tank every time.</p>	<p>Clean fluff filter every time.</p>
<p>Clean Condenser grille (every 3 months).</p>	<p>Clean drum sensors 4 times a year.</p>



LED drum light comes on.

Note: If you do not take out the laundry after the programme has ended, the 1-hour anti-crease phase will automatically be activated. This programme rotates the drum at regular intervals to prevent creases.

Cleaning and care



Ensure the dryer is correctly ventilated

! Do not use this machine if it appears to be faulty.

- Check regularly that airflow through the dryer is not restricted.
- Prevent items falling and collecting behind the dryer. This may obstruct the air inlet and outlet.
- Please ensure that any fluff and lint are removed from all accessible areas, including the floor.

We recommend periodic cleaning of the appliance every 2 months.

Cleaning the external casing and control panel

! **WARNING:** Risk of electric shock!

Mains voltage is present when the washing machine is switched off. Disconnect the machine from the electricity supply before cleaning or maintenance.

! **WARNING:** Risk of damage due to ingress of water.

Do not spray the washing machine with a water jet. The pressure of a water jet can cause water to get into the washing machine, resulting in damage to components.



- Clean the casing and control panel with a damp cloth and mild cleaning agent and dry with a soft cloth.


! **WARNING:** Damage caused by cleaning agents.

Solvent based cleaning agents, abrasive cleaners, glass cleaners or multi-purpose cleaning agents can cause damage to plastic surfaces and other parts. **Do not use any of these cleaning agents.**

Cleaning the inner door, seal and drum

To prevent the door sticking and build up of fluff:

- After each use, wipe the inside of the drum and the areas shown. Leave the door open for a while to allow air to circulate.

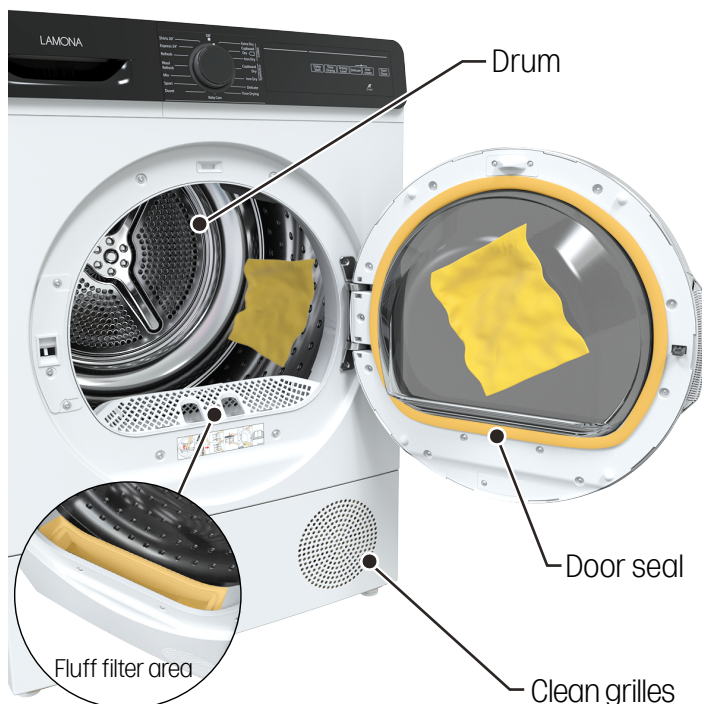


If necessary:

- The drum can be cleaned using a suitable stainless steel cleaning agent, following the manufacturer's instructions on the packaging.
- Clean the door seal after every use with a damp cloth or gently vacuum.

! **WARNING:** Risk of damage due to water ingress.


Risk of damage due to water ingress. Do not clean the dryer with a water jet. Water can get into the tumble dryer resulting in damage to components.

Cleaning and care (continued)

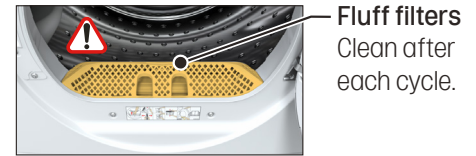


Cleaning the filters - IMPORTANT!


- !** Never use the appliance if the filters are not fitted or are damaged. If garments are not drying check:-
- Is the fluff filter clean and free from lint.
 - Is condenser grille clean and free from dust & debris.

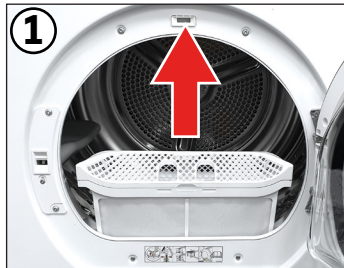


Open the door and pull the filters upwards.

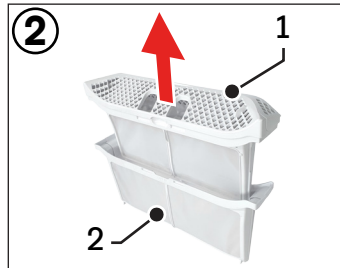


Separate the filters.

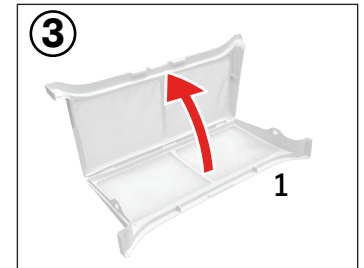


Open filter 1. Gently remove any lint using a soft brush, vacuum or fingertips.

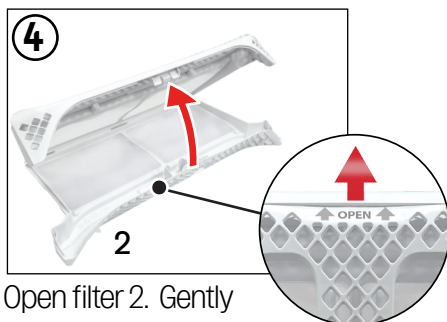

Open filter 2. Gently remove any lint using a soft brush, vacuum or fingertips.

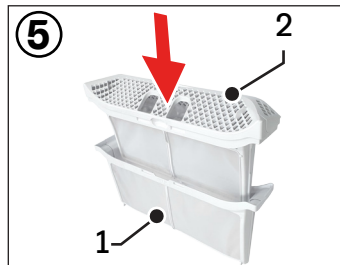

Close both filters until each click together. Place filter 2 back into filter 1.

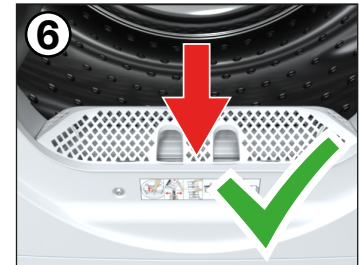


Push the filters gently back into place.




Fluff could be ignited if left to build up in the filters.

NOTE: If filters are washed ensure they are fully dried before use.


Cleaning the condenser grille (every 3 months) - IMPORTANT!

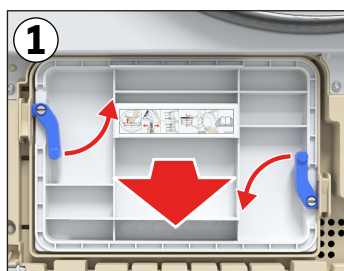

To unlock, rotate the 2 levers anti-clockwise.

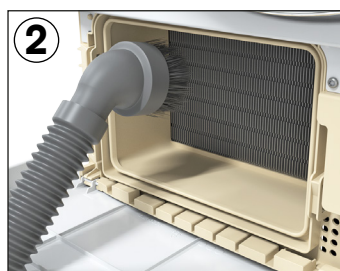

Vacuum the condenser grille (3 times a year).

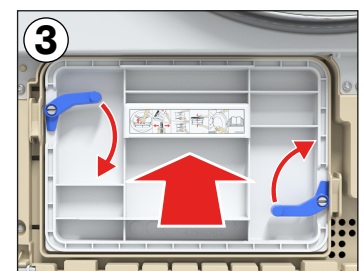

Replace the cover and rotate the 2 levers clockwise to lock.



Do not use the dryer if the condenser filters are not in place or are damaged. Fluff could be ignited.

Problem solving

Many malfunctions and faults that can occur in daily operation can be easily remedied. Time and money will be saved because a service call will not be required.

The following guide may help you to find the reason for a malfunction or a fault, and to correct.

Problem	Reason	Solution
The drying process takes a long time	The surface of the lint filters might be clogged.	Wash the filters with lukewarm water.
	The ventilation grille on the front of the machine might be blocked.	Make sure the grille is not obstructed. Open doors/ windows to prevent the room temperature from rising too much..
	There might be a layer of limescale on the humidity sensor.	Clean the humidity sensor.
	The dryer might be overloaded with laundry.	Do not overload the dryer.
	The laundry might be insufficiently spun.	Select a higher spin speed on your washing machine.
Laundry comes out damp at the end of the drying process.	The laundry that comes out hot at the end of the drying process generally feels more humid.	
	The programme used might not be suitable for the type of laundry.	Check the care labels on the laundry items, select a suitable programme for the type of laundry and additionally, use the time programmes.
	The surface of the lint filters might be clogged.	Wash the filters with lukewarm water.
	The dryer might be overloaded with laundry.	Do not overload the dryer.
	The laundry might be insufficiently spun..	Select a higher spin speed on your washing machine.
The dryer cannot be opened or the programme cannot be started. The dryer does not get activated when adjusted.	The dryer might not be plugged in.	Make sure the plug is fitted in the socket.
	The loading door might be open..	Make sure that the loading door is properly closed.
	You might not have set a programme or pressed the Start / Pause touch key..	Make sure that the programme has been set and the dryer is not in standby (Pause) mode.
	Child lock might be activated.	Deactivate the child lock.
The programme has been interrupted for no reason.	The loading door might not be closed properly.	Make sure that the loading door is properly closed.
	There might have been a power failure..	Press the Start / Pause touch key to start the programme.
	Water tank might be full..	Empty the water tank..
Clothes have shrunk, felted or deteriorated.	The programme used might not be suitable for the type of laundry..	Check the care labels on the laundry items. Select a suitable programme for the type of laundry..
Water is leaking from the loading door.	There might be lint accumulated on the inner surface of the loading door..	Clean the inner surfaces of the loading door and the surfaces of the loading door.
The loading door opens on its own.	The door might not be closed properly.	Push the loading door until you hear the closing sound.
The water tank warning symbol is on / flashing.	The water tank might be full	Empty the water tank.
	The water discharge hose might be bent.	If the product is connected directly to the water outlet, check the water discharge hose,
The filter cleaning warning symbol is on.	The lint filters might be unclean.	Clean the filters.
	The filter seat might be clogged by lint.	Clean the filter seat.
	There might be a layer that causes obstruction on the surface of the lint filters.	Wash the filters with lukewarm water.
The programme cannot be started and the filter warning LED is blinking.	The filter may not be placed.	Clean the heat exchanger.
	The filter warning LED is blinking even through the filter is in place.	Call for technical service.





CAUTION: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorised LAMONA Service Agent. Never try to repair a non-functional product yourself.

Technical specifications

Supplier name or trademark	LAMONA
Model name	FLM8802 / FLM8803
Height	Min: 845 mm / Max: 855 mm*
Width	596 mm
Depth	609 mm
Capacity (max.)	9 Kg**
Energy label	A+
Voltage	220 - 240 V
Power	1000 W
*Min. height: Height with the adjustable feet not used. Max. height: Height with the adjustable feet extended to the maximum.	
**Dry laundry weight before washing.	

Information


The model's technical information can be retrieved by scanning the QR code on the Energy label and proceeding to the website entering the model identifier.

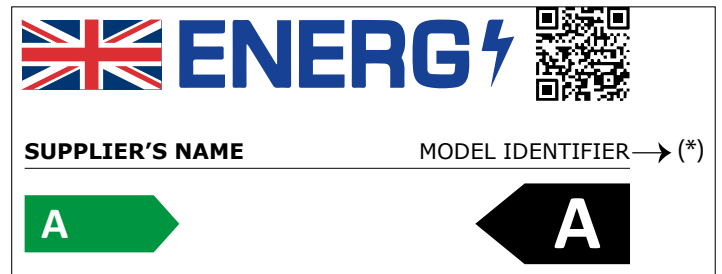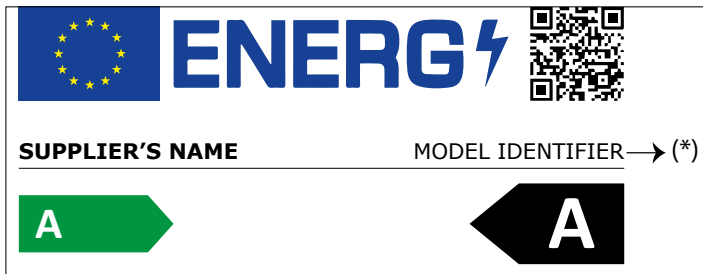

Error codes

*Errors that may be checked / remedied by user and often do not need a service call

Your tumble dryer is equipped with a built-in fault detection system, indicated by a combination of flashing lights. The most common failure codes are shown below.

Error code	Solution
E00	Contact the nearest authorised service agent.
E03	 Empty the water tank, if the problem is not resolved contact the nearest authorised service agent.
E04	Contact the nearest authorised service agent.
E05	Contact the nearest authorised service agent.
E06	Contact the nearest authorised service agent.
E07	Contact the nearest authorised service agent.
E08	There may be voltage fluctuation in the mains supply. Wait until the voltage is in an appropriate range for correct appliance operation.

Product fiche

Complying Commission Delegated Regulation (EU) No 392/2012	
Supplier name or trademark	LAMONA
Model name	FLM8802 / FLM 8803
Rated capacity (Kg)	9
Type of tumble dryer	Heat Pump
Energy efficient class ⁽¹⁾	A+
Annual Energy Consumption (kWh) ⁽²⁾	336
Automatic or Non-automatic	Automatic
Energy Consumption of the standard cotton programme at full load (kWh)	2.73
Energy Consumption of the standard cotton programme at partial load (kWh)	1.56
Power consumption of the off-mode for the standard cotton programme at full load P _o (W)	0.5
Power consumption of the left-on mode for the standard cotton programme at full load P _L (W)	1.0
Duration of the left-on mode (min.)	n/a
Standard cotton programme ⁽³⁾	-
Programme time of the standard cotton programme at full load, T _{dry} (min.)	260
Programme time of the standard cotton programme at partial load, T _{dry1/2} (min.)	143
Weighted programme time of the standard cotton programme at full and partial load (T _t)	193
Condensation efficiency class ⁽⁴⁾	B
Average condensation efficiency of the standard cotton programme at full load C _{dry}	81%
Average condensation efficiency of the standard cotton programme at partial load C _{dry1/2}	81%
Weighted condensation efficiency of the standard cotton programme at full load and partial load C _t	81%
Sound power level for the standard cotton programme at full load ⁽⁵⁾	65
Built-in	No
(1) Scale from A+++ (most efficient) to D (least efficient).	
(2) Energy consumption based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.	
(3) "Cotton cupboard dry programme" used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.	
(4) Scale from G (least efficient) to A (most efficient).	
(5) Weighted average value - L _{WA} expressed in dB(A) re 1 pW.	

Guarantee

Product Guarantee Details (UK & Republic of Ireland only)

Your appliance has the benefit of a comprehensive manufacturer's guarantee which covers the cost of breakdown repairs. (Details of which are shown on your Proof of Purchase Document).

- Any claim during the period of the guarantee **MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE.**
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person.
(The guarantee in no way affects your statutory or legal right)

What to do if you need to report a problem.

Please ensure you have ready:

- The product's model and serial numbers.
- Howdens Proof of Purchase Document.
- Your full contact details.

Call the Depot number on your Proof of Purchase Document supplied with the product/kitchen.

or

Call the LAMONA Service Line on:

Within UK 0344 460 0006

Within Republic of Ireland 01525 5703

* Product installed within a domestic kitchen or a non-domestic kitchen where 8 or fewer people are using the tumble dryer.

Spare parts availability - 10 years

Only fit Genuine Spare Parts

www.lamonaspares.co.uk (UK only)



Where to find the model and serial number on the tumble dryer.	Inner rim of the door aperture.
--	---------------------------------

Notes

Notes



Product serial number
(Place sticker here)

LAMONA



Product information correct at the time of publication in August 2023. The company has a policy of continuous product development and reserves the right to change any products and specifications given in this manual. Subject to the Terms and Conditions of Trading, a copy of the Howdens Terms and Conditions is available upon request. Copyright © 2023 Howden Joinery Ltd. All rights reserved.

Howden Joinery Ltd.
Thorpe Road, Howden, East Yorkshire. DN14 7PA England
Howdens Cuisines SAS. Z.A. du Bois Rigault Nord,
1 Rue Calmette, 62880 Vendin-le-Vieil, Cedex, France