


## Quick Start Guide

Please carefully read the user Instruction Booklet before operating the washer dryer

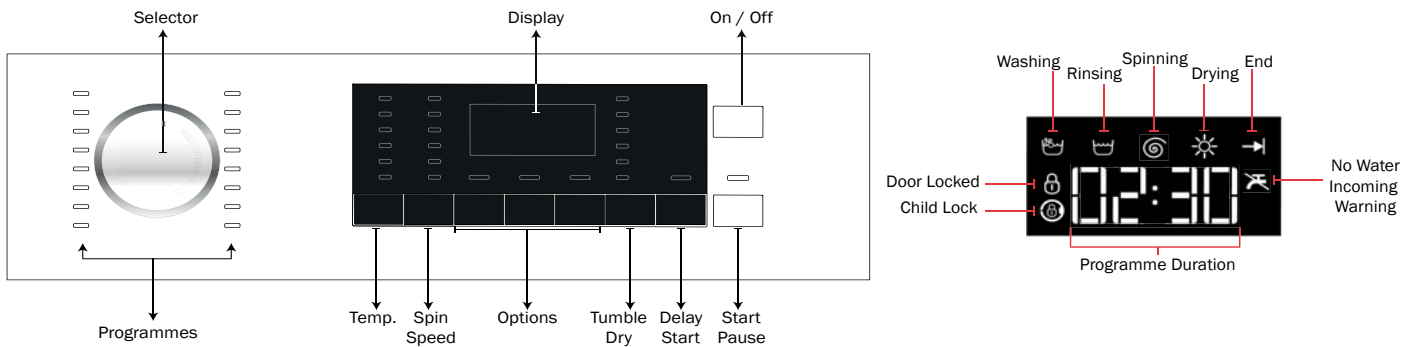

1. Sort laundry according to fabric type and colour fastness.
2. Turn on machine.
3. Loosely load machine (\*half load if tumble dryer cycle to be used) and close door.
4. Add detergent / fabric conditioner as desired (do not use liquid detergent if selecting delayed start).
5. Select wash programme using rotary dial.
6. Adjust temperature / spin and select options etc. as desired.
7. Select tumble drying cycle if desired (\*half load only).
8. Push start button.

*The door will lock and the machine will begin the programme.*

### To cancel a programme:

Push and hold the start button - machine displays 3-2-1 and then stops.  
(To empty the water from the machine select a spin cycle & press start button).

### At the end of a programme:

The programme end indicator is displayed and an alert sounds when the door lock opens.

(- The display and all indicators will turn off if no button is pressed within 2 mins).

### Hints/Tips


Do not overload the machine with laundry (loosely fill).

Do not use too much detergent (follow instructions on packets).

## Check filter regularly for items

(buttons, coins etc).

A blocked filter can cause the machine to empty or spin.

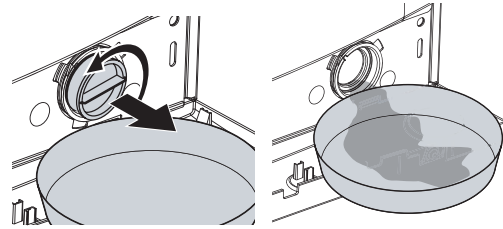

## Programme Charts

### Washing

EN						Auxiliary functions				Selectable temperature range °C
Programme (°C)		Max. Load (kg)	Water Consumption (l)	Energy Consumption (kWh)	Max. Speed***	Prewash	Quicker Wash	Extra Rinse	Drying	
Cottons	90	8	78	2,40	1400	•	•	•	•	90-Cold
	60	8	78	1,50	1400	•	•	•	•	90-Cold
	40	8	78	1,00	1400	•	•	•	•	90-Cold
Cottons Eco	60**	8	47	0,76	1400				•	60-Cold
Synthetics	60	3	67	1,05	1200	•	•	•	•	60-Cold
	40	3	67	0,75	1200	•	•	•	•	60-Cold
Wool	40	1,5	45	0,45	1200			•		40-Cold
Delicates	40	3,5	48	0,50	1000	•				40-Cold
Hand Wash	30	1	35	0,30	1200					30-Cold
Rapid 30°	30	2	32	0,10	1400			•	•	30-Cold
Quick	90	8	54	1,90	1400			•	•	90-Cold
	60	8	54	1,10	1400			•	•	90-Cold
	30	8	50	0,18	1400			•	•	90-Cold
Shirts	60	3,5	45	0,85	800	•	•	•	•	60-Cold

### Drying

EN						Auxiliary functions				Drying level			Selectable temperature range °C	
Programme (°C)		Max. Load (kg)	Water Consumption (l)	Energy Consumption (kWh)	Max. Speed***	Prewash	Quicker Wash	Extra Rinse	Drying	Extra Dry	Cupboard Dry	Iron Dry		Time based drying - minutes
Cotton Dry	-	5	35	2,75	1400				*	•	•	•	•	-
Synthetic Dry	-	3	22	1,70	-				*	•	•	•	•	-
Anti Allergy Wash & Dry	60	2	120	3,80	1400			*	*	•	•	•	•	90-30
5 Kg Wash & Dry	60	5	94	5,00	1400				*	•	•	•	•	60-Cold
Mini Wash & Dry	30	0,5	35	0,60	1000			•	*				•	30-Cold
Mini Wash & Dry	30	1	44	1,00	1000			•	*				•	30-Cold