

LAMONA

at the heart of the kitchen

Microwave Oven

LAM7200
LAM7202



- Please read this User & Installation Manual to ensure safe fitting and use of the appliance.
- The appliance should be fitted by a suitably competent and qualified person.
- Please keep these instructions in a safe place for future reference.
- Danger of suffocation, keep packaging material away from children.

User Instructions and Installation

Register 
my appliance

www.howdens.com/appliance-registration

ISSUE v1.4 270723



Free 3 year guarantee

Call now¹

Within the UK:

0333 010 0009

Within Republic of Ireland:

01525 5752

Alternatively, visit www.howdens.com/appliance-registration

LAMONA

**3 year guarantee available.
Register your appliance within 90 days²**

By registering your appliance and creating an account, we will keep you up to date with the latest product information and notify you immediately of any important product updates

¹ Lines are open Monday to Friday 9am to 5pm. Calls will be charged at your local rate and may be recorded and monitored for training and quality purposes.

² So that in the event of an important product update, or recall, we can contact you.

Register 
my appliance

Welcome

Dear Customer,

Congratulations on your choice of microwave oven.

This user and installation manual will help you use your product quickly and safely.

- Please read this manual before installing and using the microwave.
- Always follow the safety instructions.
- Keep this manual within easy reach for future reference.
- Register your appliance to access a digital copy of your user and installation manual for future reference.
- Please read any other documents supplied with the product.

The CE & UKCA marks on this product, confirm compliance to all relevant UK & European safety, health & environmental requirements which are applicable in legislation for this product.

Throughout this manual the following symbols are used.



Warning for serious injury or death risk.



Warning, hot surfaces.
Surface temperature may rise above 60°C.



Warning for electric shock.



Important note for operating the system correctly and safely.



Warning for risk of fire / inflammable materials.



Important information or useful usage tips.



Warning, possible injury or property damage risk.

Contents

1. Warnings & safety information	5	Enquire function	20
Intended application	5	Child lock	20
General safety	5	7. Trouble shooting	20
Safety with children	7	Observations that are normal	20
Electrical safety	7	Problem, cause and remedy	20
Safety in use	8	8. Care & maintenance	22
Precautions to avoid possible exposure to excessive microwave energy	9	Cleaning the cooking compartment	22
2. Microwave cooking - a general guide	9	Door contact surfaces and neighbouring parts	22
Defrosting meat, poultry and fish	10	Cleaning the accessories	23
Defrosting butter and gateau	10	Utensils test	23
Defrosting ready meals	10	Service	23
Cookware you can use...	11	9. Installation	23
Avoid using these materials	11	Electrical connections	24
3. Microwave and accessories	12	Built-in furniture	24
Microwave and accessories	12	Minimum installation height	25
Turntable installation	12	Mounting the microwave	25
4. Control Panel	13	Cabinet dimensions	25
Control panel and display	13	Exhaust venting and service void	26
5. Before first use	13	10. Technical Specifications	27
Clean and setting the clock	13	Rated voltage	27
6. Microwave cooking	14	Rated input power	27
Select the power setting	15	Rated output power	27
Set the cooking time	15	Oven capacity	27
Quick start	15	Turntable diameter	27
Defrost by weight	15	External dimensions	27
Defrost by time	17	Net weight	27
Kitchen timer	17	11. Environmental Care	28
Auto menu	18	Disposing of your old appliance	28
2 stage cooking	19	12. Your Guarantee	29

1. Warnings & safety information



Please read these instructions.

The manufacturer is not responsible if an incorrect installation and / or improper use causes injury and / or damage. **Failure to follow these instructions shall void any warranty.**

- Please take care when installing, maintaining, cleaning and operating the microwave.



WARNING: Misuse may create a fire hazard.

- Keep these instructions in a safe and accessible place for future reference.

Intended application

This microwave is intended for use in household and domestic applications such as...

- staff kitchen areas in shops ,offices and other working environments;
- use by clients in hotels, and...
- other residential type environments.
- Farm houses and bed and breakfast type environments.

This microwave is not intended for outdoor or commercial use.

- The microwave may be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- See guarantee for definition of domestic use.

General safety



This microwave is intended for heating food and beverages only.



Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloths and similar may lead to risk of injury, ignition or fire.



Only a suitably qualified person must install this appliance or replace the mains cable.





WARNING! Accessible parts may become hot during use.




Always use oven gloves to remove or put in accessories or oven-ware.


Do not heat liquids and other foods in sealed containers. They are liable to explode.


 Microwave heating beverages can result in delayed eruptive boiling. Care must be taken when handling the liquids' container.


 Contents of feeding bottles and baby food jars must be stirred or shaken and the temperature checked before consumption, in order to avoid burns.


 Eggs in their shell and whole hard-boiled eggs should not be heated in the microwave since they may explode, even after microwave heating has ended.


 Only use utensils that are suitable for use in microwave ovens.


 When heating food in plastic or paper containers, monitor the appliance due to the possibility of ignition.


 If smoke is emitted, switch off or unplug the appliance. Keep the door closed in order to stifle any flames.

 Before carrying out any maintenance, disconnect the appliance from the power supply.


 Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.


 If the mains power supply cable is damaged, it must be replaced by the manufacturer, Authorised Service Centre or similarly qualified persons to avoid electrical hazard.


 Do not use the appliance when it is empty. Metal parts inside the cooking compartment can create arcing and damage the oven.


 Metallic containers for food and beverages must not be used for microwave cooking. (This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking).

WARNING: If the door or door seals are damaged, the appliance must not be operated until it has been repaired by a qualified person.

 Only a qualified person can carry out any service or repair operation that involves the removal of a cover that gives protection against exposure to microwave energy.

 Do not attempt to use the appliance with the door open. This can result in harmful exposure to microwave energy. **DO NOT** tamper or break the safety interlocks.

 If the appliance is not maintained in a good state of cleanliness, its surfaces could degrade and affect the lifespan of the product and may lead to malfunction.

 Do not place any object between the oven front face and door or allow soiling or cleaning residue to accumulate on these closing, sealing surfaces.

Safety with children



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Children aged 3 years and under must be kept away at all times from the appliance when it is in operation.

- Children must not be allowed to clean or maintain the microwave unsupervised.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Please supervise children in the vicinity of the microwave and do not let them play with it.
- Please keep all packaging away from children and dispose of it appropriately.

This appliance has a child safety device. Please use when required.



Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts may be hot.



Electrical safety



Touching some of the internal components can cause serious personal injury or death.

WARNING: Do not disassemble this appliance. Improper use of the grounding can result in electric shock.

Grounding

- The appliance must be grounded. In the event of an electrical short circuit grounding reduces the risk of electric shock by providing an escape wire for the electric current.
- Only connect the microwave to a grounded outlet/line with the voltage and protection as specified in the "Technical Specifications" on page 27.

Power cord & extensions

- This appliance is equipped with a power cord, having a grounding wire with a grounding plug.



The plug must be plugged into an outlet that is properly installed and grounded.

- If it is necessary to use an extension cord, use only a 3-wire extension cord.
- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.





If a long cord set or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

The extension cord must be a grounded-type 3-wire cord.

- The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

Safety in use

-  Use oven gloves when placing or removing cookware.
-  Do not operate the appliance when it is empty.
-  The appliance and its accessible parts may become hot during use. Take care when removing or installing accessories.
-  If the microwave is mounted at height, take care removing hot cookware, especially with liquids.



Open the door carefully. Use of ingredients containing alcohol can come into contact with hot surfaces or mix with air and ignite.



Take care when opening the door, hot air / steam may be released.



Do not operate the appliance with wet hands or if it has been in contact with water.



Do not put flammable products or items that are wet, in or near the microwave.



Ensure ventilation openings are clear from blockage.



Set the timer to 0 after each use to prevent the microwave operating when empty.

- Do not use the microwave function to pre-heat the oven.
- Do not leave the appliance unattended during operation.
- Do not put pressure on the appliance door when it is open.
- Do not let sparks / open flames come in contact with the microwave when you open the door.
- Do not put aluminium foil directly under the appliance.
- Do not put water directly into the hot appliance.

- Do not keep moist dishes and food in the appliance after you have finished cooking.

Precautions to avoid possible exposure to excessive microwave energy



Do not attempt to operate this oven with the door open since this can result in harmful exposure to excessive microwave radiation.



Do not place any object between the oven front face and door or allow soiling or cleaning residue to accumulate on these closing, sealing surfaces.

WARNING: If the door or door seals are damaged the oven must not be operated until it has been repaired by a competent person.



If the appliance is not maintained in a good state of cleanliness, its surface could be degraded which may affect the lifespan of the product and lead to malfunction.

2. Microwave cooking, a general guide

Remove aluminium foil packaging from metal containers, etc. before you prepare the food for heating.

- Put the food on a plate on the turntable unless specified differently.
- After cooking let food stand for some time.
- If possible, always stir the food before serving.
- Where possible, cook food covered with material suitable for microwave use. Only cook food without a cover if you want to keep a crust.
- Do not overcook dishes by setting the power and time too high. The food can dry out, burn or catch fire.
- Do not use the appliance to cook eggs in their shells, as they can explode. With fried eggs, pierce the yolks first.
- Pierce skin or peel potatoes, tomatoes, sausages and similar types of food with a fork, several times before cooking to prevent food bursting open.
- For chilled/frozen food, set a longer cooking time at a lower power.

- Dishes containing sauce must be stirred from time to time.
- Turn larger pieces of food over after half the cooking time.
- If possible, cut vegetables into similar sized pieces.
- Use flat, wide dishes.

Do not use cookware made of porcelain, ceramic or earthenware with unglazed bottoms, or small holes for example on handles. Moisture can penetrate the holes and cause the cookware to become very hot and possibly crack.

Defrosting meat, poultry & fish:

- Put the frozen,unwrapped food on a small upturned plate with a container below it or on a defrosting rack or plastic sieve so that the defrosting liquid can run off.
- Turn the food after half the defrosting time. If possible divide and then remove pieces that have started to defrost.


Defrosting butter & portions of gateau:

- Do not fully defrost in the appliance, but let them defrost completely at room temperature. This gives a more even result. Remove all metal or aluminium packaging or parts before defrosting.

Defrosting fruit & vegetables.

- If fruit and vegetables are not to be cooked completely, do not defrost them fully in the microwave but let them defrost completely at room temperature.
- To cook fruit and vegetables without defrosting them first, you can use a high microwave power.

Ready meals:

-  Ready meals in metal packaging or plastic trays with metal covers can only be defrosted or heated in the microwave if they are expressly designated as suitable for use in the microwave.

You must follow the manufacturer's instructions printed on the packaging (e.g. remove cover / pierce the plastic film).

Cookware you can use in the microwave




Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of a browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow the manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove the lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates/cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. These should be labelled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by the product instructions.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow the plastic wrap to touch food.
Thermometers	Microwave-safe only.
Wax paper	Use as a cover to prevent splattering and retain moisture.

Avoid using these materials




Utensils	Remarks
Aluminium tray /foil	May cause arcing. Transfer food into a microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into a microwave-safe dish.
Metal or metal-trimmed utensils	Metal, shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood, will dry out when used in the microwave oven and may split or crack.

3.Microwave and accessories

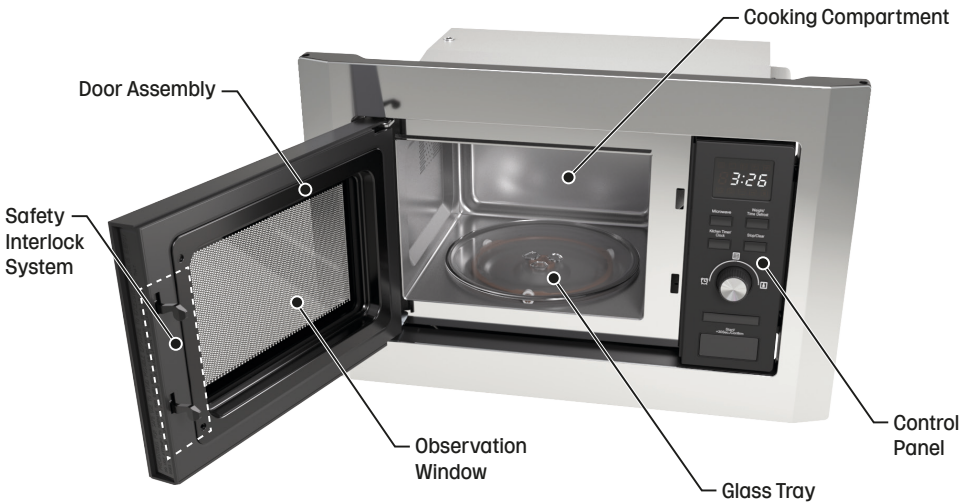


Turntable Installation

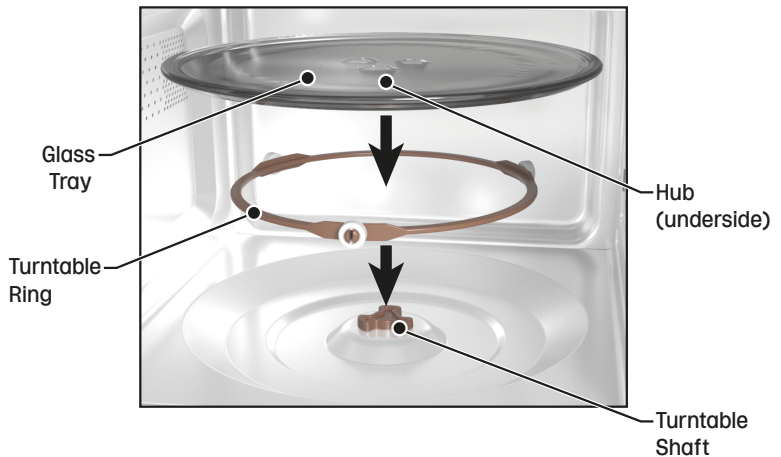

- Never place the glass tray upside down. Its movement must not be restricted.
- Both glass tray & turntable ring assembly must always be used during cooking.
- All food & containers of food are always placed on the glass tray for cooking.
- If the glass tray or turntable ring assembly cracks or breaks, contact your nearest authorised service centre.

4. Control Panel

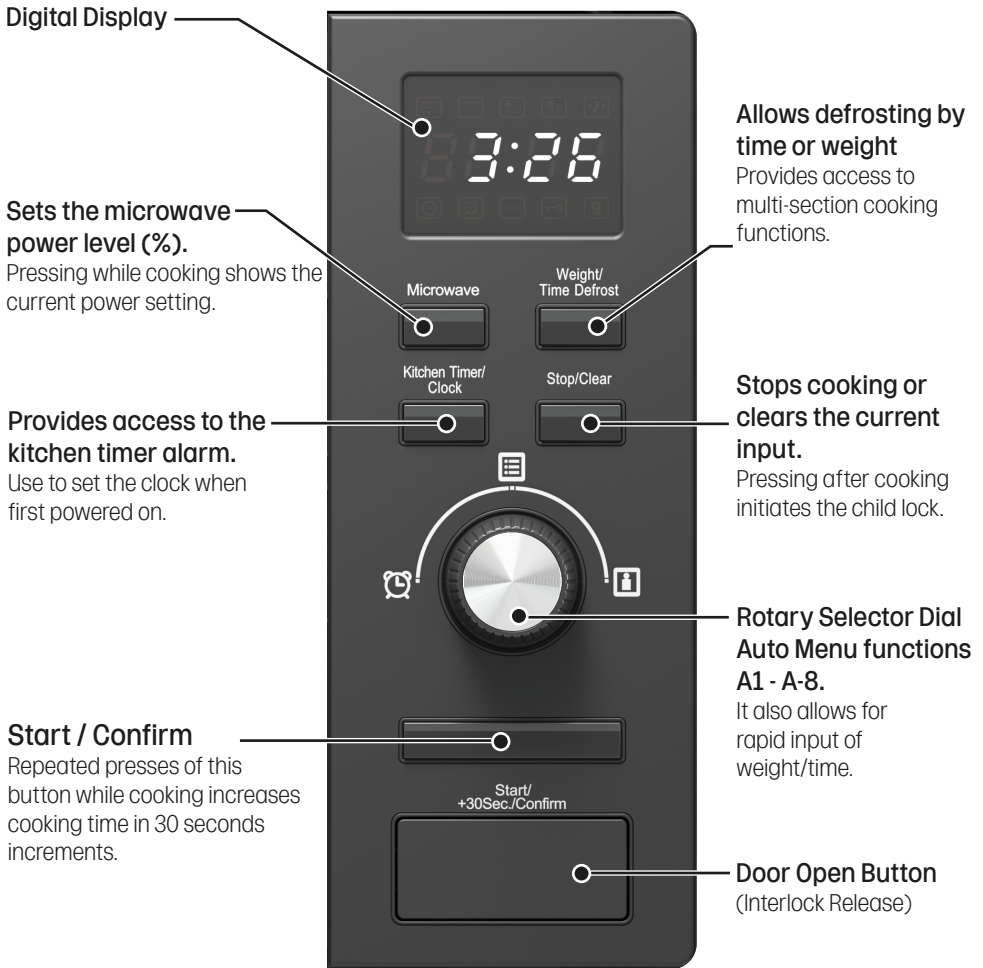

5. Before first use







Please read the safety information on page 5 of this booklet.





Before using the microwave for the first time, please clean the cooking compartment and accessories.

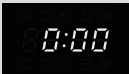

Setting the clock

 The clock displays time in 24 hour format. It will not work if it has not been set at power on.


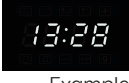 
 When the microwave is switched on, it will beep and display  


1. Press  **twice**...to select the clock function, (hour digits flash) 

2. Rotate to enter the hour (0 - 23) 
Example


3. Press to select minutes (minute digits flash) 
Example

4. Rotate to enter minutes (0-59) 
Example

5. Press  again..... The time is set and displayed 
Example



During clock setting, pressing  will revert the oven to its previous state.

6.Microwave Cooking


 This microwave has 5 selectable power settings.


Order	Displayed	Power
1	P100	100%
2	P80	80%
3	P50	50%
4	P30	30%
5	P10	10%

(A) Select the power setting  


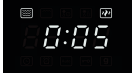
1. Press to access power setting The display flashes 

2. Press  repeatedly or rotate  to cycle through the settings

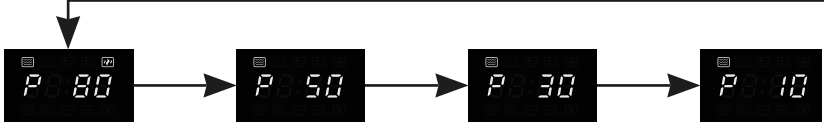

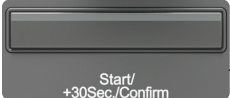3. Press  to confirm the selected power setting. The display stops flashing.

(B) Set the cooking time

4. Rotate to set the cooking time, up to 95 minutes  Example

5. Press  again to start cooking.

Example: Cooking at 80% microwave power for 20 minutes...

Press  once,  then press  again or use  to



set . Press  to confirm. The display stops flashing.


Use  to set the time  Press  to start cooking. Example

Quick start

- Quick start allows rapid selection of cooking time at 100% power.
- This function can only be used when the microwave is in a non-cooking state.


Method A

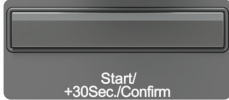1. Press to start cooking (100% power) 

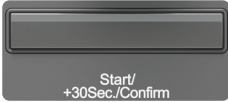2. Press  again repeatedly to increase cooking time in 30 second intervals (up to 95 minutes).




At any time during cooking or defrosting, the cooking time can be increased in 30 second intervals by repeatedly pressing the Start/+30Sec./Confirm button.

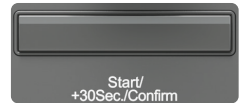



Method B

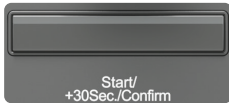1. Turn  to set the cooking time.  Example

2. Press  to start cooking at 100% microwave power.

Defrost by weight

1. Press The display shows 

2. Rotate to set the food weight (100 to 2000g)  Example

3. Press



to start defrosting.

Defrost by time

1. Press



twice.....The display shows



2. Rotate



.....to set the defrost time (up to 95 minutes)



Example

3. Press



to start defrosting.

NOTE: The defrost power is P30 and cannot be changed.



Kitchen timer

1. Press



.....the display shows



2. Rotate



.....to set the timer (up to 95 minutes)



Example

3. Press




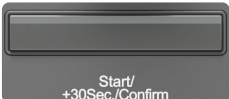

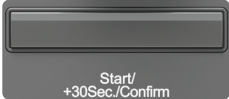










to confirm the setting. **The countdown will begin.**

When the time has elapsed the display goes blank, the oven beeps 5 times

If the clock has been set, the display will show the current time.

Auto menu

1. Rotate  right to select a menu*  → 
2. Press  to confirm. Turn  to choose the weight**
3. Press  to start cooking.

	*Menu	**Weight	Display
	Pizza	200g	200
		400g	400
	Meat	250g	250
		350g	350
		450g	450
	Vegetable	200g	200
		300g	300
		400g	400
	Pasta	50g (with 450 ml cold water)	50
		100 g (with 800 ml cold water)	100
	Potato	200g	200
		400g	400
		600g	600
	Fish	250g	250
		350g	350
		450g	450
	Beverage	1 cup (120 ml)	1
		2 cups (240 ml)	2
		3 cups (360 ml)	3
	Popcorn	50g	50
		100g	100


Auto **2 Stage cooking**

This function allows a two stage cooking process. **Defrost** (1), then **cook** (2).


1. Press  twice..... the display shows 

2. Turn  to set the defrost time 


3. Press , the display shows 

4. Press  again / repeatedly or rotate  to set power  Example

5. Press  to confirm..... The display stops flashing  Example

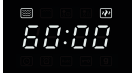
6. Rotate to set the cooking time (up to 95 minutes)  Example

7. Press  to start cooking.

The microwave will beep  at the start of each cooking stage.

Enquire function


While cooking, to show the current power setting:

Press  ...The current power setting is displayed for 3 seconds



While cooking, to show the clock:

Press The current time (if set) is displayed for 3 seconds

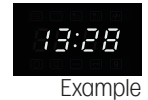


Child lock

The child lock function can be used prevent children operating of the microwave.

This function can only be used while the microwave is not cooking/defrosting.

To lock:



Press and hold  for 3 seconds  The lock icon appears 

If the clock has been set, the current time is displayed.

If the clock has not been set the display shows.....






To unlock:

Press and hold  for 3 seconds  the lock symbol goes off 

7. Trouble Shooting



During normal operation the following observations are normal	
When cooking, the microwave interferes with TV reception.	If the microwave is close to a radio or TV, reception may be impaired, this is normal. 
The oven light is dim.	If cooking using a low power setting, the light may become dim. This is normal. 
Steam is coming out of the vents. Condensation is also accumulating on the door.	During cooking steam can be generated. Most will be evacuated through the vents, though some may settle on a colder surface, such as the oven door. This is normal. 

Problem	Possible Cause	Remedy
The microwave will not switch on.	The power cord is not plugged in tightly.	Unplug, then plug in again (after 10 seconds).
	The plug fuse has blown.	Replace the fuse or reset the circuit breaker (carried out by a competent qualified person).
	The power outlet is not supplying power.	Test the outlet with other electrical appliances e.g. a lamp.
The microwave is not heating properly.	The microwave door is not closing properly.	Make sure the door is closed and is sealing properly.



WARNING: If the door or door seals are damaged the oven must not be operated until it has been repaired by a competent person.

8. Care & Maintenance



The microwave must be unplugged from the power supply socket before cleaning.



If the appliance is not maintained in a good state of cleanliness, its surfaces could be damaged. This may affect the lifespan of the product and could lead to malfunction.



The appliance should be cleaned regularly and any food deposits removed immediately after cooking.



Leave the door open after cooking to allow any condensation to evaporate.



Allow the oven to cool before cleaning.

Cleaning the cooking compartment



Clean the cooking compartment after use with a slightly damp cloth. Do not use steel wool pads.




For easy cleaning of the cooking compartment. Place half a lemon in 300ml (1/2 pint) of water and heat for 10 minutes at 100% microwave power. Wipe clean with a soft dry cloth:

Door contact surfaces and neighbouring parts



Clean the door frame, contact surfaces and neighbouring parts with a damp cloth.

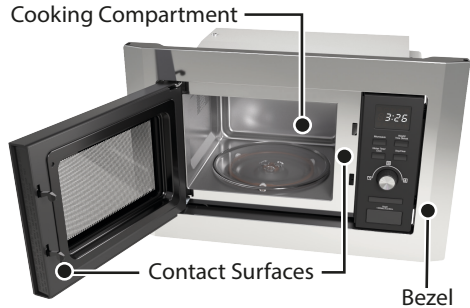

Take care not to scratch the stainless steel bezel.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in the glass shattering.




Do not use a steam cleaner to clean the appliance.



Discolouration of the enamel or stainless steel has no effect on the performance of the appliance.

- Use a deep pan for moist cakes.
- Fruit juices can cause stains that can be permanent.

Cleaning the accessories

 Remove the the glass tray and turntable ring. Clean with soapy water.




Utensil Test




See page 11, for information on microwave safe materials. If in doubt, test the utensil using the procedure below.

1. Fill a microwave safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook for 1 minute at 100% power.
3. Feel the utensil. If it is warm, DO NOT use it for microwave cooking.

 **WARNING:** DO NOT exceed 1 minute cooking time.

Service


 To ensure continued safe and efficient operation of the appliance, we recommend that any servicing or repairs are only carried out by an


authorised Lamona service engineer as this may involve removal of a cover giving protection against exposure to microwave energy.

9. Installation

 Please read this manual carefully before installation.

This appliance is intended for domestic use only.


 The appliance is heavy. Take care when moving it.

 Always use safety gloves and enclosed footwear.

WARNING! Only a suitably competent / qualified person must install this appliance.

- This oven is intended for built-in use only.
- It is not intended for counter-top use or for use inside a cupboard.

 Remove all packaging.

 Do not pull or lift the appliance by the door.

- Keep the minimum distances from other appliances and units.



Do not install or use the appliance if it appears to be damaged.

Electrical Connections

- Electrical connection must be made by a suitably qualified person. The product must be installed in accordance with all local regulations.



The appliance must be earthed.

- The appliance is fitted with a plug and must only be connected to a properly installed earthed socket in accordance with the appropriate regulations.

The mains voltage must be correspond to the voltage specified on the rating plate. See specifications on page 27.

- The socket must be installed by a qualified electrician.
- The power cable must only be replaced by a qualified electrician.

If the plug is no longer accessible following installation, an all-pole disconnecting device must be present on the installation side with a contact gap of at least 3mm.



Adapters, multi-way strips and extension leads must not be used. Overloading can result in a risk of fire.



Accessible surfaces may be hot during operation.

Built-in furniture

The cabinet must have the rear panel removed behind the microwave and **the service void must be maintained for ventilation.**




Secure cabinet with L brackets

i Minimum installation height is 850mm.

i Depending upon the installation and any other appliances fitted (e.g. an oven), the microwave may need to be raised on the shelf slightly to avoid fascia clash.

! Do not cover ventilation slots and air intakes points.

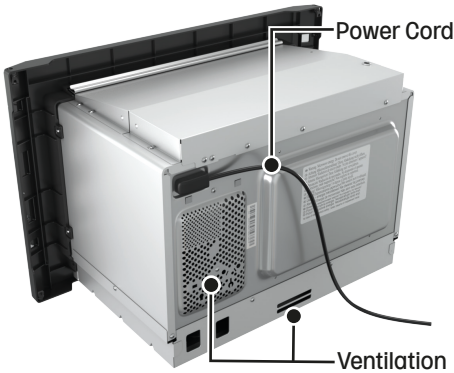

! Take care not to trap or bend the power cord.

! Depending upon the installation, it might be necessary to fix the position of the power cable on the back of the microwave, using adhesive tape.

Mounting the microwave


Supplied Components




4x 30mm CSK

! Ensure the cooking compartment is empty of components and accessories before mounting.


Cabinet dimensions

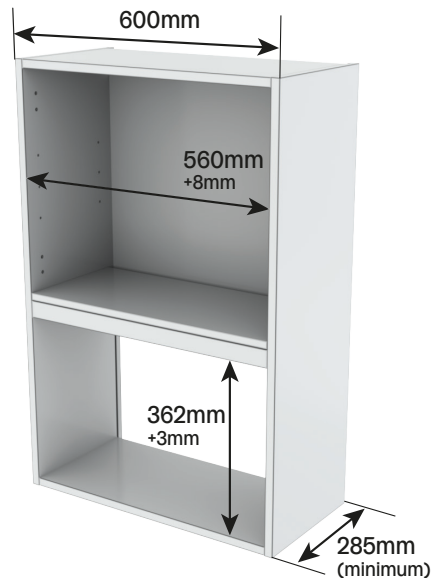

Exhaust venting and service void

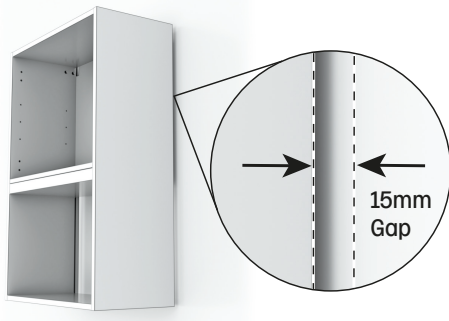

- 1. Place a spacer on the bottom shelf for best appearance.**

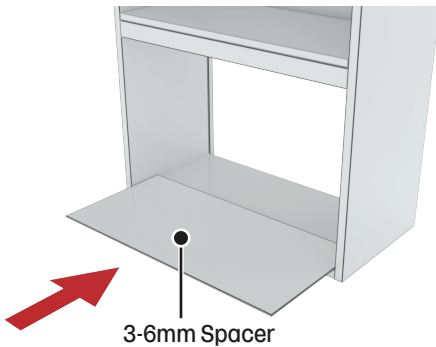

- 2. Insert the oven until the frame abuts the cabinet front.**




- 3. Ensure the microwave is centred.**



- 4. Install fixing screws at the four corners of the outer frame.**



The following diagrams show the installation of the left side 30mm fixing screws, the right side is the same.

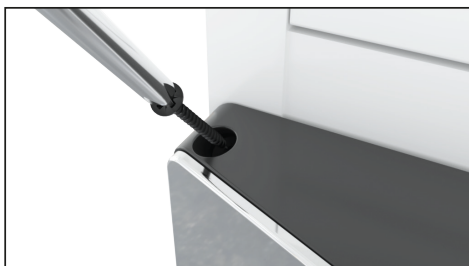

(Top left side) fixing screw



(Bottom left side) fixing screw



10. Technical Specifications

Model	LAM7200 / LAM7202
Rated Voltage	230V ~ 50Hz
Rated Input Power (microwave)	1050W
Rated Output Power (microwave)	700W
Oven Capacity	17L
Turntable Diameter	Ø 245mm
External Dimensions	595 x 329 x 382mm
Net Weight	15Kg

11. Environmental Care



The environmentally friendly, recyclable packaging is designed to protect the appliance from damage during transportation. All packaging materials should be recycled.

Recycling reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Disposing of your old appliance

- To ensure safe disposal, disconnect the mains plug from the socket. Cut the mains power cable and destroy this and the plug.
- Electrical & electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety.
- These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

WEEE contains both polluting substances (which can cause negative consequences for the environment) and basic components (which can be reused).

It is important to have WEEE subjected to specific treatments in order to remove and dispose of, properly, all pollutants and recover and recycle all materials.

Please dispose of this appliance at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer for advice.

12. Your guarantee

Product Guarantee Details (UK and Republic of Ireland only)

Your appliance has the benefit of a comprehensive manufacturer's guarantee which covers the cost of breakdown repairs. (Details of which are shown on your Proof of Purchase Document).

- Any claim during the period of the guarantee **MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE.**
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person. (The guarantee in no way affects your statutory or legal rights).

What to do if you need to report a problem

Please ensure you have ready:

- The product's model and serial numbers.
- Howdens Proof of Purchase Document.
- Your full contact details.

Call the Depot number on your Proof of Purchase Document supplied with the product/kitchen.

or

Call the LAMONA Service Line on:

Within the UK: 0344 460 0006

Within Republic of Ireland: 01525 5703


- Product installed within a domestic kitchen or a non-domestic kitchen where 8 or fewer people are using the appliance.

Where to find model and serial number on your appliance.	On the rear of the microwave.
--	-------------------------------

Spare Parts availability - 10 years

Only fit Genuine Spare Parts

www.lamonaspares.co.uk (UK only)

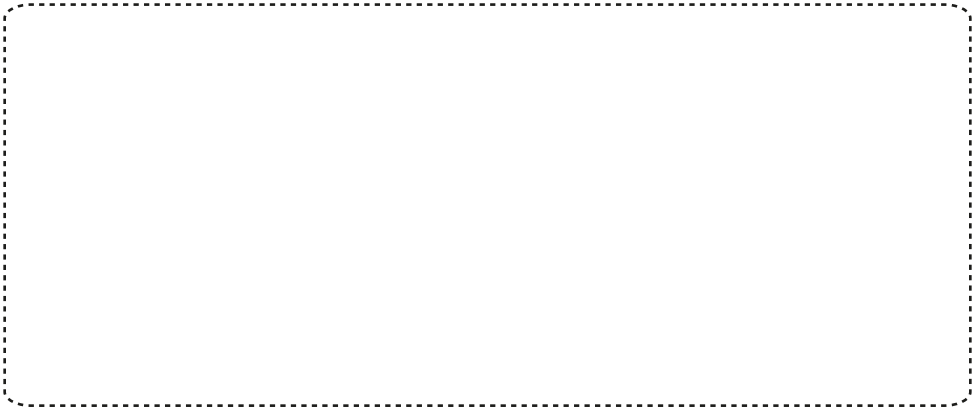

Product serial number
(Place sticker here)

LAMONA

at the heart of the kitchen



FR

Cet appareil
se recycle

REPRISE
À LA LIVRAISON



OU

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil!

Howden Joinery Ltd, Thorpe Road, Howden, East Yorkshire, DN14 7PA

Imported in EU by: Houdan Cuisines SAS, Z.A. du Bois Rigault Nord,
1Rue Calmette, 62880 Vendin-le-Vieil, Cedex, France.

Product information correct at the time of publication in July 2023.

The company has a policy of continuous product development and reserves the right to change any products and specifications given in this manual. Subject to the Terms and Conditions of Trading, a copy of the Howdens Terms and Conditions is available upon request.

Copyright © 2023 Howden Joinery Ltd. All rights reserved.