

Integrated Microwave Oven

LAM7350 LAM7351



- Please read this User & Installation Manual to ensure safe fitting and use of the appliance.
- The appliance should be fitted by a suitably competent and qualified person.
- Please keep these instructions in a safe place for future reference.
- Danger of suffocation, keep packaging material away from children.

User Instructions and Installation



ISSUE v1.1 040324



Free 3 year guarantee

Call now¹

Within the UK: **0333 010 0009** Within Republic of Ireland: **01525 5752**

Alternatively, visit www.howdens.com/appliance-registration

LAMONA

3 year guarantee available. Register your appliance within 90 days²

By registering your appliance and creating an account, we will keep you up to date with the latest product information and notify you immediately of any important product updates

¹Lines are open Monday to Friday 9am to 5pm. Calls will be charged at your local rate and may be recorded and monitored for training and quality purposes.

²So that in the event of an important product update, or recall, we can contact you.



Welcome

Dear Customer.

Congratulations on your choice of microwave oven.

This user and installation manual will help you use your product quickly and safely.

- Please read this manual before installing and using the microwave.
- · Always follow the safety instructions.
- Keep this manual within easy reach for future reference.
- Register your appliance to access a digital copy of your user and installation manual for future reference.
- Please read any other documents supplied with the product.

The CE & UKCA marks on this product, confirm compliance to all relevant UK & European safety, health & environmental requirements which are applicable in legislation for this product.

Throughout this manual the following symbols are used.



Warning for serious injury or death risk.



Warning for electric shock.



Warning for risk of fire / inflammable materials.



Warning, possible injury or property damage risk.



Warning, hot surfaces. Surface temperature may rise above 60°C.



Important note for operating the system correctly and safely.



Important information or useful usage tips.

Contents

1. Warnings & safety inform	ation 5	Child lock	2
Intended application	5	7. Trouble shooting	22
General safety	5	Observations that are normal	22
Safety with children	7	Problem, cause and remedy	22
Electrical safety Safety in use	7 8	8. Care & maintenance	23
Screty in use Precautions to avoid possible e	-	Cleaning the cooking compartment	23
to excessive microwave energy		Door contact surfaces and	20
		neighbouring parts	23
Microwave cooking - a ger guide	ierai 9	Cleaning the accessories	24
Defrosting meat, poultry and fis		Utensils test	24
Defrosting Meat, poditry and his Defrosting butter, gateau,ready r	-	Service	24
Cookware you can use	11	9. Installation	24
Avoid using these materials	11	Electrical connections	25
3. Microwave and accessori	ies 12	Appliance dimensions	28
Turntable installation	12	Minimum installation height	26
Wire racks	13	Minimum clearances	2
		Fixing screws	2
4. Control Panel	13	Service void and ventilation	28
Control panel and display	13	Position and install	29
5. Before first use	13	10. Technical Specifications	30
Clean and setting the clock	13,14	Rated voltage	30
6. Microwave cooking	14	Total input power	30
Select the power setting	15	Rated output power	30
Set the cooking time	15	Oven capacity	30
Speed cooking	16	Turntable diameter	30
Cooking using the grill	17	External dimensions	30
Defrost by weight & time	18	Net weight	30
Auto menu	19	11. Environmental Care	3:
Combination	20	Disposing of your old appliance	3
Kitchen timer	20	12. Your Guarantee	32
Inquire function	21	zzi iodi dadidillo	

1. Warnings & safety information







Please read these instructions.
The manufacturer is not responsible if an incorrect installation and / or improper use causes injury and / or damage. Failure to follow these instructions shall void any warranty.

 Please take care when installing, maintaining, cleaning and operating the microwave.



WARNING: Misuse may create a fire hazard

 Keep these instructions in a safe and accessible place for future reference.

Intended application

 Built in use only: Do not use on a counter-top or inside a cupboard.

This microwave is intended for use in household and domestic applications such as...

- staff kitchen areas in shops ,offices and other working environments;
- use by clients in hotels, and...
- other residential type environments.
- Farm houses and bed and breakfast type environments.

This microwave is not intended for outdoor or commercial use.

- The microwave may be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- See guarantee for definition of domestic use.

General safety



This microwave is intended for heating food and beverages only.



Drying of footwear or clothing and heating of warming pads, slippers, sponges, damp cloths and similar may lead to risk of injury, ignition or fire.



Only a suitably qualified person must install this appliance or replace the mains cable.



WARNING! Accessible parts may become hot during use.



Always use oven gloves to remove or put in accessories or oven-ware.

Do not heat liquids and other foods in sealed containers. They are liable to explode.



Microwave heating beverages can result in delayed eruptive boiling. Care must be taken when handling the liquids' container.



Contents of feeding bottles and baby food jars must be stirred or shaken and the temperature checked before consumption, in order to avoid burns.



Eggs in their shell and whole hardboiled eggs should not be heated in the microwave since they may explode, even after microwave heating has ended.



Only use utensils that are suitable for use in microwave ovens.



When heating food in plastic or paper containers, monitor the appliance due to the possibility of ignition.



If smoke is emitted, switch off or unplug the appliance. Keep the door closed in order to stifle any flames.



Before carrying out any maintenance, disconnect the appliance from the power supply.



Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.



If the mains power supply cable is damaged, it must be replaced by the manufacturer, Authorised Service Centre or similarly qualified persons to avoid electrical hazard.



Do not use the appliance when it is empty. Metal parts inside the cooking compartment can create arcing and damage the oven.



Metallic containers for food and beverages must not be used for microwave cooking. (This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking).

WARNING: If the door or door seals are damaged, the appliance must not be operated until it has been repaired by a qualified person.



Only a qualified person can carry out any service or repair operation that involves the removal of a cover that gives protection against exposure to microwave energy.



Do not attempt to use the appliance with the door open. This can result in harmful exposure to microwave energy. **DO NOT** tamper or break the safety interlocks.



If the appliance is not maintained in a good state of cleanliness, its surfaces could degrade and affect the lifespan of the product and may lead to malfunction.



Do not place any object between the oven front face and door or allow soiling or cleaning residue to accumulate on these closing, sealing surfaces.

Safety with children



កូន្ត This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Children aged 3 years and under must be kept away at all times from the appliance when it is in operation.

- Children must not be allowed to clean or maintain the microwave unsupervised.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Please supervise children in the vicinity of the microwave and do not let them play with it.
- All children should be supervised when the oven is used in combination mode due to the high temperatures generated.
- Please keep all packaging away from children and dispose of it appropriately.

Keep appliance and power cord away from children below 8 years old.

Use the child lock when required.



Keep children and pets away from the appliance when it operates or when it cools down. Accessible



parts may be hot.

Electrical safety



Touching some of the internal components can cause serious personal injury or death.

WARNING: Do not disassemble this appliance. Improper use of the arounding can result in electric shock.

Grounding

- The appliance must be grounded. In the event of an electrical short circuit grounding reduces the risk of electric shock by providing an escape wire for the electric current
- Only connect the microwave to a grounded outlet/line with the voltage and protection as specified in the "Technical Specifications".

Power cord & extensions

- The power cord has a grounding wire with a grounding plug.
- If damaged it must be replaced by

the manufacturer, LAMONA service engineer or suitably qualified person.

1

The plug must be plugged into an outlet that is properly installed and grounded.

- If you must use an extension cord, use only a 3-wire extension cord.
- The short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- If a long cord set or extension cord is used:

The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

The extension cord must be a grounded-type 3-wire cord.

 Arrange the cord so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

Safety in use



Use oven gloves when placing or removing cookware.



Do not operate the appliance when it is empty.



The appliance and its accessible parts may become hot during use. Take care when removing

or installing accessories. Avoid touching the grill elements.



If the microwave is mounted at height, take care removing hot cookware, especially with liquids.



Open the door carefully. Use of ingredients containing alcohol can come into contact with hot surfaces or mix with air and ignite.



Take care when opening the door, hot air / steam may be released.



Do not operate the appliance with wet hands or if it has been in contact with water.



Do not put flammable products or items that are wet, in or near the microwave.



Ensure ventilation openings are clear from blockage.



Set the kitchen Timer to 0 after each use to prevent the microwave operating when empty.

- Do not use the microwave function to pre-heat the oven.
- Do not leave the appliance unattended during operation.
- Do not put pressure on the appliance door when it is open.
- Do not let sparks / open flames come in contact with the microwave when you open the door.

- Do not put aluminium foil directly under the appliance.
- Do not put water directly into the hot appliance.
- Do not keep moist dishes and food in the appliance after you have finished cooking.

Precautions to avoid possible exposure to excessive microwave energy

 It is hazardous for anyone other than a qualified or competent person to carry out any service or repair that involves removal of a cover which gives protection against exposure to microwave energy.



Do not attempt to operate this oven with the door open since this can result in harmful exposure to excessive microwaye radiation.



Do not place any object between the oven front face and door or allow soiling or cleaning residue to accumulate on these closing and sealing surfaces.



Do not break or tamper with the safety interlocks.

If door/door seals are damaged, do not operate the oven until repaired by a competent person.



If the appliance is not maintained in a good state of cleanliness, its surface could be degraded which may affect the lifespan of the product and lead to malfunction.

2. Microwave cooking, a general guide

Remove aluminium foil packaging from metal containers etc. before you prepare the food for heating.

- Put the food on a plate on the turntable unless specified differently.
- After cooking let food stand for some time
- If possible, always stir the food before serving.
- Where possible, cook food covered with material suitable for microwave use. Only cook food without a cover if you want to keep a crust.
- Do not overcook dishes by setting the power and time too high. The food can dry out, burn or catch fire.
- Do not use the appliance to cook eggs in their shells, as they can explode. even when cooking has ended.

- Pierce skin or peel potatoes, tomatoes, sausages and similar types of food with a fork, several times before cooking to prevent food bursting open.
- For chilled/frozen food, set a longer cooking time at a lower power.

Do not heat foodstuffs in sealed containers, they are could explode!

- Dishes containing sauce must be stirred from time to time.
- Turn larger pieces of food over after half the cooking time.
- If possible, cut vegetables into similar sized pieces.
- Use flat, wide dishes.

Do not use cookware made of porcelain, ceramic or earthenware with unglazed bottoms, or small holes (for example on handles). Moisture can penetrate the holes and cause the cookware to become very hot. The cookware may crack.

Defrosting meat, poultry & fish:

• Put the frozen, unwrapped food on a small upturned plate with a container below it or on a defrosting rack or plastic sieve so that the defrosting liquid can run off.

 Turn the food after half the defrosting time. If possible divide, then remove pieces that have started to defrost.



Defrosting butter & portions of aateau:

• Do not fully defrost in the appliance. but let them defrost completely at room temperature. This gives a more even result. Remove all metal or aluminium packaging or parts before defrosting.



Defrosting fruit & vegetables.

- If fruit and vegetables are not to be cooked completely, do not defrost them fully in the microwave but let them defrost completely at room temperature.
- To cook fruit and vegetables without defrosting them first, you can use a high microwave power.



Ready meals:



Ready meals in metal packaging or plastic trays with metal covers can only be defrosted or heated in the microwave if they are expressly designated as suitable for use in the microwave.

Follow the manufacturer's instructions printed on the packaging (e.g. remove cover / pierce the plastic film).

Cookware you can use in the microwave



Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of a browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Use microwave-safe cookware only. Follow the manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove the lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Use heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates/cups	Use these for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. These should be labelled "Microwave Safe". Some plastic containers soften as the food inside gets hotter. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by the product instructions.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow the plastic wrap to touch food.
Thermometers	Use microwave-safe thermometers only.
Wax paper	Use as a cover to prevent splattering and retain moisture.

Avoid using these materials when microwave cooking X




Utensils	Remarks	
Aluminium tray /foil	May cause arcing. Transfer food into a microwave-safe dish.	
Food carton with metal handle	May cause arcing. Transfer food into a microwave-safe dish.	
Metal or metal-trimmed utensils	Metal, shields the food from microwave energy. Metal trim may cause arcing.	
Metal twist ties	May cause arcing and could cause a fire in the oven.	
Paper bags	May ignite and start a fire in the oven.	
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	
Wood	Wood will dry out when used in the microwave oven and may split or crack.	

LAMONA




Turntable Installation

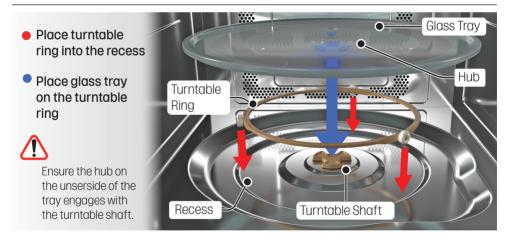


- Never use the oven without the turntable. It can rotate clockwise & anticlockwise.
- Never restrict the movement of the turntable.
- Both glass tray & turntable ring must always be used during cooking.
- Always place food for cooking on the glass tray.
- If the glass tray or turntable ring cracks or breaks, contact your nearest authorised service centre.

 Wire racks

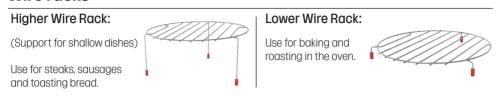

4. Control Panel

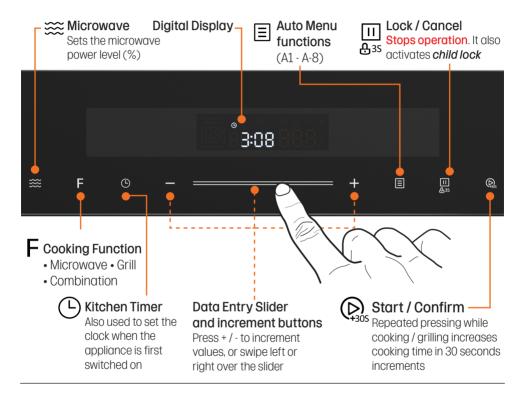

5. Before first use



Please read the safety information on page 5 of this booklet.



Before using the microwave for the first time, please clean the cooking compartment and accessories. Ensure all shipping tape has been removed.

• Ensure the turntable ring and glass tray are placed correctly.



Setting the clock



The clock displays time in 24 hour format. It will not work if it has not been set at power on.



When first switched on, the displays shows



(((



 
.....the hour digits flash).









 















Example

6.Microwave Cooking



Order	Displayed	Power
1	P10	100%
2	P8	80%
3	P5	50%
4	P3	30%
5	P1	10%


(A) Select the microwave power setting

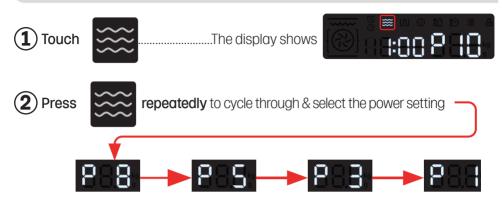


The microwave power is now set



 (B) Set the cooking time



Example: Cooking at 80% microwave power for 20 minutes...

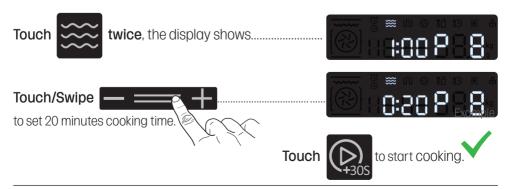

Speed cooking (100 % Power)

- The Speed Cooking function allows rapid cooking at 100% power. Cooking time can be increased easily in multiples of 30 seconds.
- Maximum cooking time using this function is 95 minutes.
- Speed cooking cannot be set during the "Defrost by Weight", or "Auto Menu" functions.
- (1) Touching



repeatedly increases speed cooking time by 30 seconds.



Both power and microwave indications flash as the cooking time counts down.



Cooking begins immediately using 100% power on the first touch.

If cooking time has already elapsed after the first touch, additional touches will add 30 seconds to the elapsed time.

Touching






*The example shows a second touch after 2 seconds of cooking time has elapsed.



Cooking using the grill

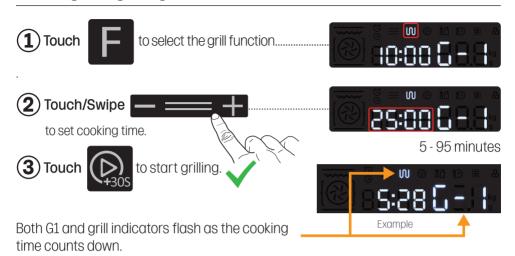

When grilling is 50% complete 2 alert tones (1)) will sound to remind you to turn the food over. If no other input is made, grilling will continue until the cooking time elapses.



(1)) 5 tones sound when grilling is ends.



Defrost by weight (Cooking time is set automatically)



2 Touch/Swipe to set the food weight (0.1 to 2kg).



3 Touch



to start defrosting. The indicators flash as the time counts down.





Defrost by time

1 Touch 3 timesThe display shows......



2 Touch/Swipe to set the defrost time (up to 95 minutes).



3 Touch



to start defrosting. The indicators flash as the time counts down.

When progress reaches 50% (1)) 2 alert tones will sound. Turn the food over at this point. After a few seconds, defrosting will continue until the time elapses.

The defrost power cannot be changed.

(1) 5 tones sound when defrosting is complete.



Auto menu (8 Pre-set cooking functions)



to cycle through pre-set cooking functions $A - 1 \longrightarrow A - 8$.

2) Touch/Swipe



to set a food weight.

Flash during cooking





to start: Pre-set cooking time counts down.


(1)) 5 tones sound when finished.



	*Menu	**Weight	Display	Power
		1 (about 230g)	1	
	Potato	2 (about 460g)	2	P10
		3 (about 690g)	3	
		150g	150g	P8
	Meat	300g	3 00g	
8-5-	Meat	450g	450g	
		600g	600g	
		150g	150g	
		250g	250g	
8-3-	Fish	350g	350g	P8
		450g	450g	
		650g	650g	
		150g	150g	
00.00	Vegetable	350g	350g	P10
		500g	500g	
		1 cup (240g)	1	
امصوما	Beverage	2 cup (480g)	2	P10
	3 cup (720)g	3		
		50g (cold water 450g)	50g	
l go go	Pasta	100g (cold water 800g)	100g	P8
	150g (cold water 1200g)	150g		
	Popcorn	100g	100g	P10
© ≅ W ®		200g	100g	
88.88	Pizza	400g	400g	P10+G-1

LAMONA

 (I) (See Combination

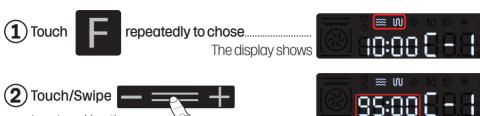






Combination, microwave and grill indicators flash as the time counts down.

(1)) 5 tones sound when the function completes.



Example

Kitchen timer

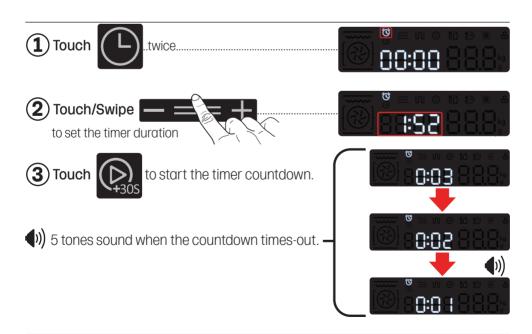

Inquire function

While the microwave is cooking, to see the current time:

Touch



.....The current time is displayed



Example

After 3 seconds, the display reverts to display the current cooking function status.



The child lock function can be used to prevent children operating the microwave.

This function can only be used while the microwave is **not** cooking or defrosting.

LOCK

Touch and hold lock/cancel



for 3 seconds...



Example

All control panel controls are disabled (except the child lock function).

UNLOCK

Touch and hold



again for 3 seconds..



Example

The child lock indicator goes off and normal functionality is restored.



7. Trouble Shooting

During normal operation the following observations are normal		
When cooking, the microwave interferes with TV reception.	If the microwave is close to a radio or TV; reception may be impaired, this is normal.	
The oven light is dim.	If cooking using a low power setting, the light may become dim. This is normal.	
Steam is coming out of the vents . Condensation is also accumulating on the door.	During cooking steam can be generated. Most will be evacuated through the vents, though some may settle on a colder surface, such as the oven door. This is normal.	

Problem	Possible Cause	Remedy
The microwave will not switch on.	The power cord is not plugged in tightly.	Unplug, then plug in again (after 10 seconds).
	The plug fuse has blown or the circuit breaker has tripped.	Replace the fuse or reset the circuit breaker (carried out by a competent qualified person).
	The power outlet is not supplying power.	Test the outlet with other electrical appliances e.g. a lamp.
The microwave is not heating properly.	I closed and is sealing	



WARNING: If the door or door seals are damaged the oven must not be operated until it has been repaired by a competent person.

8. Care & Maintenance



The microwave must be unplugged from the power supply socket before cleaning.



If the appliance is not maintained in a good state of cleanliness, its surfaces could be damaged. This may affect the lifespan of the product and could lead to malfunction.



The appliance should be cleaned regularly and any food deposits removed immediately after cooking.



Leave the door open after cooking to allow any condensation to evaporate.



Allow the oven to cool before cleaning.

Cleaning the cooking compartment



Clean the cooking compartment after use with a slightly damp cloth. Do not use steel wool pads. Clean accessories with soapy water



For easy cleaning of the cooking compartment. Place half a lemon in 300ml (1/2 pint) of water and heat for 10 minutes at 100% microwave power. Wipe clean with a soft dry cloth:

Door contact surfaces and neighbouring parts



Clean the door frame, contact surfaces and neighbouring parts carefully with a damp cloth.





Take care not to scratch any glass and brushed steel bezel.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in the glass shattering.



Do not use a steam cleaner to clean the appliance.



Discolouration of the enamel or stainless steel has no effect on the performance of the appliance.

- Use a deep pan for moist cakes.
- Fruit juices can cause stains that can be permanent.

Cleaning the accessories



Remove the glass tray and turntable ring. Clean with soapy water.

Utensil Test



See page 11, for information on microwave safe materials. If in doubt, test the utensil using the procedure below.

- Fill a microwave safe container with 1 cup of cold water (250ml) along with the utensil in question.
- 2. Cook for 1 minute at 100% power.
- **3.** Feel the utensil. If it is warm, DO NOT use it for microwave cooking.



WARNING: DO NOT exceed 1 minute cooking time.

Service



To ensure continued safe and efficient operation of the appliance, we recommend that any servicing or repairs are only carried out by an

authorised LAMONA service engineer as this may involve removal of a cover giving protection against exposure to microwave energy.

9. Installation



Please read this manual carefully before installation

This appliance is intended for domestic use only.



The appliance is heavy. Take care when moving it.



Always use safety gloves and enclosed footwear.

WARNING! Only a suitably competent / qualified person must install this appliance.

- This oven is for built-in use only. Do not install behind a decorative door.
- It is not intended for counter-top use or for use inside a cupboard.



Remove all packaging.



Do not pull or lift the appliance by the door.

 Maintain minimum distances from other appliances and units.



Do not install or use the appliance if it appears to be damaged.

Electrical Connections

 Electrical connection must be made by a suitably qualified person. The product must be installed in accordance with all local regulations.



The appliance must be earthed.

 The appliance is fitted with a plug and must only be connected to a properly installed, earthed socket in accordance with the appropriate regulations.

The mains supply voltage must correspond to the voltage specified on the rating plate. See specifications on page 30.

- The socket must be installed by a qualified electrician.
- The power cable must only be replaced by a qualified electrician.

If the plug is no longer accessible following installation, an all-pole disconnecting device must be present on the installation side with a contact gap of at least 3mm.




Adapters, multi-way strips and extension leads must not be used. Overloading can result in a risk of fire.





Accessible surfaces may be hot during operation.

Appliance Dimensions

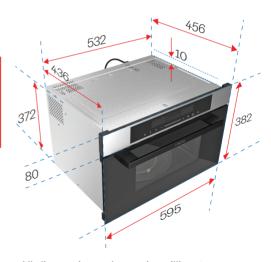

All dimensions shown in millimetres.



The appliance must be correctly ventilated.




Minimum installation height is 850mm.

Do not position or use under a work surface. The appliance must not be subjected to spillages from containers onto surfaces under which the appliance is installed.



Do not cover ventilation slots and air intakes points.

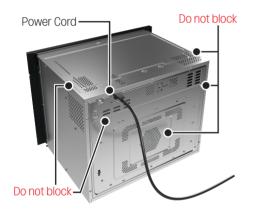



Take care not to trap or bend the power cord.



Depending upon the installation, it might be necessary to fix the position of the power cable on the back of the microwave, using adhesive tape.

Fixing screws




2x 20mm CSK

Ensure the cooking compartment is empty of components and accessories before moving or mounting the appliance.




Minimum clearances

Standard appliance tower shown with shelves adjusted as shown at **(3)**.

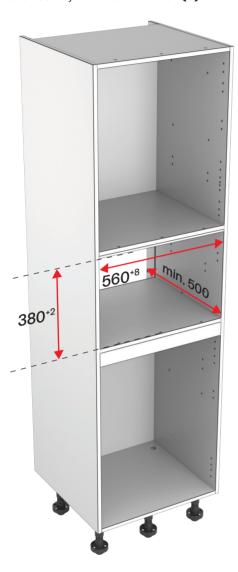


1. Remove back panel support from the cabinet service void.

Cut down to provide adequate ventilation. The microwave and <u>service</u> void must be properly maintained.

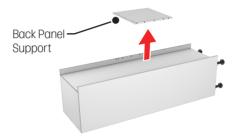



2. Remove the back panel. Once shelf positions are established, mark and cut to provide suitable ventilation.

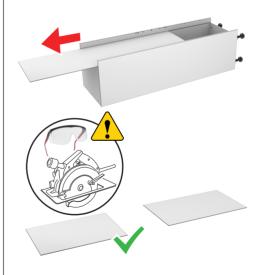





3. Reposition shelves

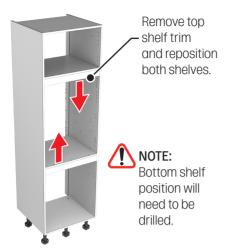

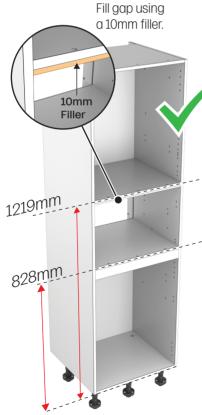


4. Fix 115mm Fascia

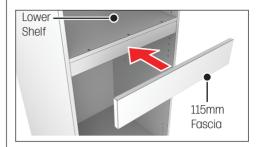

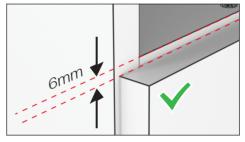

Service void and ventilation

The cabinet must allow ventilation behind the microwave. The service void must be maintained and kept free from blockage.

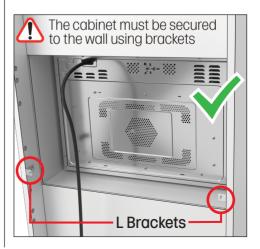

Position and install



Take care not to scratch the glass, brushed steel control panel and door when installing. Remove all accessories from the oven cavity.


Open the oven door. Use the supplied fixing screws to fix the appliance to the front of the cabinet.

1. Insert the microwave until the frame abuts the front of the cabinet.



2. Ensure the microwave is centred.



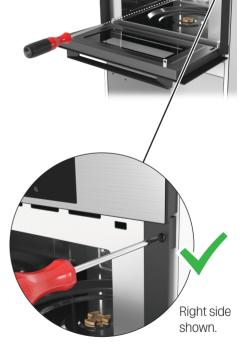





10. Technical Specifications

Model	LAM7350/ LAM7351
Rated Voltage	230V ~ 50Hz
Total Input Power	1450W
Rated Output Power (microwave)	900W
Grill/Top Element Power	1100W
Oven Capacity	34L
Turntable Diameter	Ø 345mm
Dimensions (HxWxD)	382x 595 x 456mm
Net Weight	22.9kg



Ensure the appliance is switched off before replacing the lamp.

11. Environmental Care



The environmentally friendly, recyclable packaging is designed to protect the appliance from damage during transportation. All packaging materials should be recycled.

> Recycling reduces the use of raw materials in the manufacturina process and also reduces the amount of waste in landfill sites.

Disposing of your old appliance

- To ensure safe disposal, disconnect the mains plug from the socket. Cut the mains power cable and destroy this and the plug.
- Electrical & electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety.
- These could be hazardous to human. health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



This appliance is marked according to the European directive 2012/19/FU on Waste Flectrical and Flectronic Equipment (WEEE).

WEEE contains both polluting substances (which can cause negative consequences for the environment) and basic components (which can be reused).

It is important to have WEEE subjected to specific treatments in order to remove and dispose of, properly, all pollutants and recover and recycle all materials.

Please dispose of this appliance at your local community waste WEEE collection or recycling centre for electrical and electronic appliances, or contact your dealer for advice.

DO NOT dispose of this product with household waste

12. Your guarantee

Product Guarantee Details (UK and Republic of Ireland only)

Your appliance has the benefit of a comprehensive manufacturer's guarantee which covers the cost of breakdown repairs. (Details of which are shown on your Proof of Purchase Document).

- Any claim during the period of the guarantee
 MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE.
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person. (The guarantee in no way affects your statutory or legal rights).

What to do if you need to report a problem

Please ensure you have ready:

- The product's model and serial numbers.
- Howdens Proof of Purchase Document.
- Your full contact details

Call the Depot number on your Proof of Purchase Document supplied with the product/kitchen.

or

Call the LAMONA Service Line on: Within the UK: 0344 460 0006 Within Republic of Ireland: 01525 5703

 Product installed within a domestic kitchen or a non-domestic kitchen where 8 or fewer people are using the appliance.

Where to find model and serial number on your appliance.

On the rear of the microwave.

Spare Parts availability - 10 years
Only fit Genuine Spare Parts
www.lamonaspares.co.uk (UK only)

Product serial number

Product serial number (Place sticker here)





Howden Joinery Ltd, Thorpe Road, Howden, East Yorkshire, DN14 7PA Imported in EU by: Houdan Cuisines SAS, Z.A. du Bois Rigault Nord, 1Rue Calmette, 62880 Vendin-le-Vieil, Cedex, France.

Product information correct at the time of publication in March 2024. The company has a policy of continuous product development and reserves the right to change any products and specifications given in this manual. Subject to the Terms and Conditions of Trading, a copy of the Howdens Terms and Conditions is available upon request.

Copyright © 2024 Howden Joinery Ltd. All rights reserved.