


TAP3420 – Alvo Right Angled Swan Neck Single Lever

Key:	Description:	APX size (mm):	Base material	Colour:	QTY:
A1	Aerator	M16 x F	Plastic	White/Light blue	1
A2	Spout	210 x 215	Brass	Chrome	1
A3	PTFE spacer	3 x 17 OD	Plastic	White	1
A4	O-ring	2 x 14 OD	Rubber	Black	2
A5	PTFE spacer	3 x 14 OD	Plastic	White	1
B1	Body	80 x 65	Brass	Chrome	1
B2	Base plinth	48 x 5.5	Brass	Chrome	1
B3	Upper seal	2.5 x 44 OD	Rubber	Black	1
C1	Cartridge	35mm Single Lever Ceramic	Plastic	Light blue	1
C2	Valve bush	36 x 10	Brass	Brass	1
C3	Decorative cover	38 x 12	Plastic	Chrome	1
C4	Handle	33 x 95 nominal Ø 40 mm	Mazak	Chrome	1
C5	Grub screw	5 x 4	Steel	Silver	1
D1	Fixing stud	M8 x 95	Steel	Silver	1
D2	Fixing washer	45 OD	Rubber	Black	1
D3	Metal horseshoe	51 x 4.5	Steel	Silver	1
D4	Fixing nut	15 x 11 AF	Brass	Brass	1
D5	Hot flexi tail	½" BSP Male x 355mm	Stainless braided hose	Silver/Red	1
D6	Cold flexi tail	½" BSP Female x 360mm	Stainless braided hose	Silver/Blue	1
D7	Non-return valve	16 x 15	Plastic	White	1

TAP3420 – Alvo Right Angled Swan Neck Single Lever

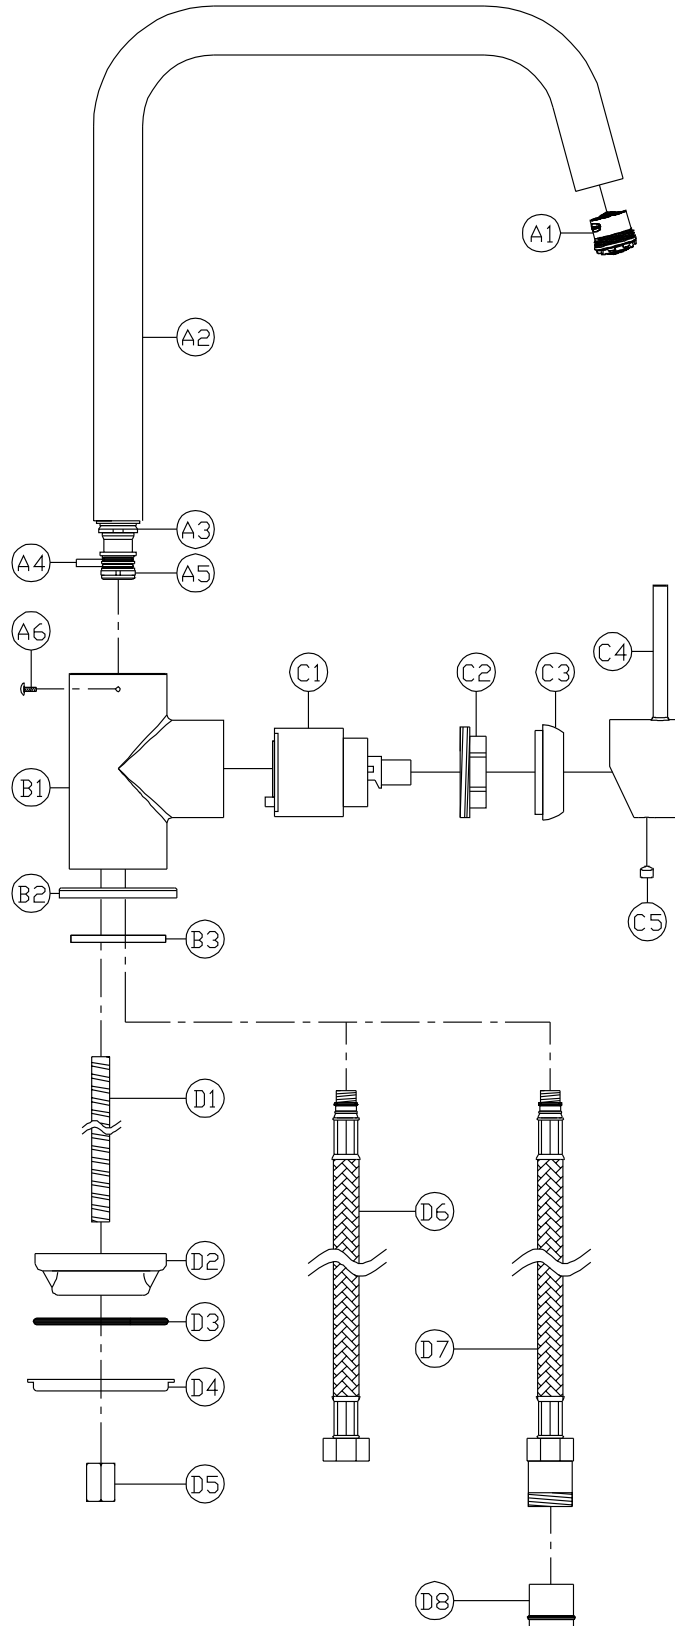

LAMONA
Exclusive to Howdens Joinery Co.

TAP3420 - Alvo Right Angled Single Lever Tap v1

our policy is to continually
improve and develop products,
and accordingly we reserve the
right to amend specifications
without prior notice

TAP3420 – Alvo Right Angled Swan Neck Single Lever

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Loosen grub screw (C5) on the underside of handle (C4) using a 2.5mm A/F Allen key.
2. Pull the handle (C4) horizontally away from the tap body (B1).
3. Unscrew the decorative cover (C3) horizontally away from tap body (B1) by hand.
4. With the tap (B1) fixed to the sink/base unit, using an adjustable spanner unscrew the valve lock nut (C2).
5. Clean the Inside of chamber (B1) with a soft wet cloth.
6. Replace the faulty valve (C1) with the new one and assemble in reverse order.

To replace the spout O-rings:

1. Loosen grub screw (A6) on the back of body (B1) using a 2.5mm A/F Allen key.
2. Pull the spout (A2) vertically away from the tap body (B1).
3. Remove upper PTFE ring (A3 & A5) and O-rings (A4) using a precision screwdriver and replace with new ones.
4. Reassemble the tap in reverse order.