

Magnetic Catch


Fitting Application

IMPORTANT: The hinges and hinge plates supplied with your cabinet will need to be replaced with the hinges and hinge plates supplied as part of the magnetic catch pack. These should be fitted to the cabinet in the positions of the existing hinges and hinge plates.


Adapter Plate

- 1 Fit the adapter plate to the hinge plate positions on the opposite side of the hinged door. Use euro screws to secure.


Note: If your cabinet does not have hinge plate holes drilled, pilot drill and use two 13mm csk screws. Adapter should be fitted flush with the front edge of the cabinet and 70mm up from the bottom of the side panel.

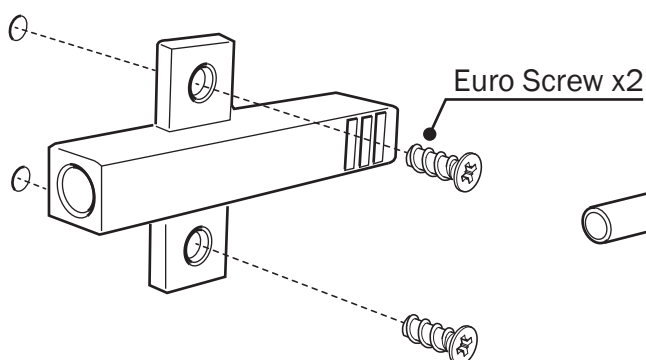


- 2 Fit the piston to the adapter plate pushing into place.

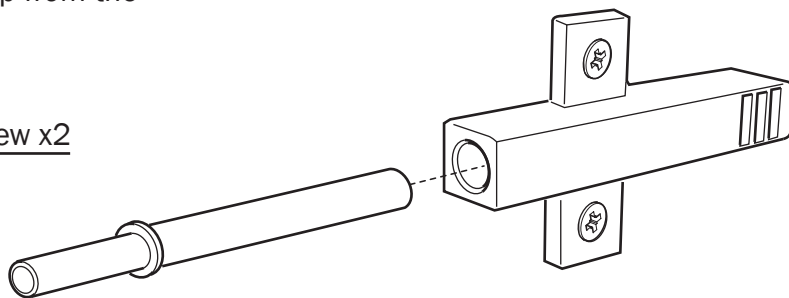

- 3 Use the adhesive magnet or screw on magnet, positioning to the back of the door in line with the piston.

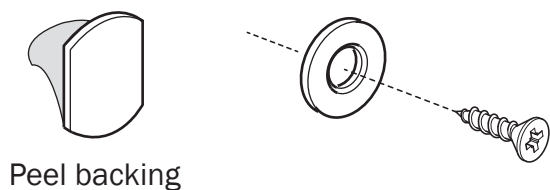


- 4 Adjust the position of the piston by turning the end.

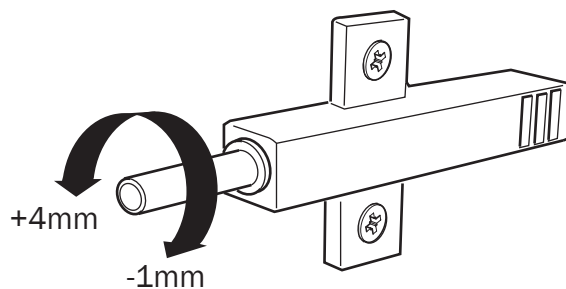

Side Panel Edge Application

- 1 Carefully drill the front edge of the cabinet.
Note: Drill hole should be a diameter of 10mm x 76mm in depth.

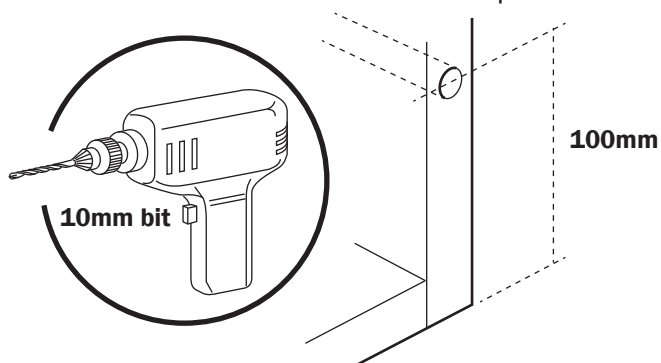

- 2 Fit the piston into the hole. Fit the magnet to the door as shown above.

