
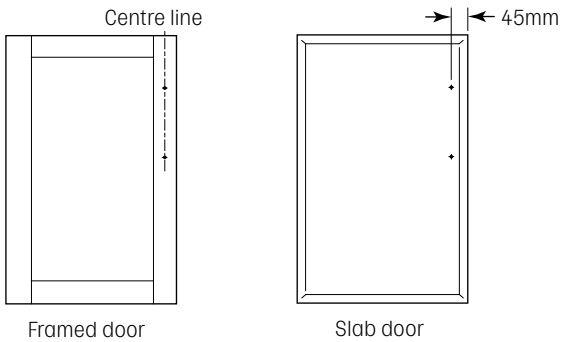
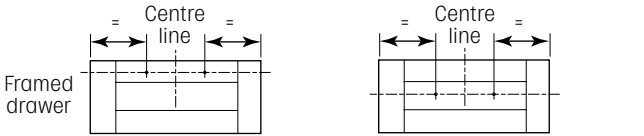


Section 4 - Kitchen installation - Handles

Handle fixing

Application examples

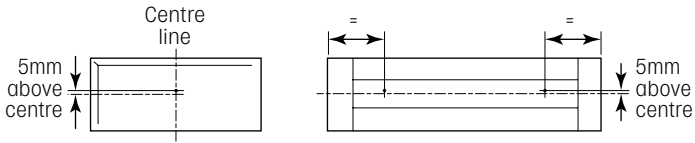

Handle fixing

Follow the diagrams to ensure the handle positions are aligned throughout the range and are positioned correctly.

We recommend you fit the frontals to the cabinets before you start marking and drilling handle positions.

NOTE: Always check the drilling centres before any holes are drilled.

IMPORTANT: Be aware of handle clash situations in corner configurations.




1. Measure the handle position on the frontal.

NOTE: When marking drawer fronts make sure holes are 5mm above the centre line of the drawer as shown in the application example.


2. Ensure all spike positions are parallel.

3. Drill the frontal.


4. Secure the handle using the screws provided.

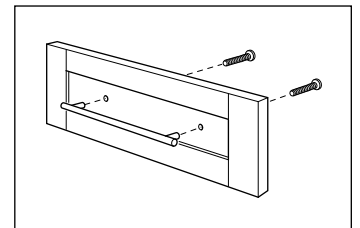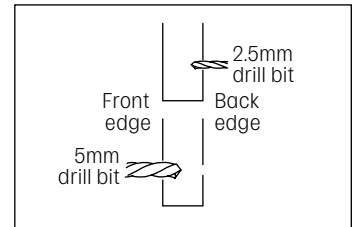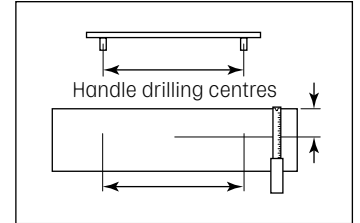


Finishing touches

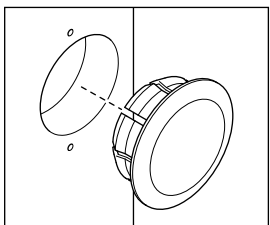


Hinge hole cover cap

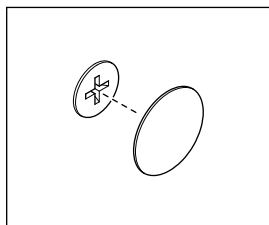


Screw cover cap

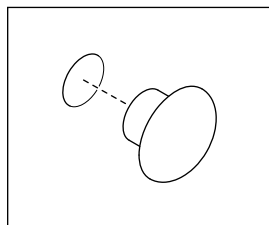

5mm Cover cap

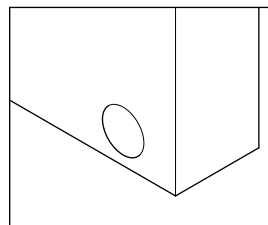

Bumpers (x2)

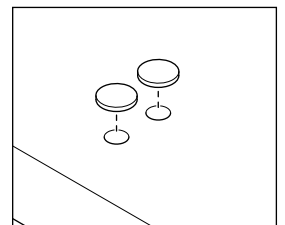

Self-adhesive cover cap