


Section 4 - Kitchen installation - Tower cabinets

Fixing to wall and connecting

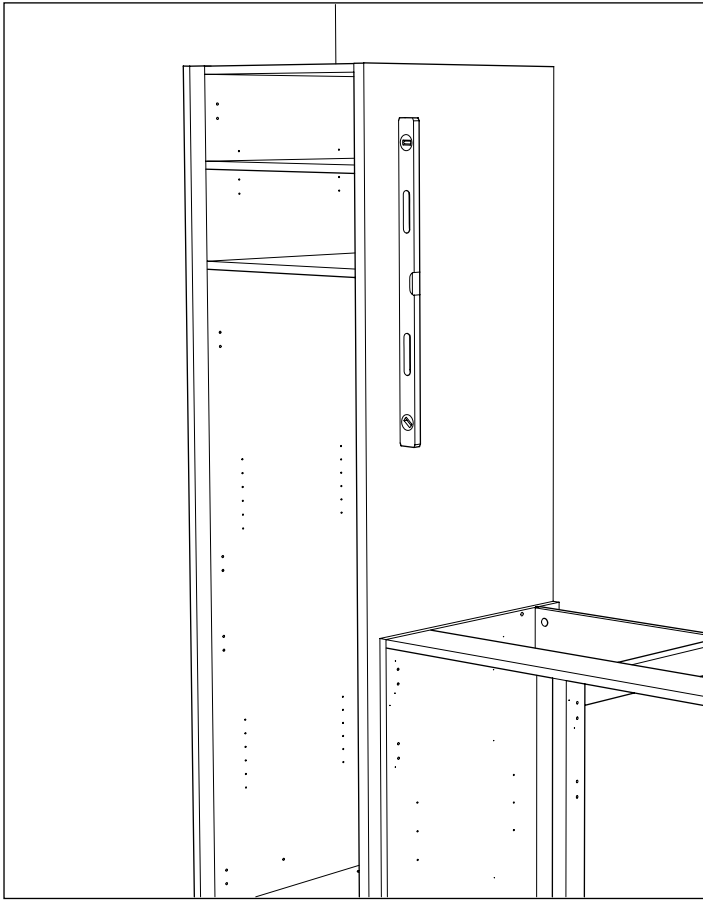

Larder




Place the first tower cabinet in position and level to bring it into line with the other cabinets. Fasten the right angled brackets to top of cabinet with 4x12mm pan head screws or 16mm flange head screws.

NOTE: Fit a 180mm top box to the larder tower cabinet to make it an extra tall tower, see **page 149** for fixing.


NOTE: If you have purchased cornice for the kitchen, do not secure the right angled bracket to the exposed side of the tower cabinet but secure to the cornice after fitting.

Mark, drill and plug the wall, see **page 32** and secure. Connect all tower cabinets with countersunk screws.

Where two tower cabinets fit side by side use 6x30mm CSK screws.

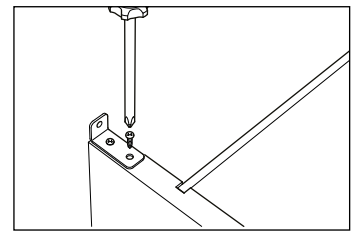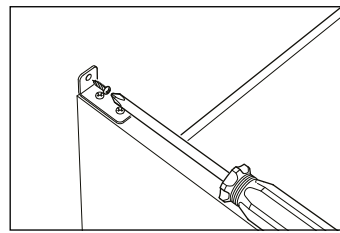


Larder bracket





12mm Pan head screw


For profile kitchens, see **Section 2**.




16mm Flange head screw

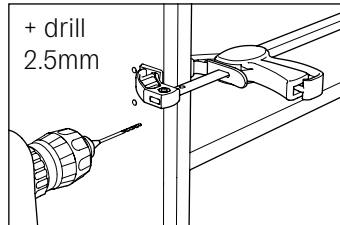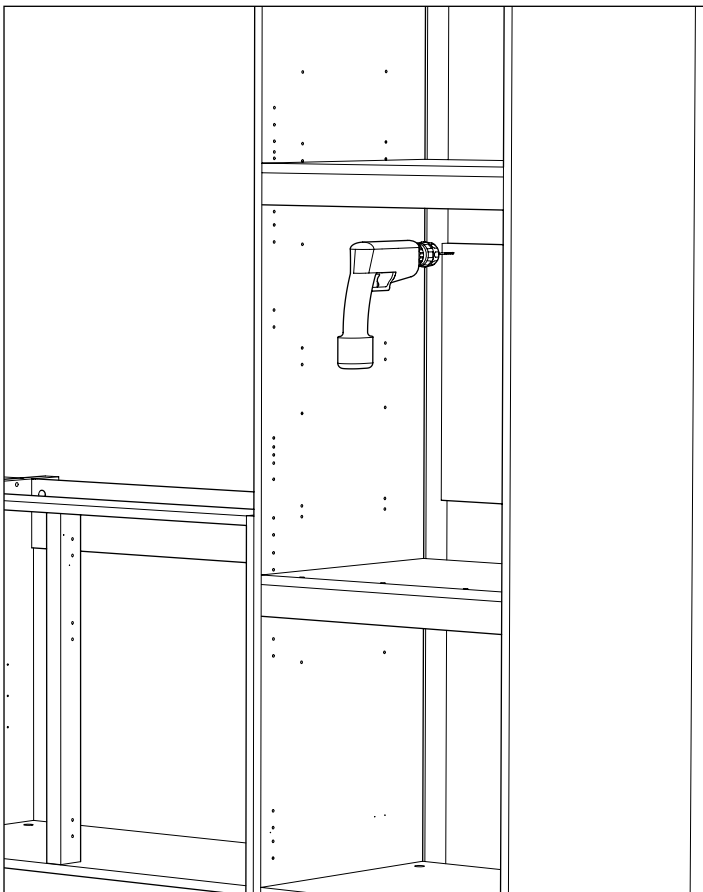

+ drill
2.5mm

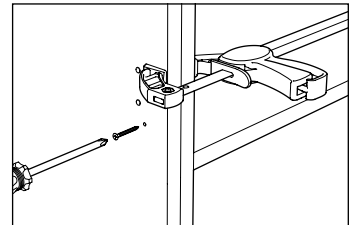

For profile kitchens, see **Section 2**.



30mm CSK screw

Appliance towers

The appliance tower **MUST** be secured to the wall for extra stability using larder brackets and screws (supplied in the fittings pack). Wall fixing screws have not been provided with this unit due to different wall types requiring different fixings.

NOTE: Where applicable, secure the tower through the fixed back support panel.

