


Planning dimensions - Cabinet corner

Standard wall cabinet


Always plan your kitchen/start the installation from a corner.
 Movable centre uprights are fitted to the cabinets to give flexibility to the configurations.
 Ensure consideration is given to cabinet alignment and lighting.

NOTE: 600mm corner wall and adjacent cabinet can be replaced using a 631 L shape wall as required.


931 Corner

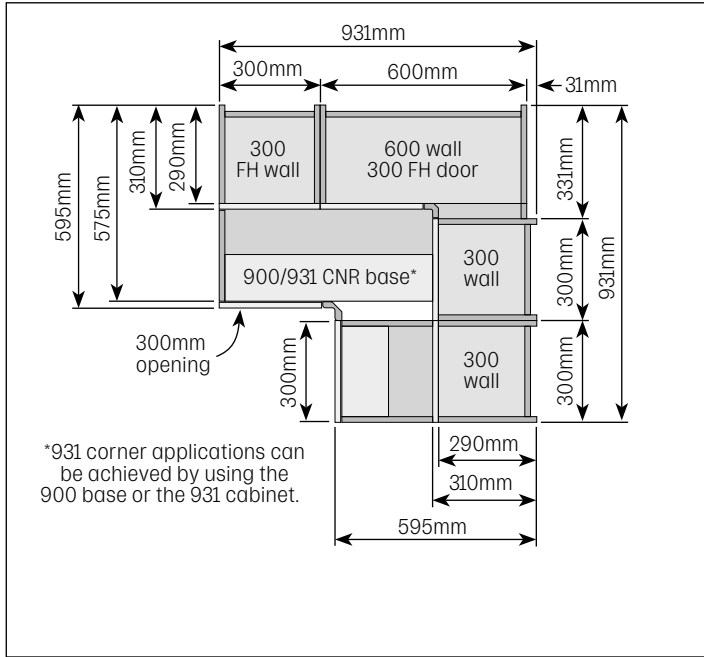


1031 Corner

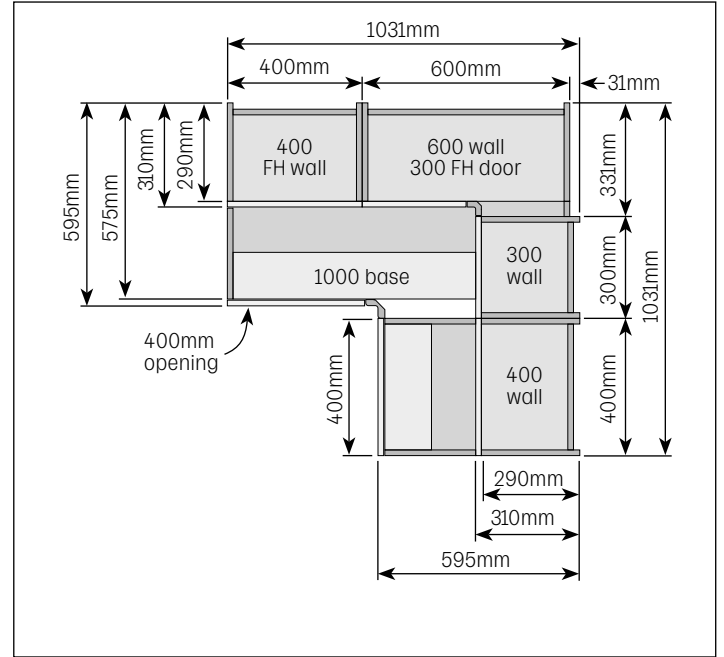

1131 Corner

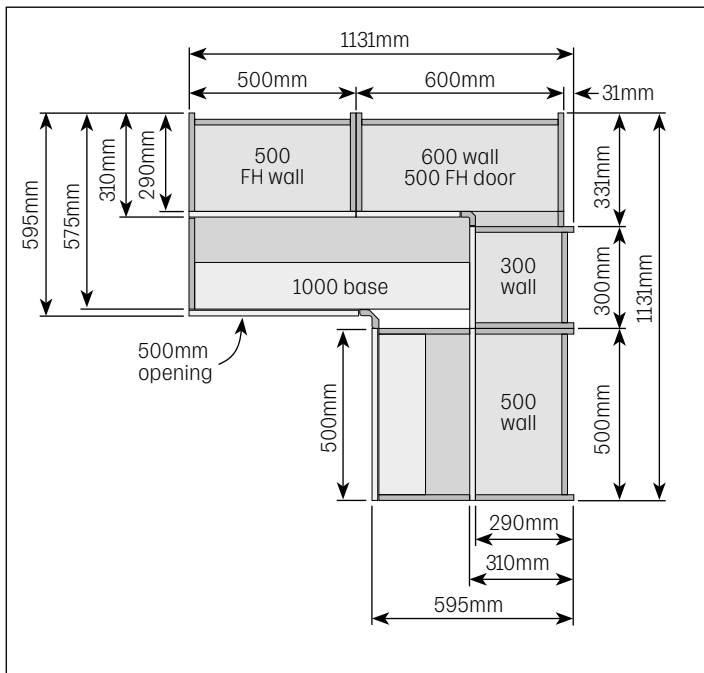

1231 Corner

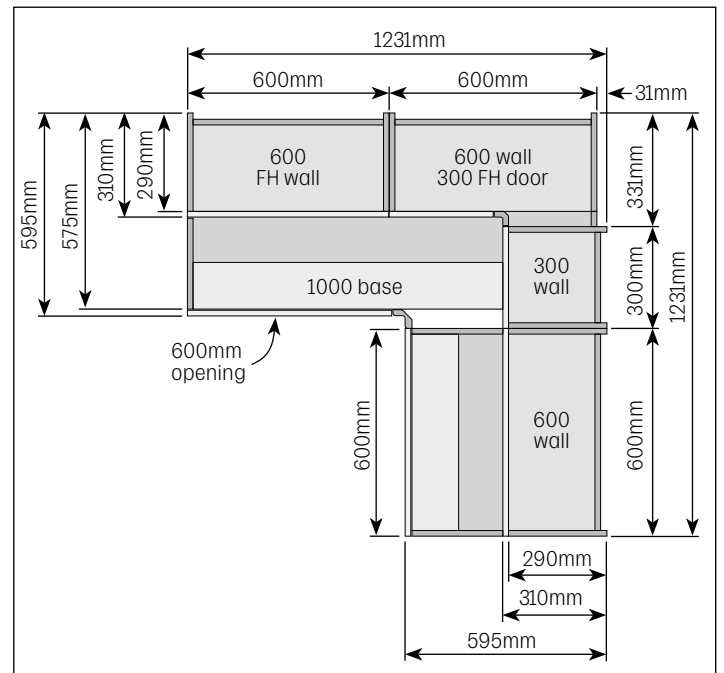


Planning dimensions - Cabinet corner

Deep wall cabinet


Always plan your kitchen/start the installation from a corner.
Movable centre uprights are fitted to the cabinets to give flexibility to the configurations.
Ensure consideration is given to cabinet alignment and lighting.

NOTE: 700mm corner wall and adjacent cabinet can be replaced using a 731 L shape wall as required.


931 Corner

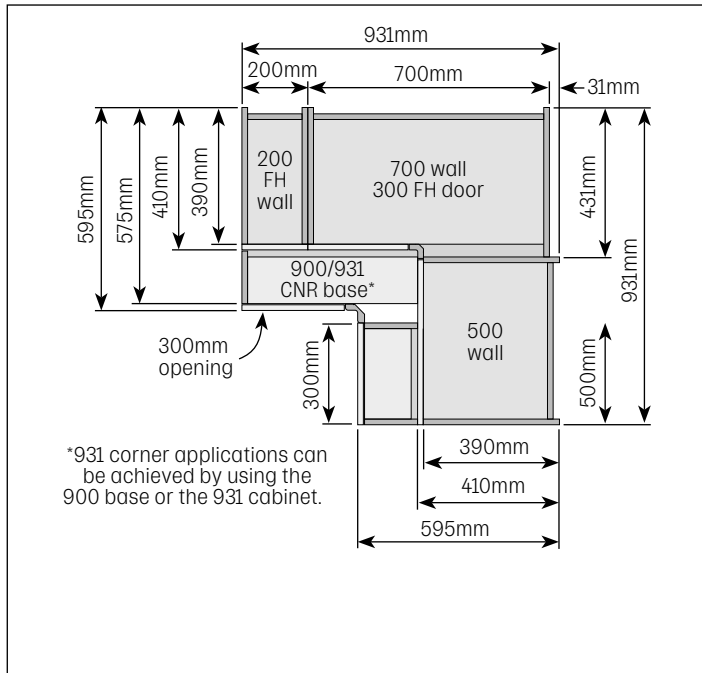

1031 Corner

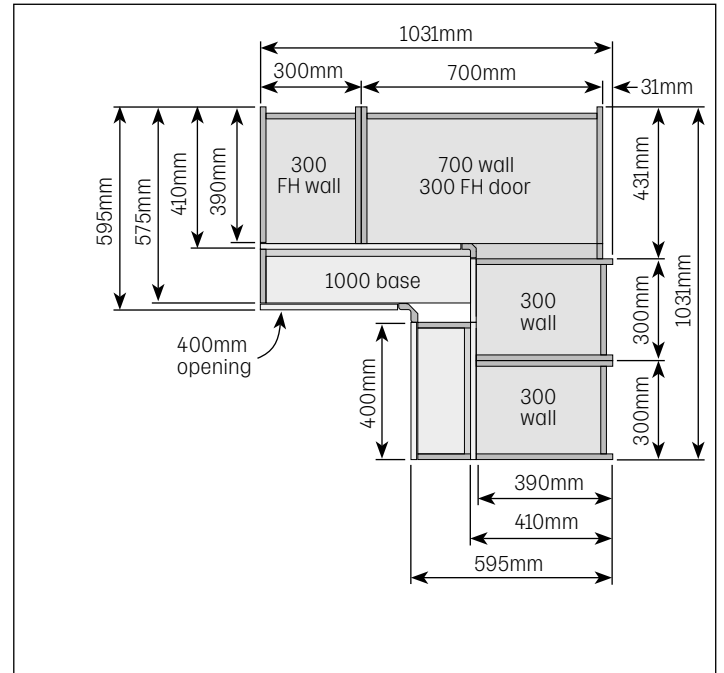

1131 Corner

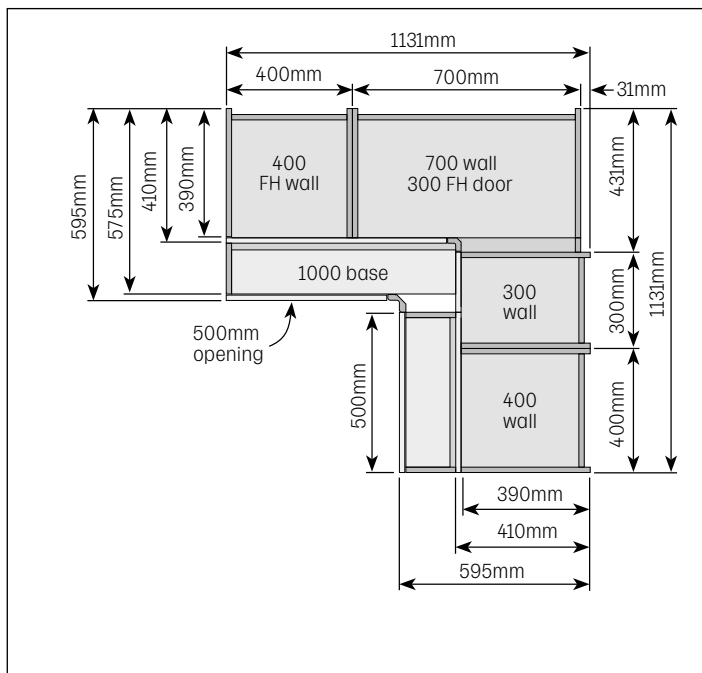

1231 Corner

