



Installation

Remove the 4 x Transit Bolts

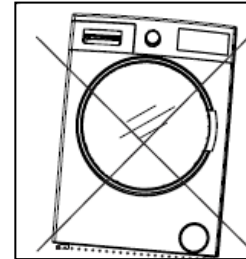

Adjust the 4 x feet to level machine

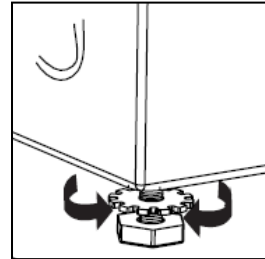

Careful not to kink crush hoses

