
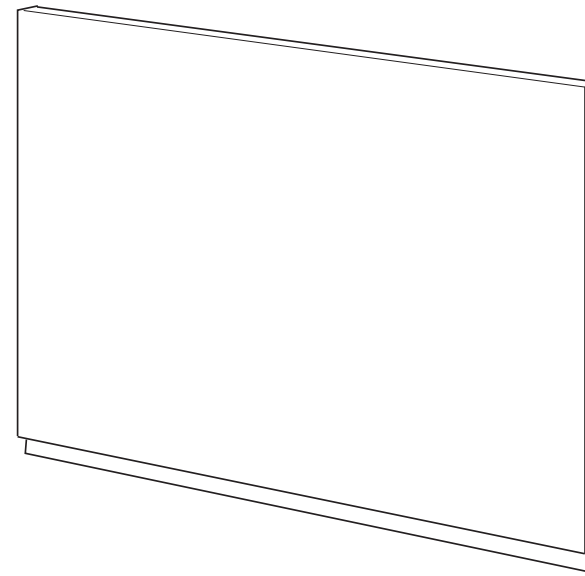


60 & 90cm
Splashbacks

HJA 2985
HJA 2986


LAMONA
Exclusive to Howdens Joinery Co.

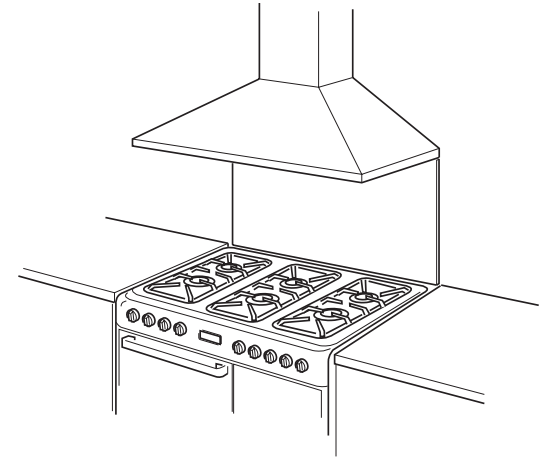

Important Information




Please read the information below before commencing the installation. Retain this leaflet for future reference.

- **CAUTION:** Be aware of sharp edges around the splash back.
- We recommend a two man installation.

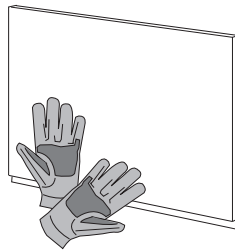

- The wall should be flat and clear of any obstructions, and before any drilling takes place, checks should be made that no electrical cables or pipe work are in line of the fixing area.
- The splash back should be fitted before the installation of your extractor hood.


1 FITTING

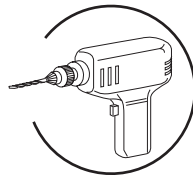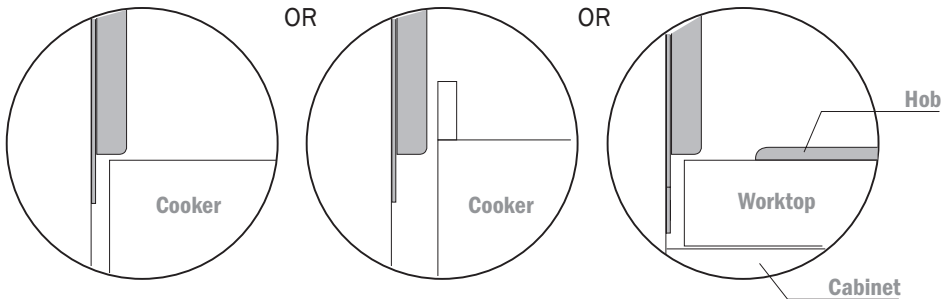

Using the dimensions shown, mark the fixing positions and drill holes suitable for appropriate wall plugs.


Installation

2

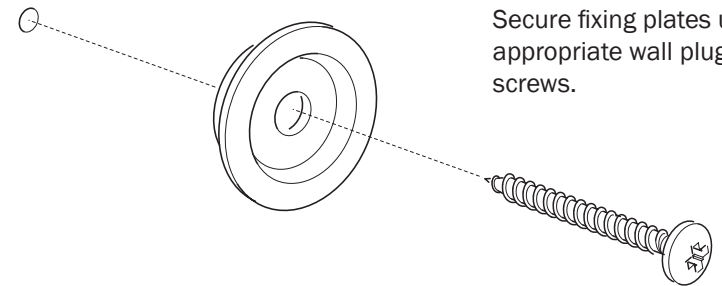


Secure fixing plates using appropriate wall plugs and screws.

3

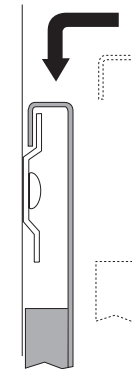

Fit the splashback over the screw fixing plates slotting into position.
Note: Ensure the bottom of the splashback is positioned correctly.

4

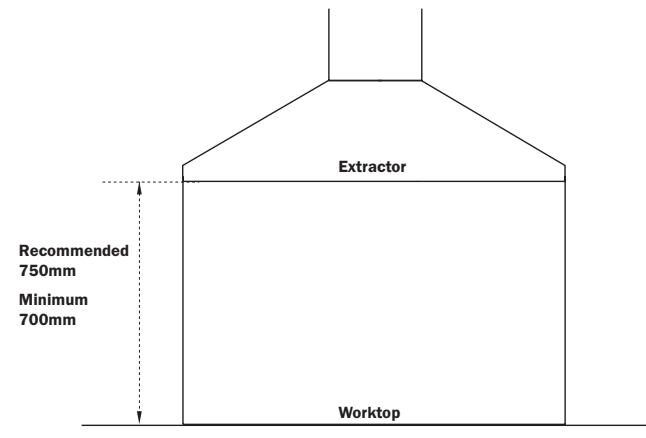

Care and maintenance

Cleaning

Never use paint solvents, washing soda, caustic cleaners, biological powders, bleach, chlorine based bleach cleaners, coarse abrasives or salt.