



# HOWDENS HERRINGBONE LAMINATE FLOORING

Simple and quick click joint installation with no glue required\*



\*see stage 6 of installation section

## Features and benefits



Compression proof  
& impact resistant



Suitable for hot water &  
electrical underfloor heating



Planks can be  
independently fitted

## Important information



Sealed packs must be stored for at least 48 hours where they are to be laid.



Packs are to be laid flat on the floor with at least 50cm between packs and walls.



Packs should be stored in a room with a minimum temperature of 18°C.



Do not open packs until you are ready to install the flooring.



The fitting method for this flooring is unique and laying instructions must be followed on the reverse of this inlay.

630mm x 126mm x 8mm

11 Panels Per Pack

Coverage 0.873m<sup>2</sup>

Pack Weight: 6kgs



<b>UK CA</b>
<b>Howden Joinery Group Plc</b> 105 Wigmore Street, London W1U 1QY 13 DoP: HJ-033-JC
EN 14041:2004/AC2006 Laminate flooring for internal non structural use Reaction to fire: Class Cfl - s1 Content of Pentachlorophenol: <5 mg/kg (ppm) Formaldehyde Emission: Class E1 Sliding Behaviour: DS Thermal conductivity: 0.08 W/(m <sup>2</sup> K)

<b>CE</b>
<b>Howden Joinery Group Plc</b> 105 Wigmore Street, London W1U 1QY 13 DoP: HJ-032-JC
EN 14041:2004/AC2006 Laminate flooring for internal non structural use Reaction to fire: Class Cfl - s1 Content of Pentachlorophenol: <5 mg/kg (ppm) Formaldehyde Emission: Class E1 Sliding Behaviour: DS Thermal conductivity: 0.08 W/(m <sup>2</sup> K)

## IMPORTANT LAMINATE FLOORING FITTING NOTICE



- Sub-floor must be flat, smooth, clean and permanently dry
- Use spacers to create the required expansion gap (minimum 12mm) around the edge of the room and all fixed objects including door frames, radiator pipes & cabinet legs
- Check the moisture content of sub-floor and apply suitable moisture barrier if required
- Do not install kitchen cabinets on top of the floor
- Only suitable for use with underlay SDH0923



HOWDENS HERRINGBONE  
LAMINATE FLOORING


Pre-installation

Important: Cabinets must not be fitted on top of flooring

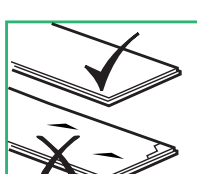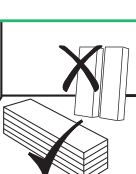



Clean the sub-floor



**SMOOTH**  
**CLEAN**  
**DRY**  
**SOUND**

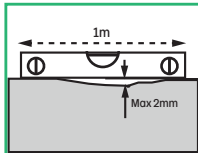

MAKE SURE EXISTING TIMBER SUB-FLOORS ARE SECURE

WHERE EXISTING FLOOR COVERINGS ARE BEING LEFT WHICH ARE IN POOR CONDITION, A SUITABLE FABRICATED UNDERLAY SHOULD BE USED

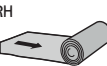
CHECK SUB-FLOOR MOISTURE CONTENT	
SOLID SUBFLOOR	TIMBER BASED
<p>✓ Cement &lt;2CM% ≤0.5cm% (Anhydrite/Calcium Sulphite) ≤75%RH</p> <p>✓ DPM  OR </p> <p>Always install a DPM where there are concerns over moisture in the sub-floor</p>	<p>✓ Moisture measurements 8-12% WME ≤75%RH</p> <p>✗ DPM</p> <p>✓ Breathable moisture barrier i.e - Bitumen moisture barrier paper can be used</p>

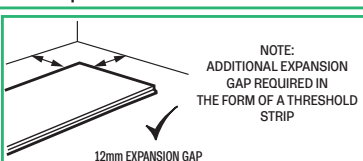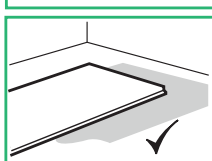

UNDERFLOOR HEATING

Water and electric\* systems can be used

\*electric systems must be encased in a minimum of 9mm of levelling compound above the pipes

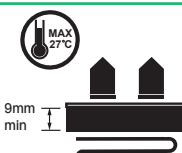


✓ GRADUALLY INCREASE TEMPERATURE BY 5° PER DAY TO A MAX OF 27°

✓ SEEK ADVICE FROM UNDERFLOOR HEATING MANUFACTURER

Installation

TOOLS REQUIRED

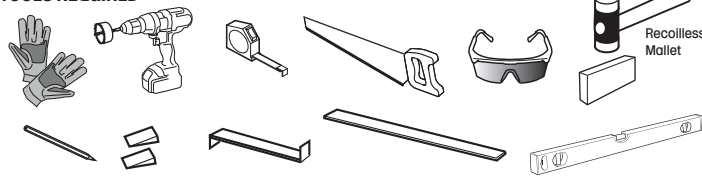


1 LAY UNDERLAY




Note: Underlay should be laid to the edges of the room

2 PLAN FROM THE CENTRE

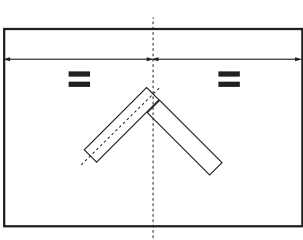


3 FLOOR PLANK ASSEMBLY & INSTALLATION METHOD

3a

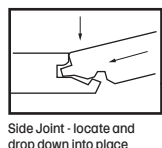


Side Joint - locate and drop down into place

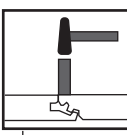

End (top) Joints on all short sides


Scan the QR code for installation video

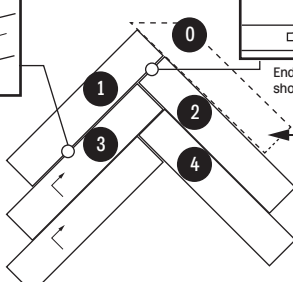

Cut & locate an 'installation support plank' (0)



Assemble one full column in sequence

3b

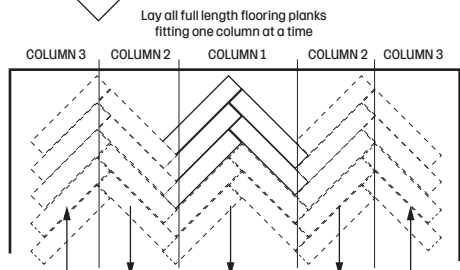


3c

Measure for the angled planks in the corner, starting with 1

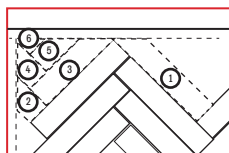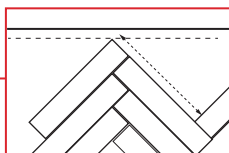


3d

Cut for the angled plank and fit. Measure, cut and fit the other corner sections.

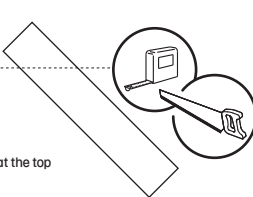

3e

Measure, cut and fit for other angled planks at the top & bottom of each column.

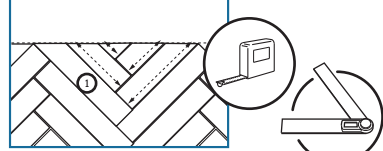


Note: Installation areas with length or width exceeding 8m and sharply angled rooms, require at least 20mm wide expansion joints.

Note: When cutting the angled planks, ensure the correct end is cut so the panel can be locked in place.


4

USE DOOR THRESHOLDS where required

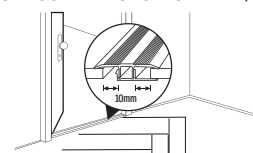


5

FITTING AROUND OR UNDER DOOR FRAMES

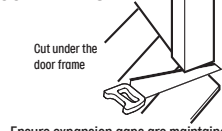


6


CUTTING AROUND PIPEWORK

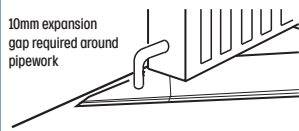

A.

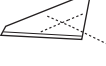

B.

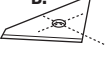

C.



D.




Glue should only be used when filling small triangular/cut-out areas

Care & Maintenance

Note: We recommend your flooring is regularly cleaned

Well wrung out mop and cleaning cloth can be used

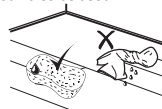



Castor cups




Felt pads



Soft castors

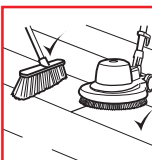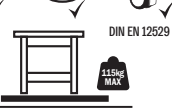

No steam mops should be used

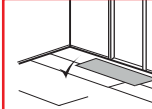

Entrance mats