



HOWDENS

Shaker & Panel Mould Half Wall Panelling Fitting Guide

**DESIGNED
BY FITTERS**

**FOR EASY
INSTALLATION**




Suggested Products:

Decorative Panel Mould: MOD0005


Stripwood: MOD0008

Skirting: MOD0801


Measure up to your preferred height for the wall panelling.
Draw a horizontal line across wall using straight edge ensuring line is level (**Fig 1**).

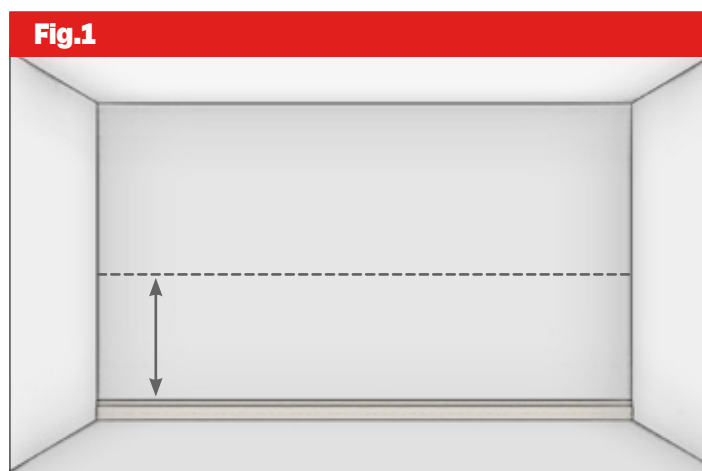

Measure, mark and cut horizontal strips for top and bottom.
Apply bead of adhesive to back of panel strips. Offer top strip to line and check using spirit level. Secure in position using nail gun.
Apply bottom strip and secure. NB before proceeding, please check for any cables and pipes using a detector (**Fig 2**).

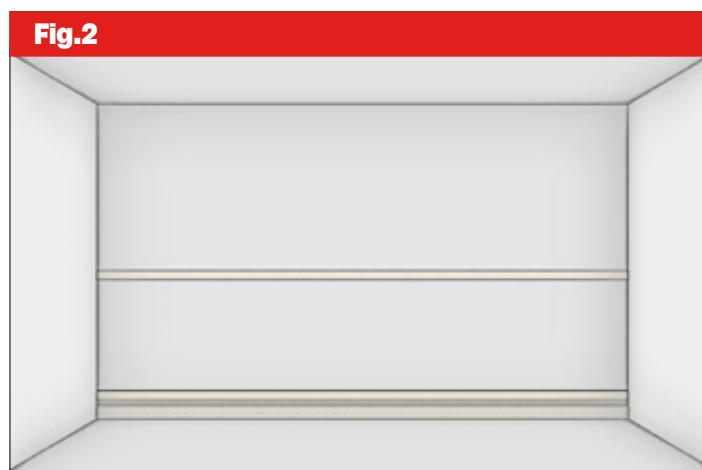

Measure, mark and cut strips for left and right sides.
Check level and install as before (**Fig 3**).

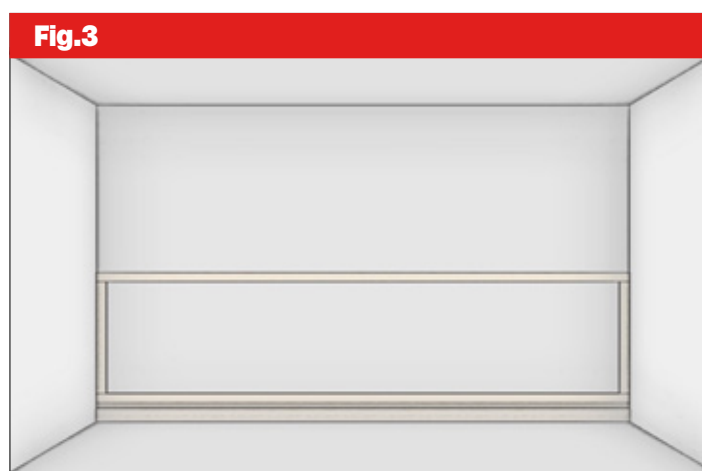

Mark centre locations of side panel strips where they join top and bottom strips. Measure distance between centres and divide by preferred number of panels going across

Example:

- Centre distance = $3532\text{mm} \div 7 \text{ panels} = 504.5\text{mm}$ centres
- Measure and mark centres along edges of top and bottom strips (**Fig 4**).
- Measure between top and bottom strips. Cut vertical strips.




Measure and mark centres on both ends on all vertical strips.

Apply adhesive to back of strip and offer between top and bottom strips so that the vertical strip centres are aligned with the centre marks on top and bottom strips. Check square with spirit level and secure using nail gun (**Fig 5**).


Repeat for remaining vertical strips.



Next, measure the internal height and width of each panel square/rectangle. Cut panel moulds to length with mitred corners (**Fig 6**).

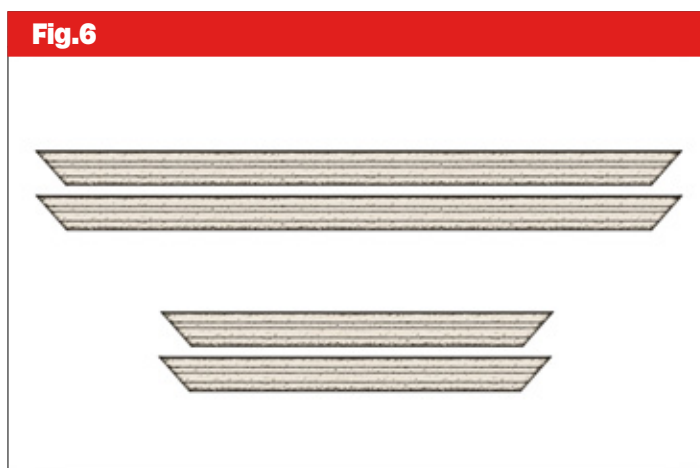

Apply adhesive to panel mould back and offer up to wall and corresponding panel edge. Pin in place to secure (**Fig 7**).

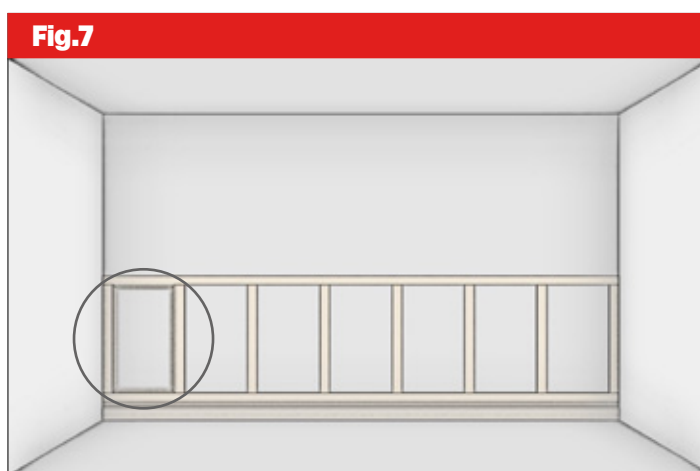


Repeat for each panel until all panel mouldings are fitted and secured (**Fig 8**).



Cut top capping mould to length. Apply adhesive to back of moulding and pin in place to secure **(Fig 9)**.

Fill any joint gaps.

Sand to a smooth finish then you are ready to paint.

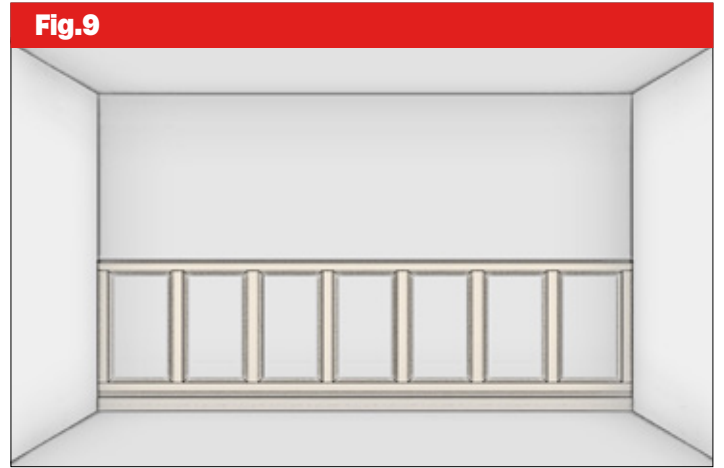



HOWDENS

Technical Helpline:
Freephone 0800 085 3475

