

# **Extra Tall Integrated Fridge Freezer**

LAM6380



Generic instructions, (to be used in conjunction with User Instructions).

- Please read these installation instructions to ensure safe fitting and use of the appliance.
- The appliance should be fitted by a suitably competent and qualified person.
- Please keep these instructions in a safe place for future reference.
- Danger of suffocation keep packaging material away from children.

ISSUE v1.6 131123

# **Installation Instructions**



www.howdens.com/appliance-registration

## Installation overview guide

1.	Establish power socket location, (must be accessible after installation)
2.	Prepare cabinet, (remove back panels)p.5
3.	Fit and adjust décor doorsp.5
4.	Fit side seal trim to fridge freezerp.6
5.	Protect cabinet edges with masking tapep.7
6.	Lift fridge freezer into cabinetp.7
7.	Level and align fridge freezer using front adjustable feet and spacer bracketsp.7-8
8.	Fix spacer brackets to fridge freezer and when in correct position screw to cabinet sides, (mid brackets then upper brackets)p.8
9.	Make any final feet adjustments to align fridge freezer to brackets and ensure correct spacing depths
10.	Tighten brackets to fridge freezer, ( <b>DO NOT</b> over tighten)p.8
11.	Attach door slidersp.9
12.	Remove bracket spacer tabs, install covers, screw cover capsp.9-10
( A.	Reverse fridge freezer doors if necessaryp.12-13





Please use brackets with tabs to ensure fridge freezer install depth is 40.5mm. (Use front feet adjustment to assist)

If installed deeper than 40.5mm (at either side) the fridge freezer doors may not close fully causing issues such as:-THE LIGHT WILL STAY ON THE ALARM WILL SOUND (\*Frost free models) THE FRIDGE FREEZER WILL NOT WORK CORRECTLY (Not cooling, icing-up, water leaking etc.)

# **Safety Information**



Two person lift.



**NOTE:** If the electricity cable is damaged it must be replaced by a competent person.




Fridge freezer must be fixed securely and level.



Risk of injury: Beware of metal edges. Use gloves when handling.



**Do not** install a damaged appliance.

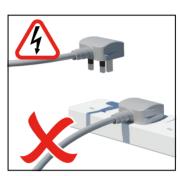

WARNING! Do not use extension cables / adapters.



WARNING! This appliance must be earthed. The electric socket must be accessible after fitting.

Throughout this manual the following symbols are used.



Warning for electric shock.



Warning for risk of fire / flammable materials.



Warning for injury or property damage risk.

# Installation

## **Tools required**






**DO NOT** use high speed impact power tools.

# Installation

## Parts supplied - DO NOT THROW AWAY!

#### **NOTE:** Screw heads are Phillips size 2.

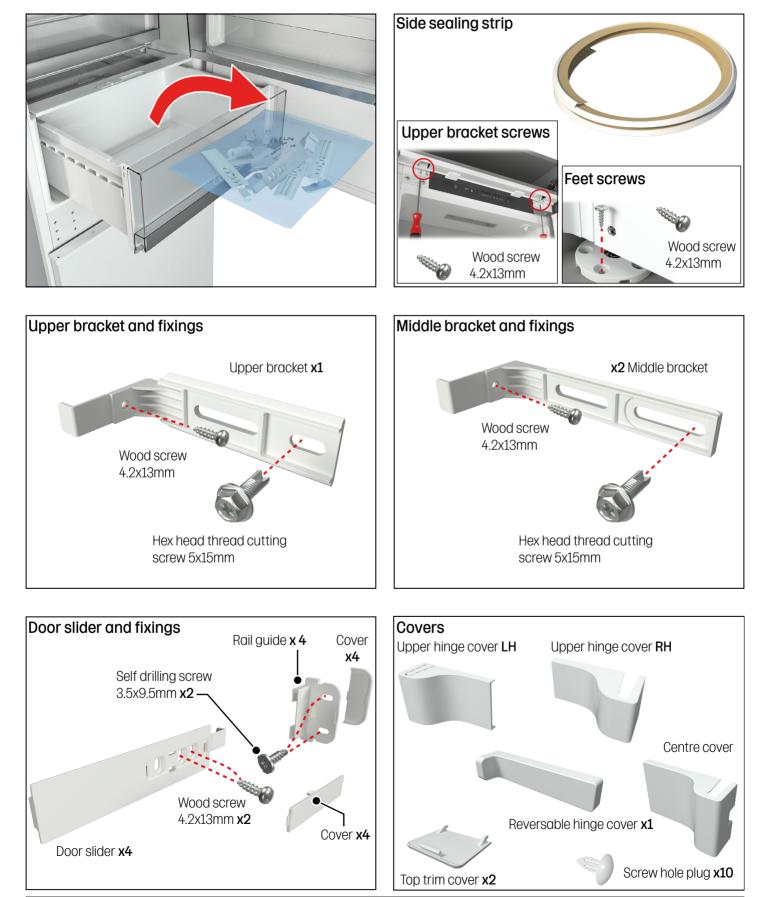


Ensure rear panel is removed.

**IMPORTANT:** Airflow around the fridge freezer is essential. Ventilation channels must be free of obstruction.



(1) Measure and cut side seal to fit between bracket zones.

(2) Apply seal, removing backing tape as you progress. Start from the bottom edge.

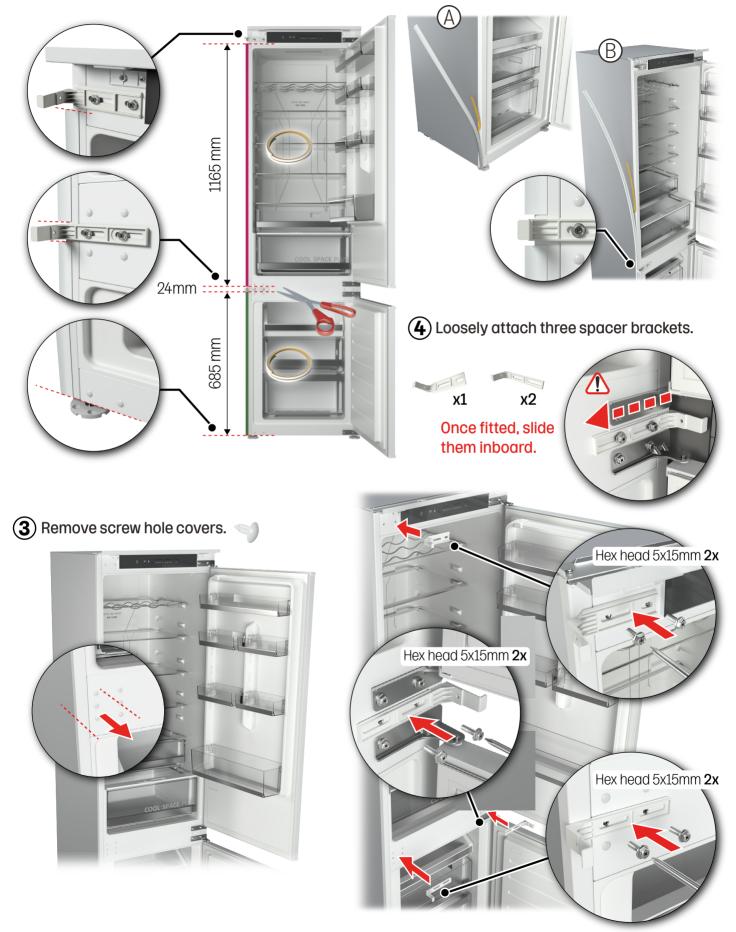


## Inserting into cabinet





(1) Protect base edge with masking tape.



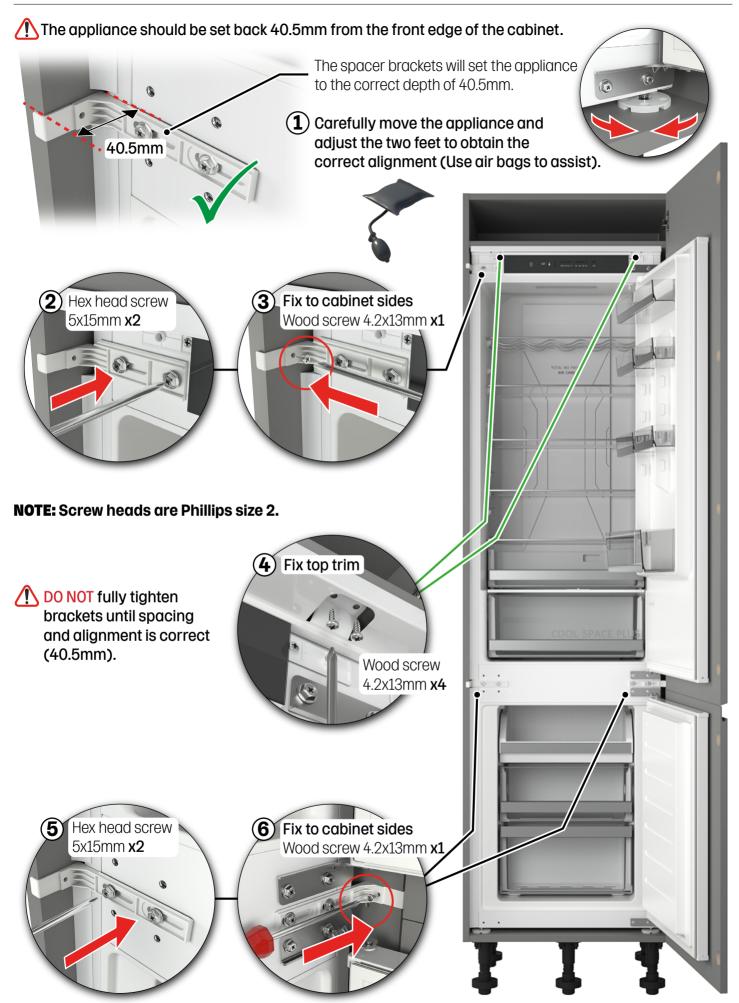

### Attach door sliders

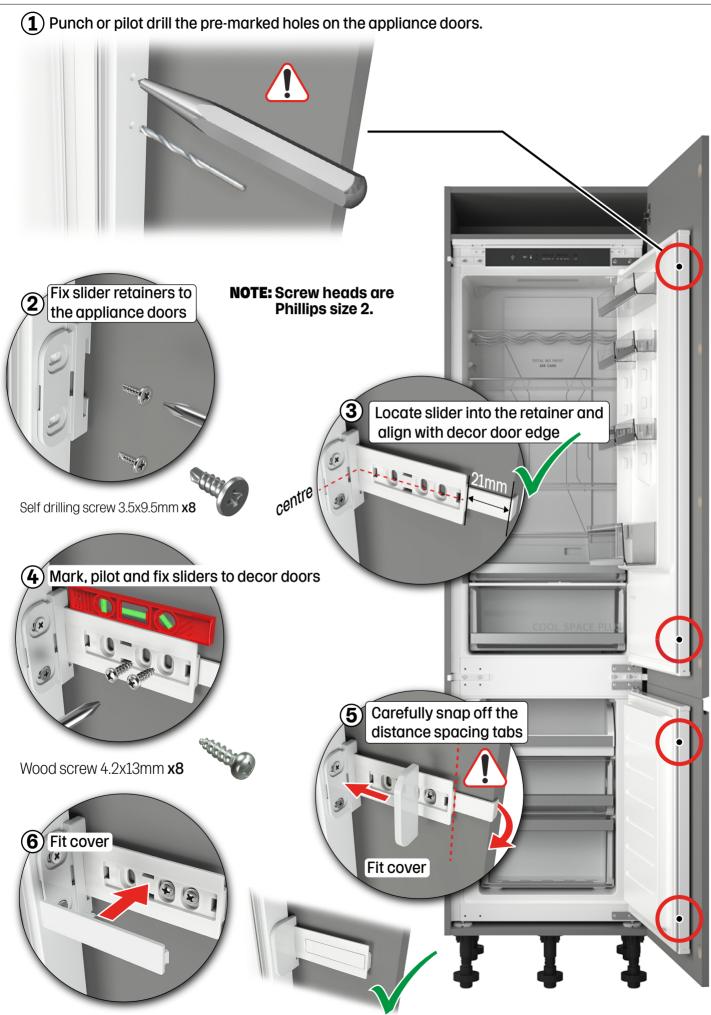

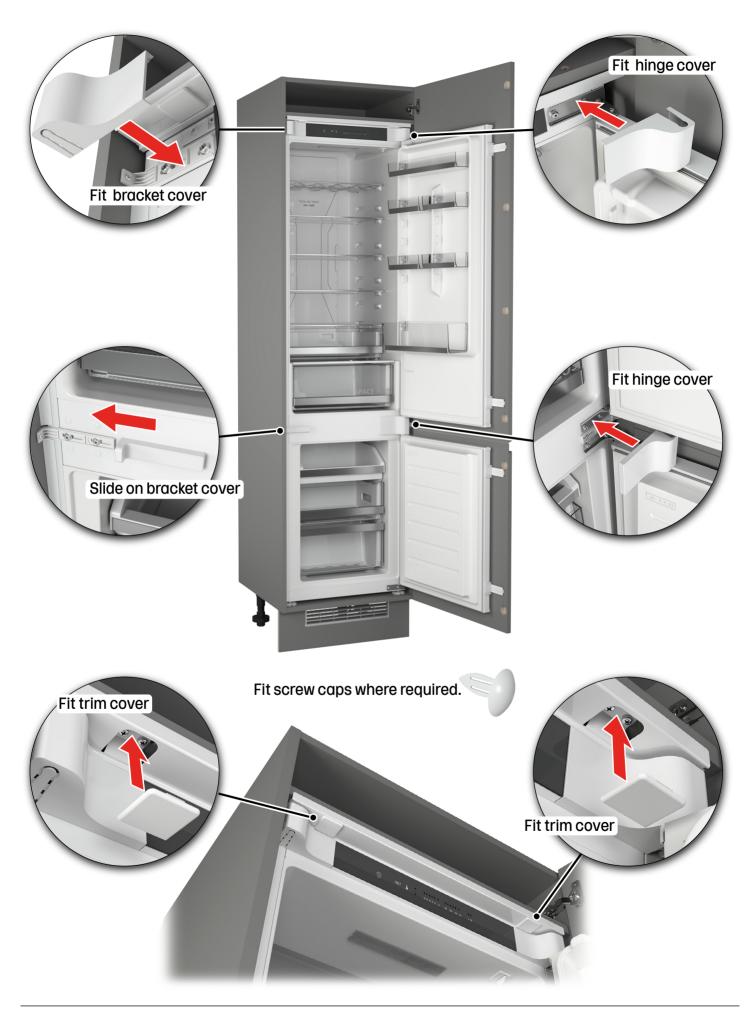


## Plinth vent

Fit a plinth vent for necessary airflow around the fridge freezer, see **Kitchen Installation Manual** for fitting instructions.




**Note:** Plinth vent must be fitted.

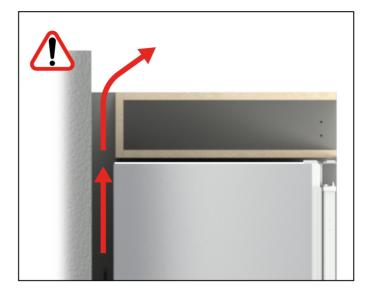



Ensure warm air can exit at the top.

## A. Reversing door opening

## If required, do this before installing into cabinet.

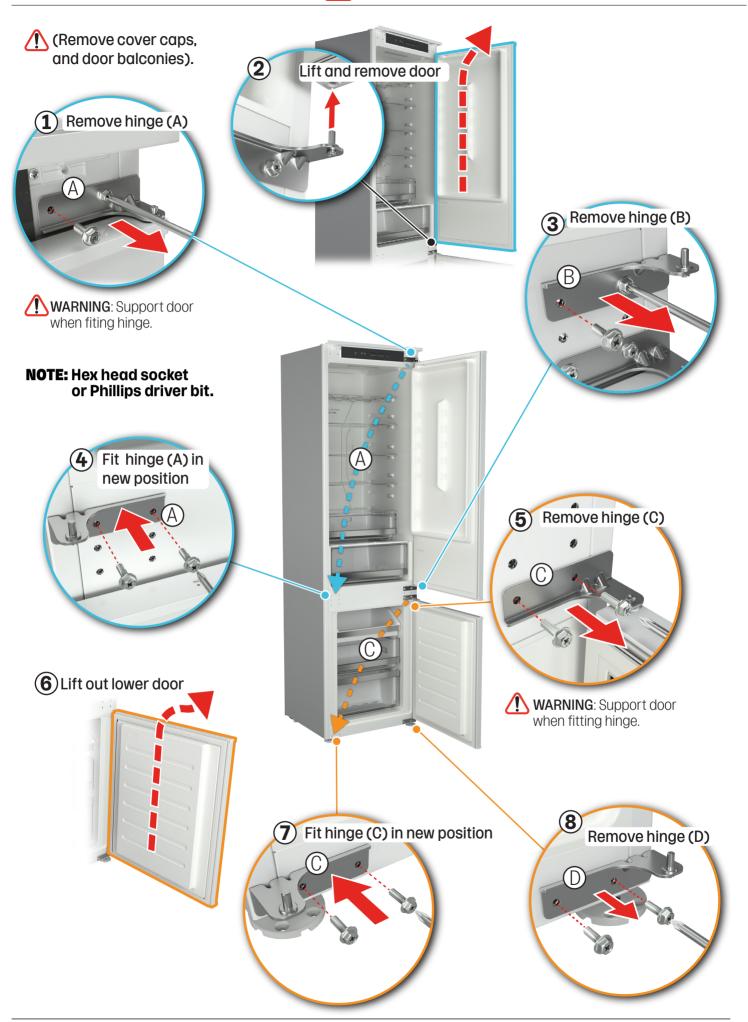

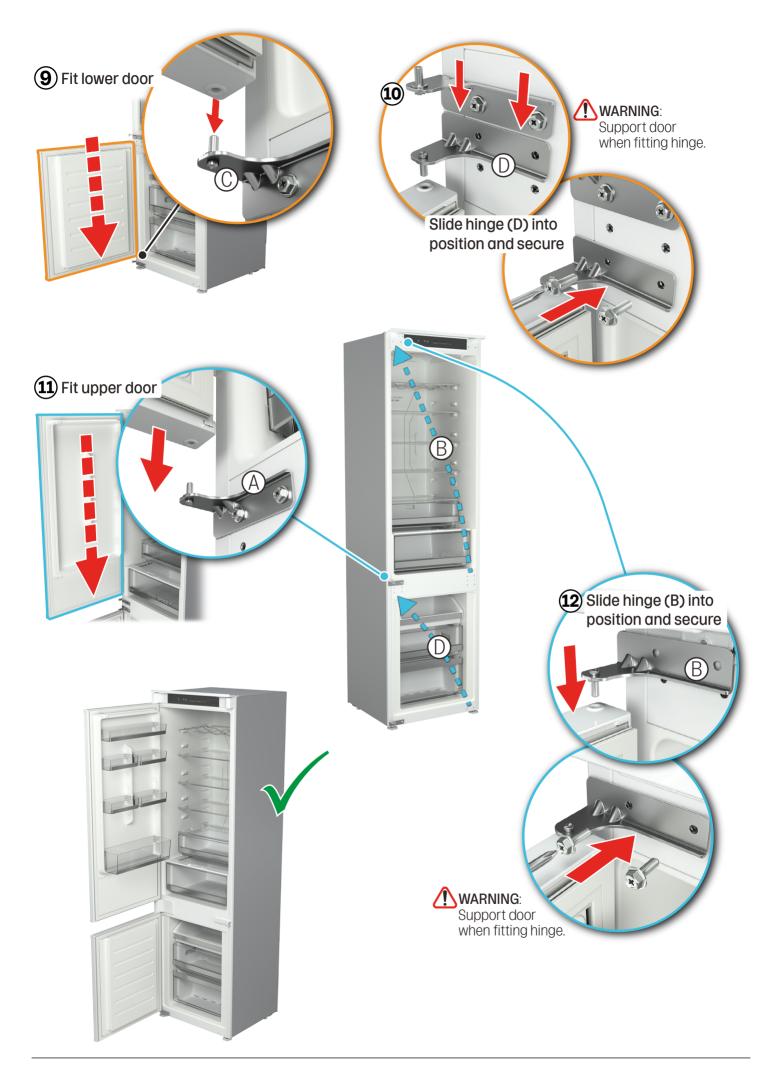







Product information correct at the time of publication in November 2023. The company has a policy of continuous product development and reserves the right to change any products and specifications given in this manual. Subject to the Terms and Conditions of Trading, a copy of the Howdens Terms and Conditions is available upon request. Copyright © 2023 Howden Joinery Ltd. All rights reserved.

\_ \_ \_

Howden Joinery Ltd. Thorpe Road, Howden, East Yorkshire. DN14 7PA England Howdens Cuisines SAS. Z.A. du Bois Rigault Nord, 1 Rue Calmette, 62880 Vendin-le-Vieil, Cedex, France