


TAP3542 & TAP3541-1 – Adra Tap

Key:	Description:	APX size (mm):	Base material	Colour:	QTY:
A1	Aerator housing	M22 F	Brass	Brushed	1
A2	Aerator	M22	Plastic	Blue/Grey	1
A3	Rubber gasket	21 OD	Rubber	Black	1
A4	Spout	260 x 190	Brass	Brushed	1
A5	Spout locking collar	14 x 32	Brass	Brushed	1
A6	Anti friction split ring	3 x 23 OD	Plastic	White	1
A7	O-ring	3 x 23 OD	Rubber	Black	1
A8	O-ring	3 x 23 OD	Rubber	Black	1
B1	Tap body	74 x 92	Brass	Brushed	1
B2	Upper seal	43 x 2.75	Rubber	Black	1
C1	Hot valve	½" CD, length 54mm	Brass	Brass	1
C2	Hot handle	102 x 37	Zamak	Brushed	1
C3	Grub screw	6 x 4	Steel	Steel	1
D1	Cold valve	½" CD, length 54mm	Brass	Brass	1
D2	Cold handle	102 x 37	Zamak	Brushed	1
D3	Grub screw	6 x 4	Steel	Steel	1
E1	Fixing stud	95 x M8	Steel	Silver	1
E2	Fixing washer	45 OD	Rubber	Black	1
E3	Metal horseshoe	51 x 5	Steel	Silver	1
E4	Fixing nut	15 x 11 AF	Brass	Brass	1
F1	Hot flexi tail pipe	½" BSP female x M12 x 255mm	Rubber/Brass/Inox	Silver/Red	1
F2	Cold flexi tail pipe	½" BSP female x M12 x 255mm	Rubber/Brass/Inox	Silver/Blue	1

TAP3542 & TAP3541-1 – Adra Tap

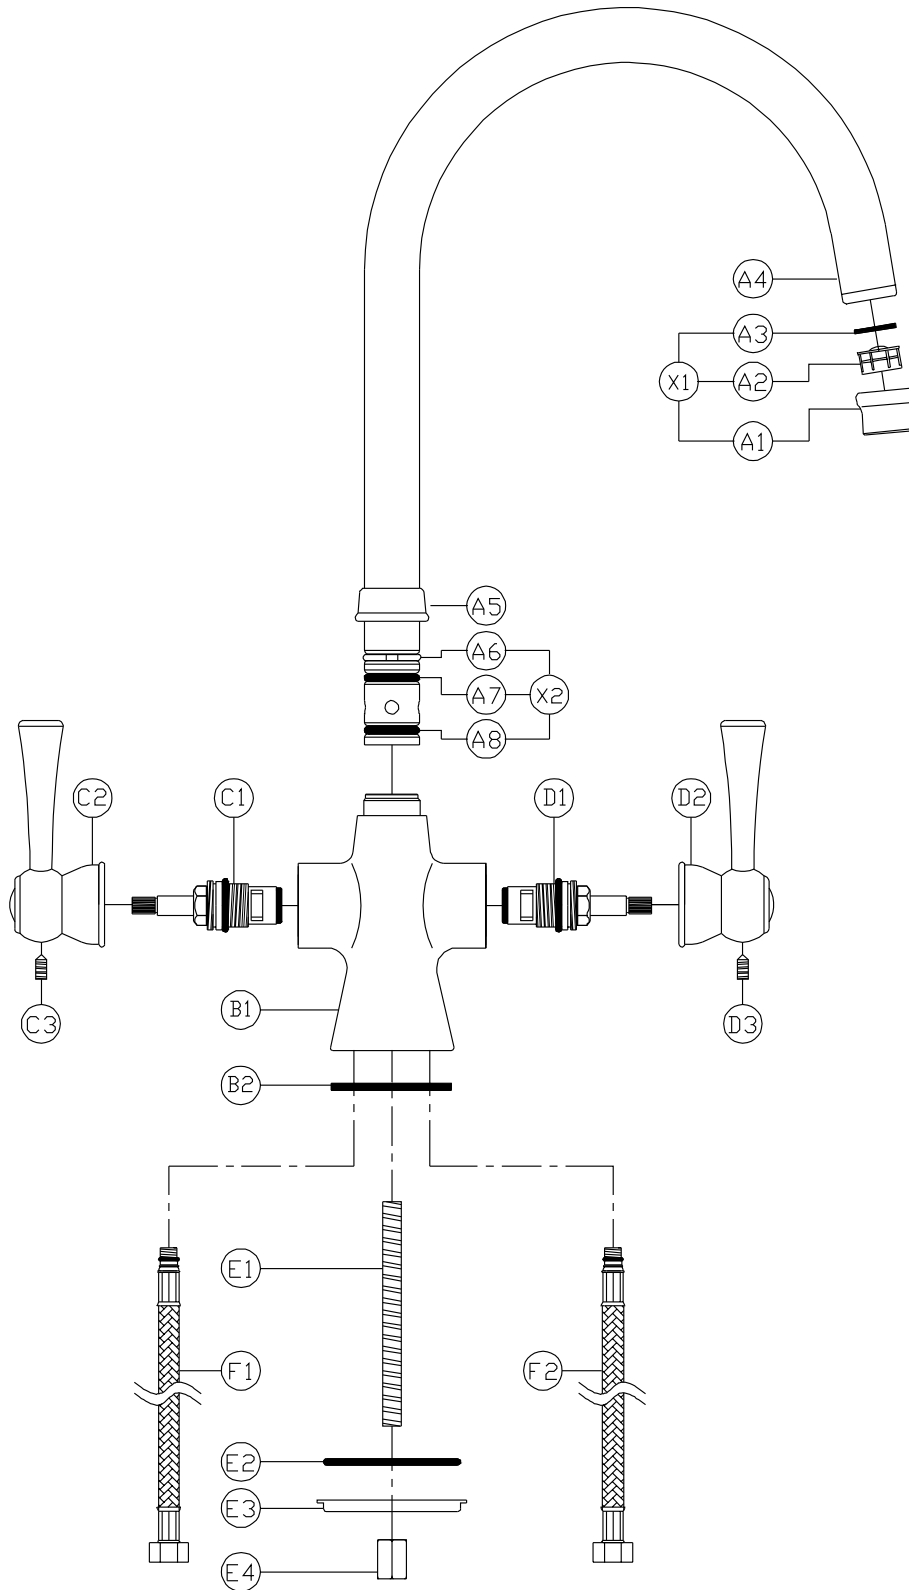

LAMONA
Exclusive to Howdens Joinery Co.

TAP3542/3541-1 Adra Mixer Tap service drawing v2

(c) abode home products ltd
www.abode.eu

our policy is to continually
improve and develop products,
and accordingly we reserve the
right to amend specifications
without prior notice

TAP3542 & TAP3541-1 – Adra Tap

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the cold valve:

1. Loosen grub screw (D3) on the underside of handle (D2) using a 2.0mm A/F allen key.
2. Pull handle (D2) horizontally away from the body (B1).
3. Using a socket unscrew valve (D1) anticlockwise.
4. Replace the faulty valve (D1) with the new one and assemble in reverse order.

To replace the spout o-rings:

1. Whilst holding body (B1) unscrew the spout locking collar (A5)
2. Pull the spout (A4) vertically away from the body (B1).
3. Remove the old o-rings (A7 & A8) using a small screwdriver or similar.
4. If worn, remove the white PTFE spacer (A6).
5. Ensure the inside of the body (B1) and the spout base (A4) is clean of dirt and grit with a soft wet cloth.
6. If required locate the new white PTFE spacer (A6).
7. Carefully locate the new O-rings (A7 & A8) onto the spout base (A4).
8. Grease the O-rings (A7 & A8) thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.